



## Installation Instructions

### *Tire Deflators*

### *Part # 2723*

Carefully read entire instructions thoroughly before using this product.

**NOTE:**

- Remove deflators after deflation.
- DO NOT leave attached to valve stem.
- Keep deflators clean and dry.
- Do not interchange components.



**STEP 1:** Deflate a spare/extra tire to your preferred deflation pressure.

**STEP 2:** With the lock ring and adjusting cap wound down, screw your deflator on the valve stem. (Be sure to make sure the threads are clean and in good condition)

**STEP 3:** Loosen cap (counter-clockwise) until deflator pops open, then immediately Tighten cap to the position where the air stops exhausting.

**STEP 4:** Turn lock ring up to adjust cap and tighten.

**STEP 5:** Installation is now complete and set to your preferred deflation pressure.

**NOTE:** Adjustments to your deflators can be made at the rate of 3psi per half turn of the adjusting cap. When the tire pressure and the deflator setting within 8psi, a manual start may be required by fitting the deflator then lifting the center pin to start operation.

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 West Artesia Blvd, Compton, CA 90220