



JEEP- JK (2007 - 2011) SUPERCHARGED
INTERCOOLER UPGRADE KIT
264D1001



INSTALLATION INSTRUCTIONS

System Serial # _____

Table of Contents

INTELLECTUAL PROPERTY USED IN THIS PUBLICATION	- 4 -
IMPORTANT INFORMATION	- 5 -
SAFETY WARNING	- 5 -
CHANGES TO FACTORY SPECIFICATIONS	- 6 -
RECORD OF AMENDMENTS	- 7 -
TOOLS AND CONSUMABLES REQUIRED TO COMPLETE INSTALLATION	- 7 -
PARTS SUPPLIED	- 8 -
DISASSEMBLY INSTRUCTIONS	- 10 -
PREPARATION	- 11 -
1. DISCONNECT BATTERY	- 13 -
2. REMOVE RIGHT SIDE INNER WHEEL WELL (LHD VEHICLES)- OPTIONAL	- 13 -
3. REMOVE FACTORY AIR INLET HOSE	- 13 -
4. REMOVE PLASTIC AIR INLET PIPE	- 14 -
5. REMOVE DISCHARGE DUCT (NON-INTERCOOLED)	- 14 -
6. REMOVE THE EXISTING EGR PIPE	- 14 -
7. REMOVE DRIVE BELT	- 15 -
8. REMOVE AIR BOX	- 15 -
9. REMOVE THE FRONT GRILLE	- 16 -
10. MODIFY PLASTIC PANEL	- 17 -
INSTALLATION INSTRUCTIONS	- 18 -
1. SWAP THE SUPERCHARGER PULLEY	- 19 -
2. FIT THE NEW DRIVE BELT	- 21 -
3. FIT THE WATER PUMP MOUNT BRACKET	- 21 -
4. ATTACH THE WATER PUMP WIRING HARNESS	- 22 -
5. POSITION THE EGR PIPE (INTERCOOLED KIT SPECIFIC)	- 22 -
6. FIT THE EGR SEAL/GASKET TO THE INTERCOOLER MANIFOLD	- 23 -
7. INSTALLING THE INTERCOOLER MANIFOLD	- 23 -

8.	TIGHTEN THE EGR PIPE TO THE INTERCOOLER MANIFOLD _____	- 25 -
9.	FIT THE INTERCOOLER RADIATOR _____	- 26 -
10.	CONNECT HOSES _____	- 27 -
11.	FIT THE FACTORY AIR BOX _____	- 28 -
12.	FIT THE AIR INLET PIPE AND THE FACTORY AIR INLET HOSE _____	- 29 -
13.	FIT THE FRONT GRILLE _____	- 29 -
14.	RECONNECT THE BATTERY _____	- 30 -
15.	ECU REFLASHING _____	- 30 -
PRE TEST- DRIVE INSPECTION _____		- 31 -
1.	PRE-START INSPECTION _____	- 32 -
2.	ENGINE WARM UP _____	- 32 -
3.	ROAD TEST VEHICLE _____	- 32 -
MAINTENANCE INSTRUCTIONS _____		- 33 -
1.	SUPERCHARGER DRIVE BELT REPLACEMENT _____	- 34 -
2.	SUPERCHARGER LUBRICATION SERVICE _____	- 35 -
3.	SUPERCHARGER SERVICE _____	- 35 -

Intellectual Property used in this Publication

This document is copyright of **Sprintex Ltd**, a company incorporated in Australia. This document may not be re-sold, copied or distributed in any way without prior written authorisation of Sprintex Ltd.

Copyrights / Trademarks:

Sprintex® is a registered trademark of Sprintex Limited, an Australian company ACN: 106 337 599 ("Sprintex"). Sprintex has patents for its superchargers. Any unauthorised copying or modification of the system may result in legal action.

Loctite® and Grey Maxx® are registered trademarks of Henkel KGaA, a company incorporated in Germany. Other than commercial supply arrangements, Henkel KGaA does not have any association with Sprintex.

RedLine® is a registered trademark of RedLine Synthetic Oil Corporation, a company incorporated in the United States of America. Other than commercial supply arrangements, Redline and RedLine Synthetic Oil Corporation do not have any association with Sprintex.

Jeep, Jeep - JK, Jeep & Wrangler are registered trademarks of Chrysler Group LLC, a company headquartered in Auburn Hills, MI, USA (<http://www.chryslergroupllc.com>)

SAE is a trademark of SAE International (www.sae.org), global technology information and standards setting resource organisation for the design, manufacturing, operation, and maintenance industry.

Gates is a registered trademark of the Gates Rubber Company, a subsidiary of Tomkins PLC, incorporated in London, United Kingdom. Other than commercial supply arrangements, Gates and Tomkins PLC do not have any association with Sprintex Limited.

IMPORTANT INFORMATION

PRODUCT WARNING

Installation of the Sprintex Supercharger Intercooler Upgrade kit to a Jeep- JK vehicle may void all or parts of the Jeep Warranty. Customers should consult their Jeep dealer for details.

Sprintex makes no representation that installation and use of the Sprintex supercharger system (or the intercooler) is legal for public road use worldwide. Customers should check that the installation and use of the Sprintex supercharger system on their vehicle is legal by contacting the relevant statutory authority in their jurisdiction prior to use on roads.

Sprintex supports safe driving. Always remember to observe all speed limits and road rules relevant to the state, city or other local jurisdiction.

Provided in this installation manual are detailed instructions to the installer on how to install the Sprintex patent pending supercharger intercooler upgrade kit to the Jeep- JK vehicle. These instructions apply to vehicles that are already fitted with a Sprintex supercharger kit. The instructions are aimed at being simple yet informative, and are aided with well-presented pictures to make installations as simple, fast and problem free as possible. **Please read the entire instruction manual prior to beginning the installation procedure.** Pictures and descriptions may vary slightly from model to model.

It is recommended that all wiring harness connectors and vacuum hoses are labelled at the time of removal for easy and correct refitting. Some components that are removed and are to be refitted are fragile and should be stored safely to prevent damage to these components.

Sprintex will not be liable for any loss, damage, payment, costs, expenses or other liability not expressly stated in this document. In particular, Sprintex shall not be liable to any person for any consequential, indirect or economic loss or punitive or exemplary damages of any kind.

Sprintex reserves the right to change specifications from time to time and will not be liable to any person for doing so. Sprintex believes that the information in this document is correct at time of print. Sprintex limits its liability to the maximum extent permissible at law with regard to the reliance which any person places on anything in this document.

THIS SPRINTEX SUPERCHARGER INTERCOOLER UPGRADE INSTALLATION REQUIRES THAT THE VEHICLE IS EQUIPPED WITH AN APPROVED ECU AND ECU CALIBRATION. FAILURE TO ENSURE THIS WILL AFFECT THE PERFORMANCE AND MAY VOID WARRANTY. CONTACT YOUR RESELLER TO CONFIRM IF NECESSARY.

SAFETY WARNING

No unauthorised service or alteration may be undertaken to the Sprintex supercharger or related parts. Installation should be carried out in a workshop which is a safe and ventilated working environment with equipment and procedures compliant with local authority guidelines and legal requirements. Installers should ensure adequate hearing, eye and other appropriate personal protective equipment is used at all times during the installation process. Installers should take reasonable precautions to avoid fatigue and closely follow the installation instructions during every installation. Sprintex recommends installation should not be carried out unsupervised. Sprintex, its directors, employees and agents will not accept liability for damage accident or injury resulting from the installation process. Safety warnings are also provided throughout this document.

CHANGES TO FACTORY SPECIFICATIONS

FUEL: MINIMUM 95 RON (91 Octane USA) PREMIUM UNLEADED GASOLINE/FUEL TO BE USED AT ALL TIMES. NEVER ALLOW THE ENGINE TO KNOCK OR DETONATE AS SERIOUS ENGINE DAMAGE MAY OCCUR.

REQUIRED SERVICE: (SEE MAINTENANCE SECTION OF MANUAL)

1. INSPECT THE SUPERCHARGER DRIVE BELT AT EVERY ROUTINE SERVICE AND REPLACE IF REQUIRED.
1. DRAIN & REPLACE SUPERCHARGER OIL EVERY 40,000 km (25,000 miles) or 2 YEARS (whichever is earlier).
 - USE 112ml (3.79 US fluid ounces) of REDLINE 75W/90NS HIGH PERFORMANCE GEAR OIL or EQUIVALENT.
 - CHECK THE OIL LEVEL IN THE SIGHT GLASS OF THE SUPERCHARGER (IF EQUIPPED).
2. OIL LEVEL SHOULD BE CHECKED WITH THE DIPSTICK OR LEVEL PLUG (WHICH EVER THE UNIT IS EQUIPPED WITH) PERIODICALLY (RECOMMENDED EVERY WEEK AND ALSO BEFORE & AFTER A LONG JOURNEY).

NOTE:

MANY OF THE PHOTOS SHOWN IN THIS DOCUMENT ARE OF A TYPICAL JEEP- JK RIGHT HAND DRIVE VEHICLE AND ARE SIMILAR TO A TYPICAL JEEP- JK LEFT HAND DRIVE VEHICLE

NOTE:

SOME OF THE TERMINOLOGY AND LANGUAGE USED IN THIS INSTRUCTION MAY VARY FROM THAT OF THE END USER / INSTALLER'S EXPECTATIONS, AS SOME TOOLS AND AUTOMOTIVE COMPONENTS HAVE DIFFERENT COMMON NAMES IN DIFFERENT GEOGRAPHICAL LOCATIONS


Record of Amendments

No.	Revision	Action	Date	Completed by	Approved by
1	1.00	New installation manual document created for intercooler upgrade kit.	11/08/2014	DEEPAK	JAY UPTON
2	1.01	Picture of parts supplied updated on page-8	22/08/2014	DEEPAK	JAY UPTON
3	1.02	Consumables list updated on page-7. Recommended minimum fuel spec. changed from 98RON to 95RON. Drive belt specification updated.	22/09/2014	DEEPAK	JAY UPTON

Tools and Consumables Required to Complete Installation

Metric Wrenches and Socket Sets	Various Pliers and Side Cutters (Dykes)	Metric Allen Keys
Flat and Philips Screwdrivers	Loctite 518 / 5188 sealant	3/8" Breaker Bar
3/8" or 1/4" Universal Joint	Loctite 577 thread locker	Electrical Tape
Rubber grease		

PARTS SUPPLIED

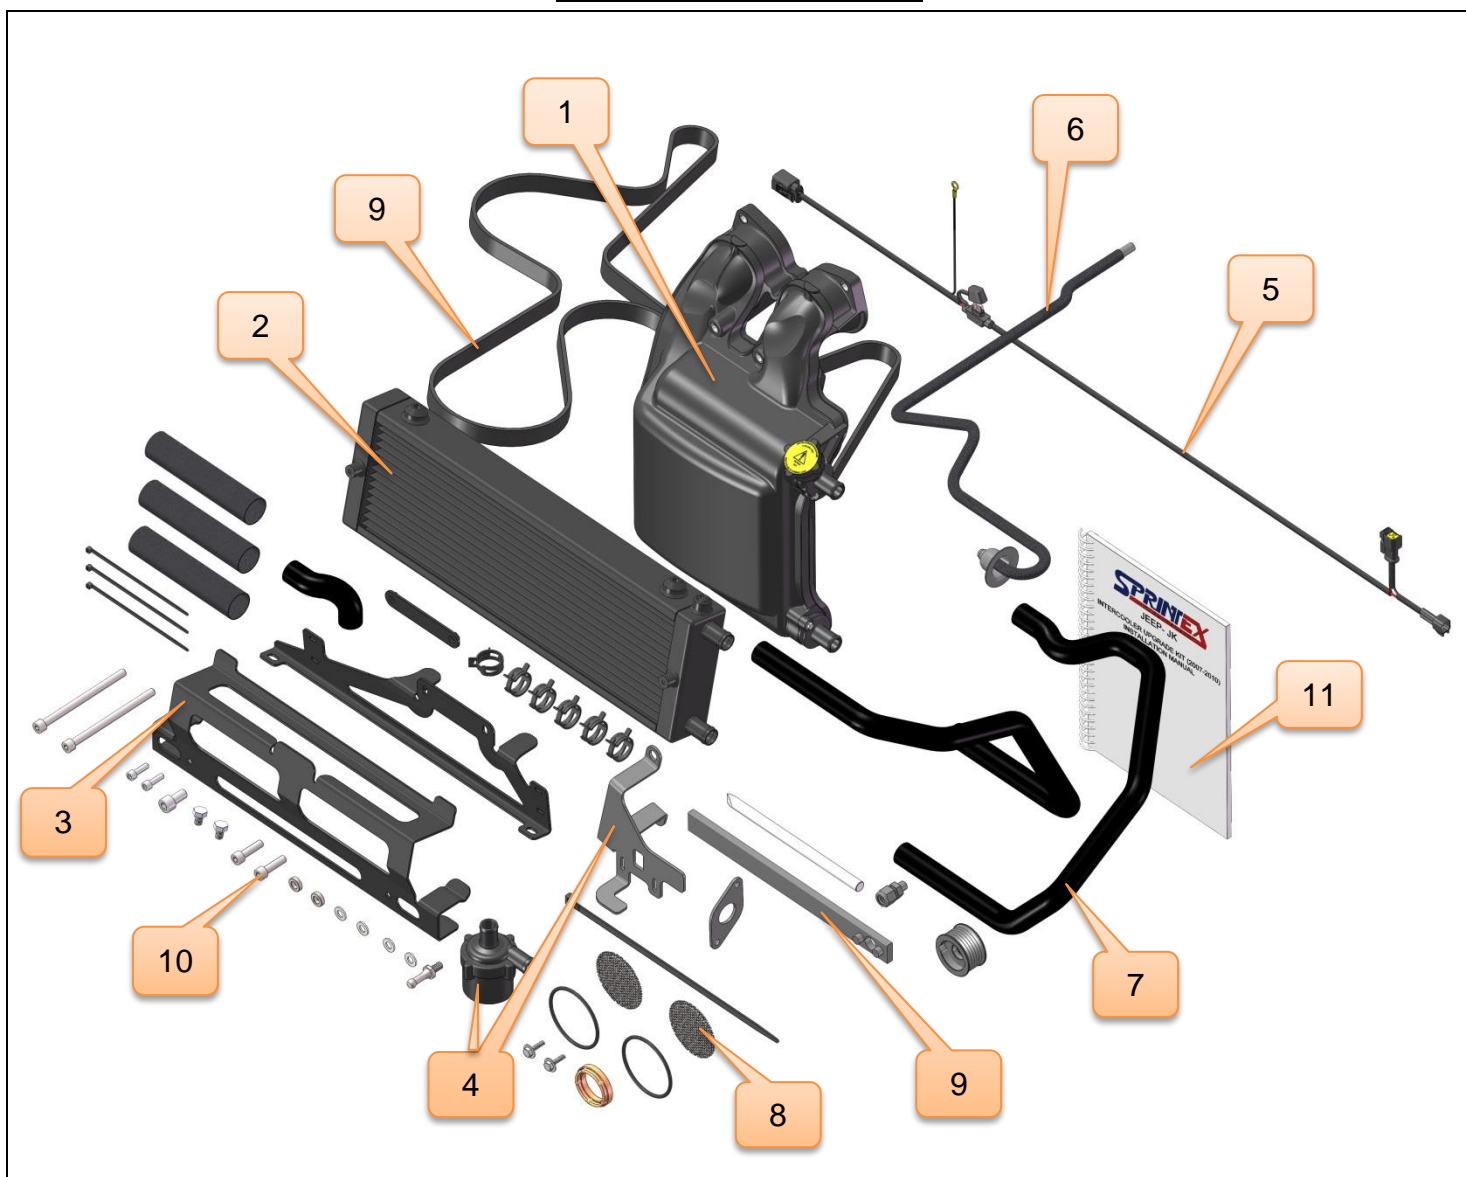

1. Sprintex® Laminova® Intercooler Manifold Assembly
2. Intercooler radiator
3. Radiator mount brackets
4. Water pump & mounting bracket
5. Water pump wiring harness

6. EGR pipe assembly (Intercooled system specific)
7. Intercooler hoses & hose clamps
8. Silencing plates
9. Drive belt, Supercharger pulley, pulley holding tool, rotor stopper.
10. Assorted screws, washers and ancillary parts
11. Installation manual (Intercooler upgrade kit)



JEEP- JK (2007 - 2011) SUPERCHARGED **INTERCOOLER UPGRADE KIT**

SECTION 1

DISASSEMBLY INSTRUCTIONS

SAFETY WARNING

No unauthorised service or alteration may be undertaken to the Sprintex supercharger. Installation should be carried out in a workshop which is a safe and ventilated working environment with equipment and procedures compliant with local authority guidelines and legal requirements. Installers should ensure adequate hearing, eye, and physical protection is used at all times during the installation process. Installers should take reasonable precautions to avoid fatigue and closely follow the installation instructions during every installation. Sprintex recommends installation should not be carried out unsupervised. Sprintex, its directors, employees and agents will not accept liability for damage accident or injury resulting from the installation process. Safety warnings are also provided throughout this document.

Preparation

Ensure that all components required to assemble the supercharger are available. Refer to the Parts Supplied section provided earlier.

Ensure that all required tools are available.

Please read the entire instruction manual prior to beginning the installation procedure.

Ensure the vehicle is located in a secure position with the vehicle tyres secured and the handbrake applied. To avoid injury, Sprintex® recommends use of a suitable vehicle lift or axle stands when the vehicle is required to be lifted for access to. Stands should be positioned as per the vehicle Manufacturers Owners Handbook.

SAFETY WARNING: Use Personal Protective Equipment such as safety glasses, gloves, etc. at all times and as necessary.

SAFETY WARNING: Allow engine to cool prior to proceeding with disassembly to prevent scalding.

Note: During disassembly and removal of components, take notes and ensure to label and store them safely. This will help with the reassembly process.

Note: Many of the photos shown in this document are of a typical Jeep- JK right hand drive vehicle and are similar to a typical Jeep- JK left hand drive vehicle.



Left hand drive vehicle



Right hand drive vehicle

Caution:

Connect and disconnect battery cables, jumper cables or battery chargers only with the ignition switched off

Warning:

Disconnecting the battery may erase fault codes stored in the control module memory. Using diagnostic equipment to check for fault codes before disconnecting the battery cables. If the malfunction indicator light (MIL) is illuminated.

MIL (Malfunction Indicator Lamp)

The MIL can be found in one of two locations, dependant on the market the vehicle has been built for.

1. The MIL may be an illuminated **ENGINE** symbol within the speedometer cluster.
2. The MIL may be displayed as **SERVICE ENGINE SOON** within the tachometer.


Please refer to the **OWNERS HANDBOOK** to define which of the above applies to the vehicle to be fitted with the Sprintex unit.

Note:

Always disconnect the negative battery terminal prior to disconnection the positive battery terminal. This prevents possible shorting and potential battery damage.

1. Disconnect Battery

- First disconnect the negative (-) battery cable.
- Lift the positive (+) terminal plastic cover, then disconnect the positive (+) cable.

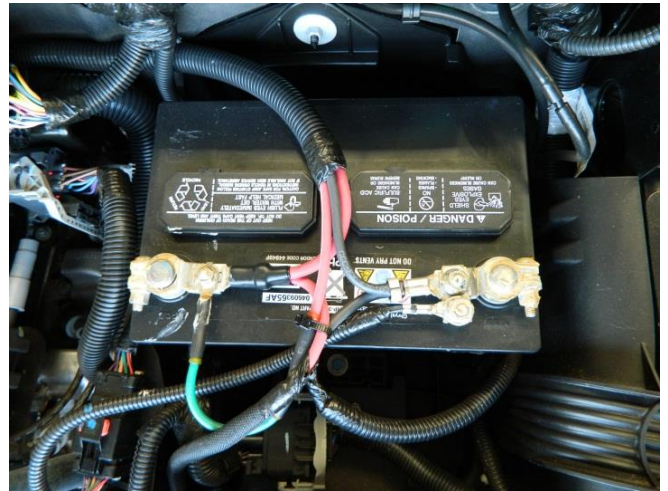

2. Remove right side inner wheel well (LHD vehicles)- OPTIONAL

- To assist access to EGR valve it may be beneficial to remove the passenger (right) side wheel and inner wheel well, **(LHD VEHICLES ONLY)** this step is not necessary but does make fitting components easier.



3. Remove factory air inlet hose

- Unplug the IAT sensor & remove air inlet hose from the factory air box by loosening the hose clamps.

Unplug IAT
sensor



4. Remove plastic air inlet pipe

- Disconnect breather hose and remove the plastic inlet pipe from the supercharger manifold.

Breather
hose

Discharge
duct



5. Remove discharge duct (Non-intercooled)

- Loosen the compression fitting on the EGR pipe from the discharge duct.
- Remove discharge duct by loosening the four M8 socket head screws and store in a safe location. These will not be used in the intercooler upgrade kit.
- Seal the manifold openings with sealing tape to prevent dirt ingress.

Compression
fitting



6. Remove the existing EGR pipe


- Loosen the rear EGR fitting from the EGR adaptor plate.
- Remove EGR pipe from the EGR adaptor plate and store in a safe location. This will not be used in the intercooler upgrade kit.

EGR adaptor
plate




7. Remove drive belt

- Use long series 3/8" breaker bar to release the dynamic tensioner and remove the belt and store in a safe location. This will not be used in the intercooler upgrade kit.

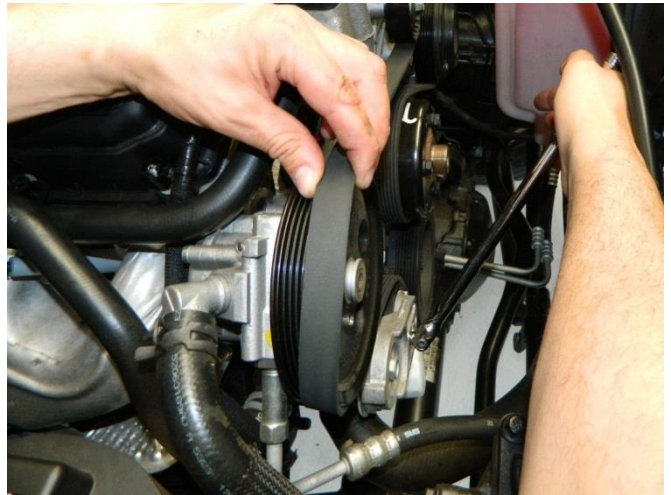

8. Remove air box

- Remove the factory air box and store in a safe location.

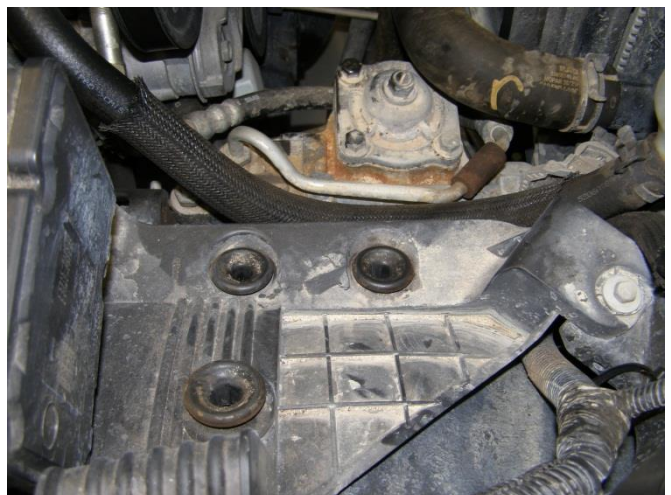

9. Remove the front grille

- Use a pry tool or a flat blade screw driver to pull out the push pin rivets on the top side of the front grille
- Carefully loosen the clips on the bottom side of the front grille
- Disconnect the plugs (2x) from the turn signal lamps located behind the front grille
- Remove the front grille and store in a safe location



Disconnect
plugs (2x)



10. Modify plastic panel

- Make a cut out (40mm wide x 40mm high), 2 places in the LHS plastic panel next to the factory radiator. This will allow the radiator hoses to pass through when the intercooler radiator is installed.



JEEP- JK (2007 - 2011) SUPERCHARGED **INTERCOOLER UPGRADE KIT**

SECTION 2

INSTALLATION INSTRUCTIONS

SAFETY WARNING


No unauthorised service or alteration may be undertaken to the Sprintex supercharger. Installation should be carried out in a workshop which is a safe and ventilated working environment with equipment and procedures compliant with local authority guidelines and legal requirements. Installers should ensure adequate hearing, eye and physical protection is used at all times during the installation process. Installers should take reasonable precautions to avoid fatigue and closely follow the installation instructions during every installation. Sprintex recommends installation should not be carried out unsupervised. Sprintex, its directors, employees and agents will not accept liability for damage accident or injury resulting from the installation process. Safety warnings are also provided throughout this document.

INTERCOOLER SYSTEM INSTALLATION


1. Swap the Supercharger pulley

NOTE:


1. Do not apply more than 10Nm of tightening or loosening torque to the pulley mount screw while the plastic rod (rotor stopper) supplied is in the supercharger, as this may disturb the rotor alignment.
2. Take care to avoid dirt ingress into the supercharger.

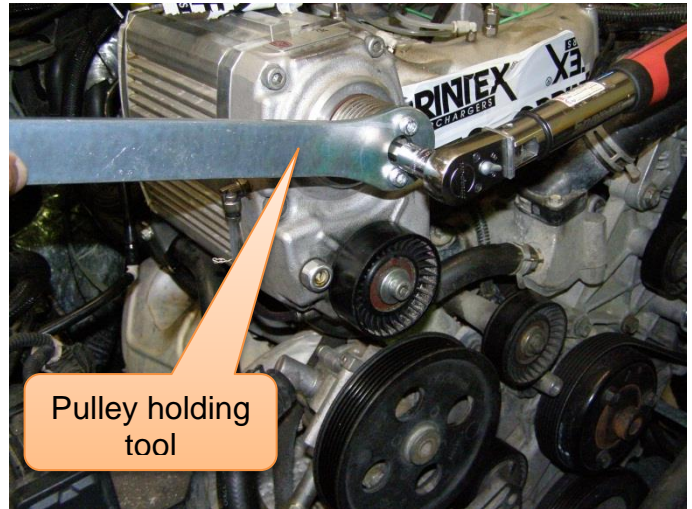

- Loosen the SHCS retaining the supercharger pulley. Use the pulley holding tool supplied while loosening the screw.
- **OPTIONAL-** Place the supplied plastic rod (rotor stopper) into the supercharger discharge side as per the picture stopping the rotors from spinning whilst removing the SHCS from the pulley because of Loctite on the screw threads.

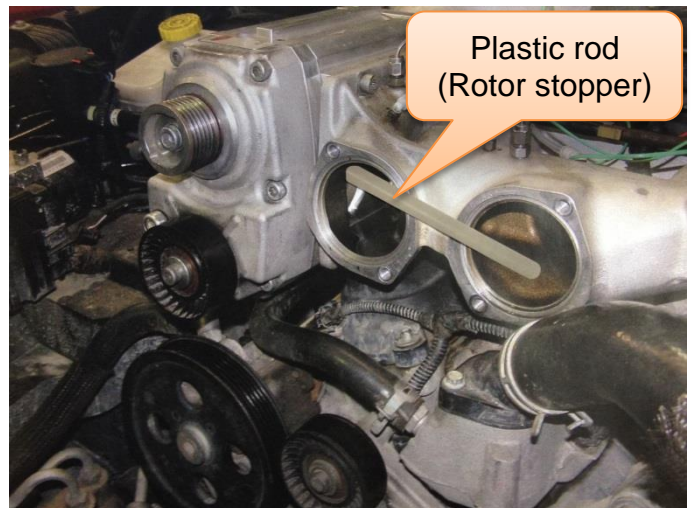

- Place the wedge (provided on one end of the rotor stopper) between the Supercharger and the pulley. Lightly tap on the wedge with a soft or rubber mallet. Rotate the pulley and repeat the process until the pulley comes off. Try not to remove the seal journal from the supercharger.
- Clean Loctite residue from the pulley screw and inside the threaded hole

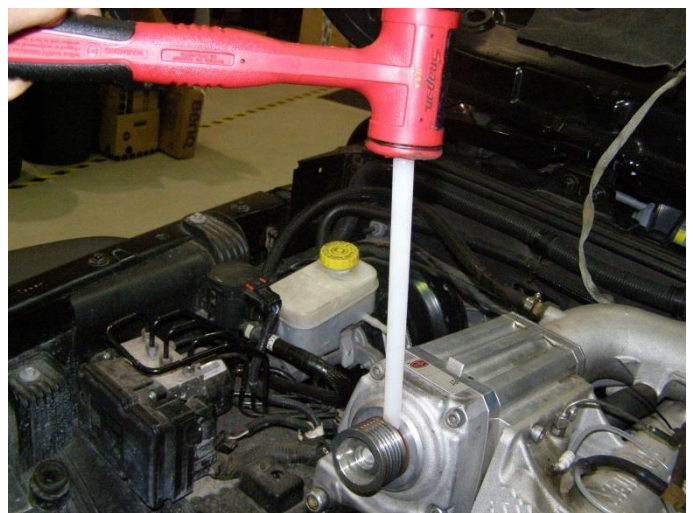


- Thoroughly clean Loctite residue from the seal journal.




Seal journal

- If the seal journal is removed accidentally from the supercharger, apply a layer of high temperature lubrication grease in between the lips of the lipseal. Insert the seal journal into the lipseal locating the spigot on the supercharger drive system.

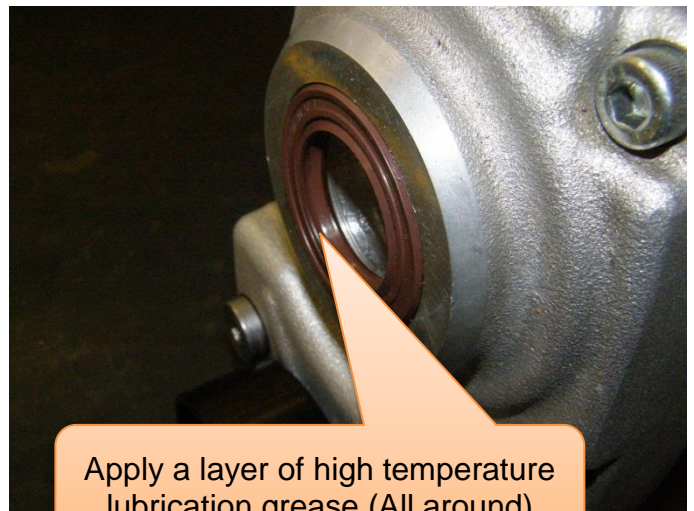

Apply a layer of high temperature lubrication grease (All around)

- Apply a thin layer of Loctite 518 / 5188 or equivalent on the spigot of the new pulley
- Install the new **Ø47mm** pulley supplied. Apply Loctite 518 / 5188 or equivalent to threads upon assembly. Tighten the pulley to 75Nm using the pulley holding tool supplied. While replacing the pulley, do not disturb or remove the seal journal (spacer) or lipseal from the supercharger.

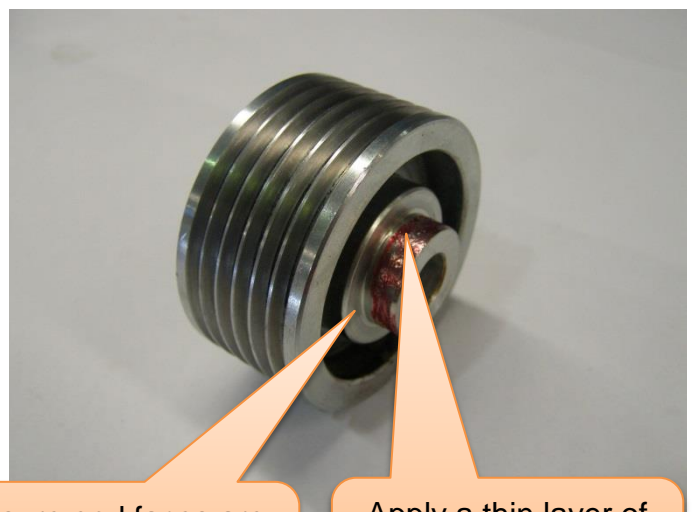


Ensure end faces are kept free of Sealant, grease or oil

Apply a thin layer of Loctite 518 / 5188 (All around)

2. Fit the new drive belt

- Fit the new supplied **6PK2666 (GATES No.K061049)** Micro-V drive belt.

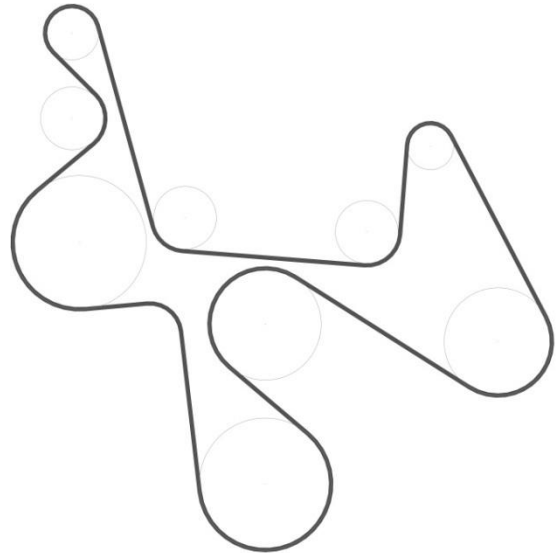


3. Fit the water pump mount bracket

- Attach the water pump to the bracket using the cable- tie supplied, as shown in the picture below.
- Remove the marked bolt from the engine.
- Fit the water pump mount bracket to the engine using the previously removed bolt and the supplied SHCS M10 x 20.




Remove
bolt

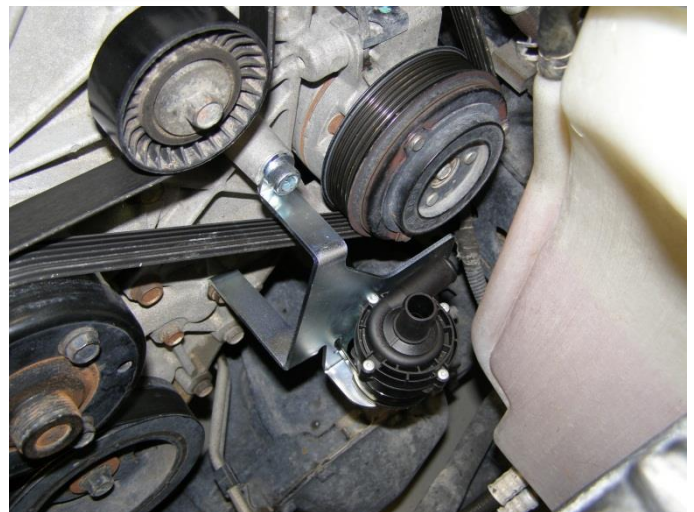

4. Attach the water pump wiring harness

- Connect the water pump loom using the male & female connectors supplied, to one of the fuel injector connectors to provide switched 12V supply for the pump.
- Connect the other end of the wiring harness to the water pump.
- Connect the earth point as shown in the picture.
- Secure the wiring harness using cable-ties supplied (3x) to avoid chafing on the moving parts.

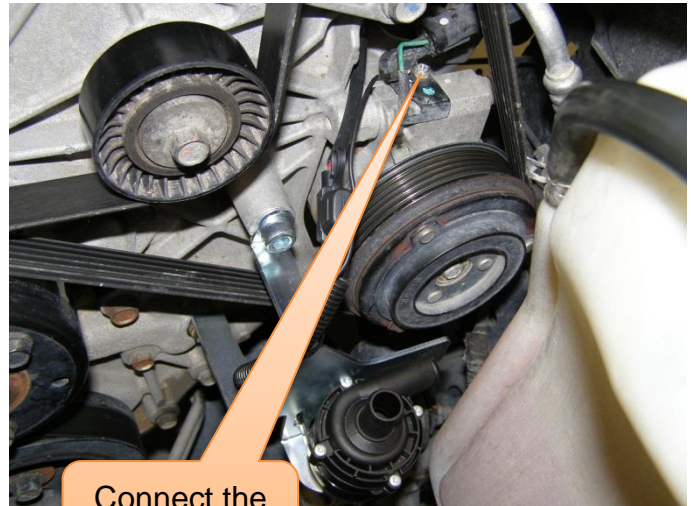


Connect the earth point



Connect the plug & play connectors to the fuel injector for 12V switched supply

5. Position the EGR pipe (Intercooled kit specific)

- Insert the EGR shield holder plate supplied. Ensure the braided sleeve is assembled to the EGR pipe
- Position the EGR using the new compression fitting (Olive & nut), to the EGR adaptor plate, so that it can be accessed after the manifold is in place. Do not tighten the compression fitting at this stage.

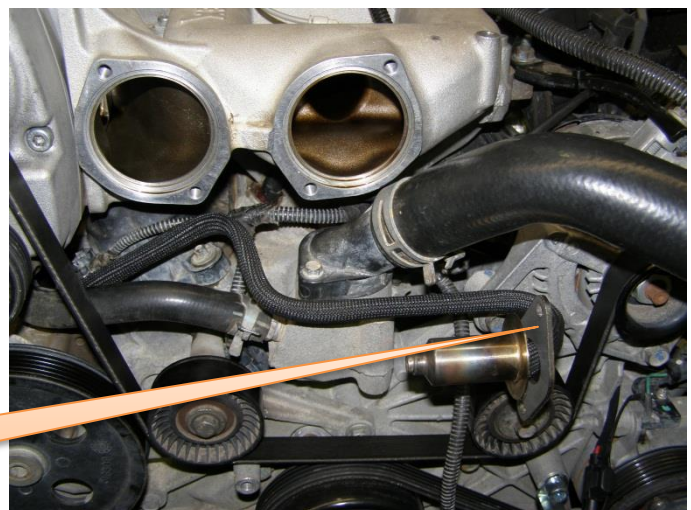

EGR shield holder plate


Connect the other pipe end to the compression fitting. Do not tighten at this stage



6. Fit the EGR seal/gasket to the Intercooler manifold

- Fit the gasket supplied to the intercooler manifold.

EGR seal

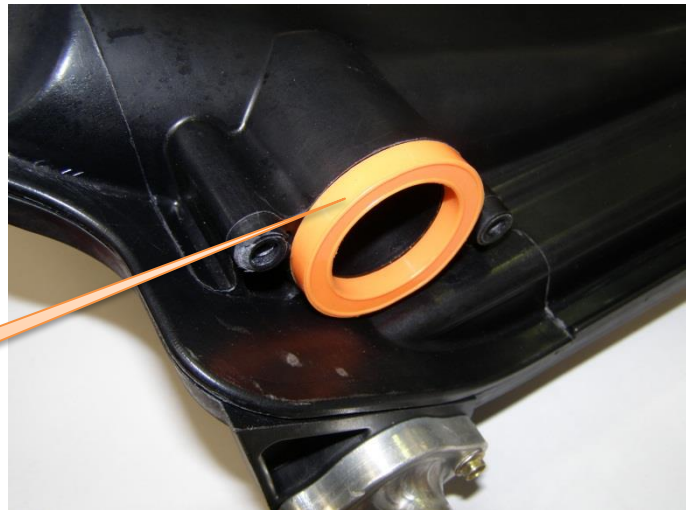


7. Installing the Intercooler manifold


- Install the Ball stud supplied to the idler bracket as shown in the picture



Install ball stud

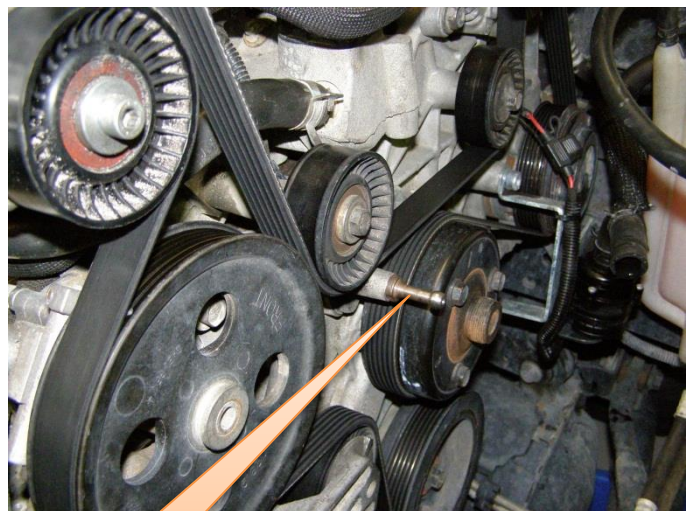

- Clean the discharge outlet holes of the manifold.
- Place the two silencing plates supplied, into the manifold using a thin layer of grease to keep the plates in position.

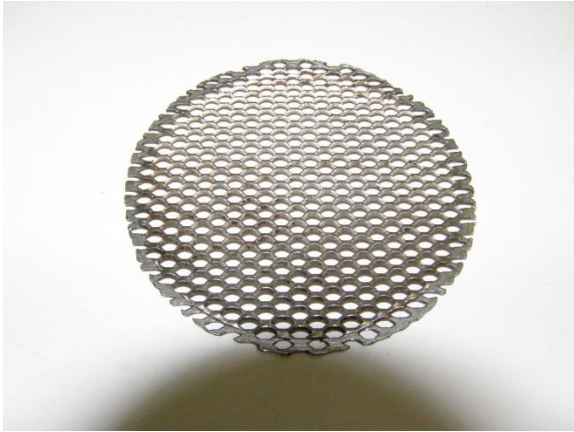

- Fit the two O-rings supplied to the intercooler manifold. Apply a thin layer of rubber grease to the O-Rings for ease of fitting.



- Slide the intercooler manifold into place sideways, engaging the EGR pipe with the gasket
- Locate the rubber grommet in the intercooler manifold to the ball stud. Carefully install into the discharge manifold. Take care not to damage the O-Rings upon installation. Fit the intercooler manifold using the supplied SHCS M8 x 30 (2x) with M8 flat washers (2x) and SHCS M8 x 120 (2x) with 5mm thick flat washers (2x). Tighten screws to 23Nm.



Use 5mm thick flat washers



8. Tighten the EGR pipe to the Intercooler manifold

- Centralise the EGR shield to the EGR seal and clamp it to the manifold, using the clamp plate and self-tapping screws supplied. Tighten to 6Nm.


NOTE: Ensure the EGR shield and the EGR pipe is not touching the plastic intercooler manifold.



Tighten screws (2x)




- Tighten the compression fitting on the EGR adaptor plate.


EGR adaptor plate

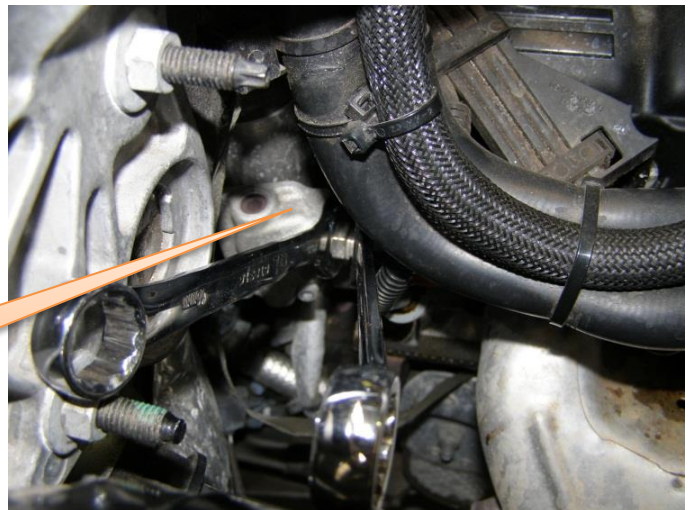

9. Fit the intercooler radiator


- Connect the radiator hoses (2x) to the radiator and fasten using the spring clamps supplied. Refer picture for the hoses orientation.
- Locate the bottom bracket to the vehicle's frame aligning the slots as shown in the picture.
- Locate the intercooler radiator to the bottom bracket.
- Fit the top bracket to the intercooler radiator using the supplied Hex head bolt M8 x 12 (2x) with M8 flat washers.
- Tighten the top bracket of the intercooler radiator to the frame as shown in the pictures using the supplied SHCS M6 x 20 (2x) and radiator mount nut plate. Ensure the assembly is securely mounted and that adequate clearance remains between the air-con condenser and intercooler radiator.
- Align the radiator on the brackets and tighten all fasteners.

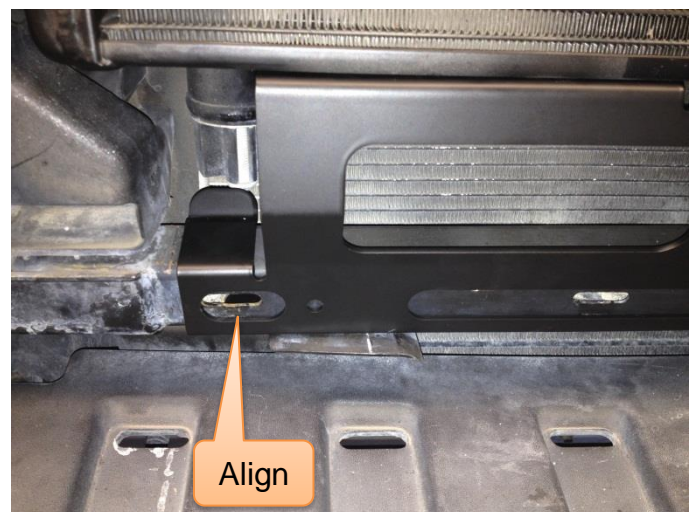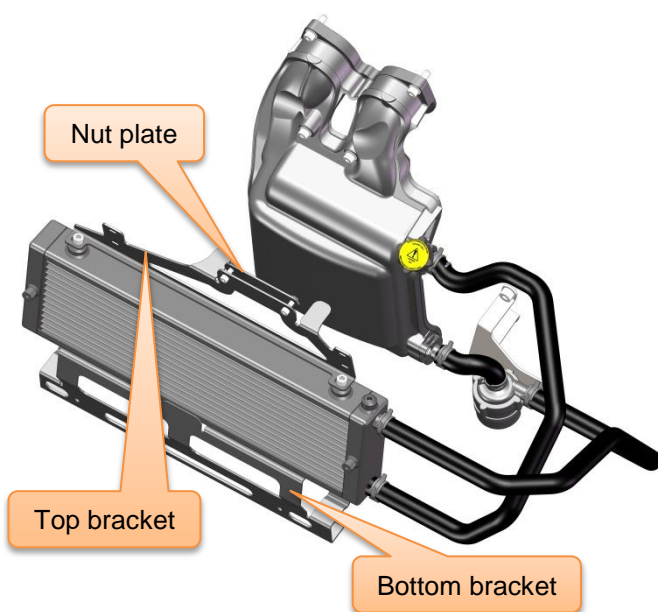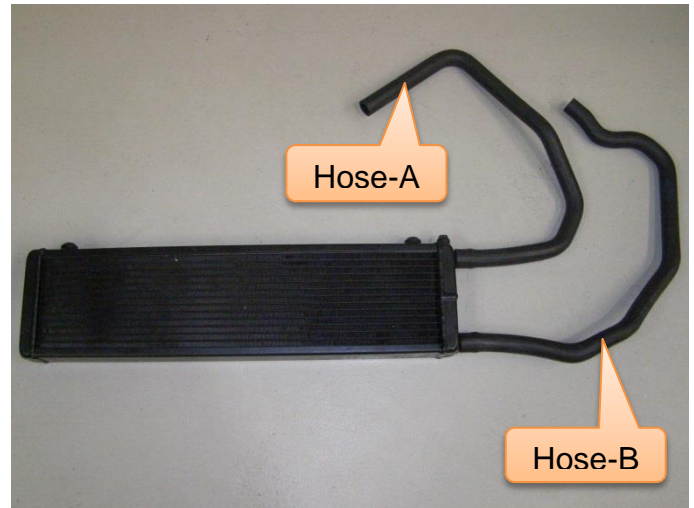

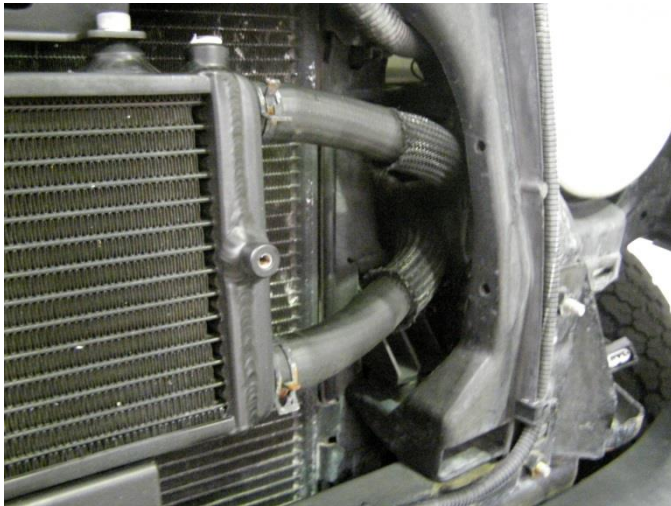

10. Connect Hoses

- Use the 150mm long braided sleeving supplied (3x) to prevent the intercooler hoses from chafing on the OEM overflow bottle, vehicle front panels and the LHS plastic panel next to the radiator.
- Attach Hose-A to the water pump outlet and route the other end beside the engine radiator and to the top hose connection of the radiator.
- Attach Hose-B to the intercooler inlet hose connection (top) and route the other end beside the engine radiator and to the bottom hose connection of the radiator.
- Attach Hose-C between the intercooler outlet hose connection (bottom) and the inlet of the water pump.
- Fasten all the hose connections with the hose clamps supplied.
- **OPTIONAL**- Remove the blanking plug from the bleeding hole of the intercooler radiator before filling the coolant.
- Fill the intercooler system with 1350ml (46 fluid oz.) of ethylene glycol based automotive engine coolant approved for use in aluminium engines. Allow the system to bleed.
- Once the coolant reaches the intercooler radiator, fit the previously removed blanking plug. Use Loctite 577 to threads upon assembly.

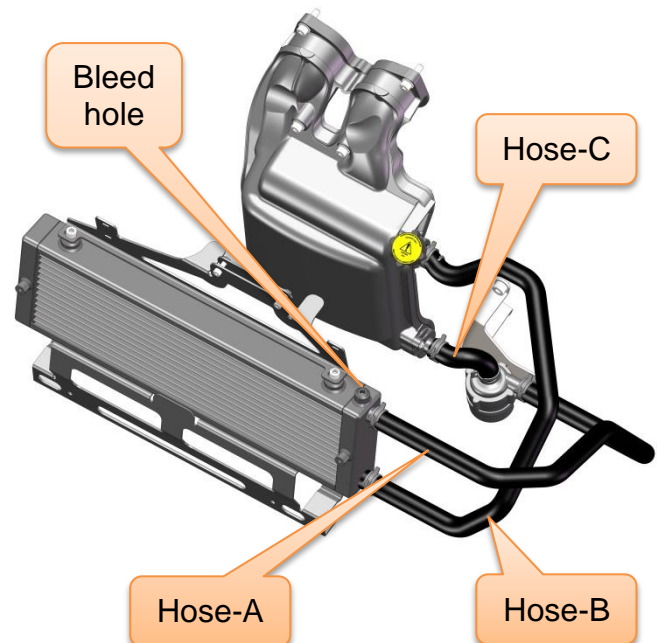

- Repeatedly squeeze the hoses to help to remove any air present in the system.
- Temporarily connect the battery. Turn the ignition to the run position and start the engine. Confirm that the intercooler water pump is running.
- With the pump running, continue to fill the system until all of the 1350ml of coolant is used. This step is important as the intercooler will perform poorly and restrict the engines performance if air remains in the system. It may be necessary to run the vehicle or 'work' (squeeze) the hoses some more to eliminate all air from the system.
- Check the intercooler coolant level & top up if necessary
- Check all the intercooler hose connections for leaks.
- Disconnect the battery again.


11. Fit the factory air box

- Fit the factory air box to the vehicle.



12. Fit the air inlet Pipe and the factory air inlet hose

- Reattach the air inlet pipe to the throttle body and fasten using hose clamp.
- Reconnect the engine breather extension hose to the inlet pipe.
- Reattach the factory air inlet hose to the air inlet pipe and air box. Fasten using hose clamps.
- Connect the IAT sensor to the air inlet hose.

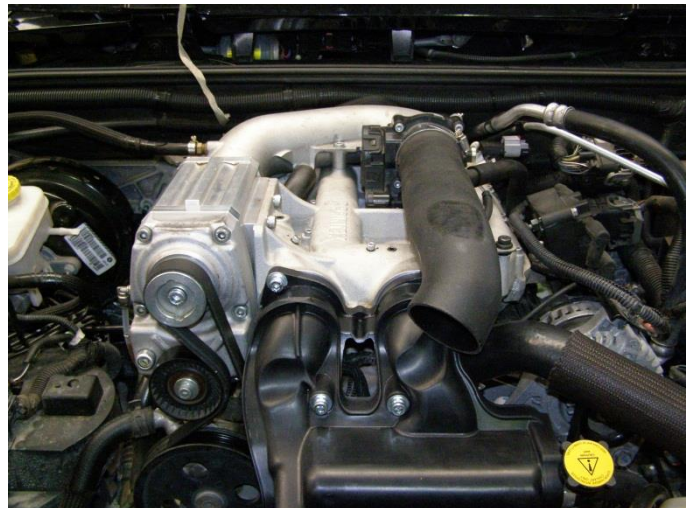

Connect
IAT sensor

13. Fit the front grille

- Connect the plugs (2x) to the turn signal lamps behind the front grille
- Carefully locate & press the clips on the bottom side of the front grille to the frame.
- Insert & lock the push pin rivets on the top side of the front grille to the frame.




Connect
plugs (2x)



14. Reconnect the Battery

- Reconnect the battery.

NOTE: The battery positive terminal (+) should always be connected before the negative terminal (-).

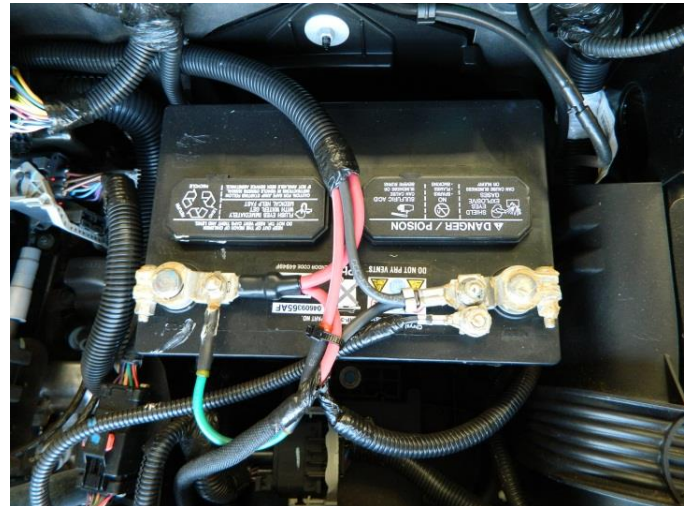

15. ECU Reflashing

Refer to instructions included for re-flashing the ECU.

JEEP- JK (2007 - 2011) SUPERCHARGED
INTERCOOLER UPGRADE KIT

SECTION 3

PRE TEST- DRIVE INSPECTION

SAFETY WARNING

Ensure adequate steps are taken to prevent injury, spillage or fire.

1. Pre-Start Inspection

- Ensure the coolant is at the correct level.
- Ensure the engine oil is at the correct level.
- Ensure the vehicle has fresh 95 RON (91 Octane USA) premium unleaded fuel or higher.
- Ensure the belt is aligned.
- Ensure the air filter is clean.
- Check & replace spark plugs if necessary. Set the gaps to factory spec.

SAFETY WARNING: Ensure adequate steps are taken to prevent injury, spillage or fire, should any of the required installation steps not have been carried out to specification.

IMPORTANT NOTE!!

THIS SPRINTX SUPERCHARGER INTERCOOLER UPGRADE INSTALLATION REQUIRES THAT THE VEHICLE IS FITTED WITH AN APPROVED ECU AND ECU CALIBRATION. FAILURE TO ENSURE THIS WILL AFFECT THE PERFORMANCE AND MAY VOID THE WARRANTY. REFER TO THE SPRINTX DEALER THAT SUPPLIED THE KIT FOR CONFIRMATION.

SPRINTX RECOMMENDS THAT THE VEHICLE IS NOT RUN UNLESS A SUITABLE ECU CALIBRATION IS INSTALLED.

2. Engine Warm Up

- Start the engine and allow it to run until it reaches normal operating temperature.
- Check for leaks.
- Check the intercooler filler coolant level with the engine running and top up the system with the remainder of the 1350 ml of coolant if required. If the system does not take the full 1350 ml of coolant there must be an air lock in the system. Top up the system once the vehicle has been taken for a short test drive.
- Check the engine coolant level & top up if necessary.

3. Road Test Vehicle

- Road test the vehicle.
- Recheck all joints and connections for leaks & rectify as required.
- Check intercooler system coolant level.


JEEP- JK (2007 - 2011) SUPERCHARGED
INTERCOOLER UPGRADE KIT

SECTION 4


MAINTENANCE INSTRUCTIONS

1. Supercharger Drive Belt Replacement

It is recommended that the supercharger drive belt be checked at every regular service and be replaced at 50,000 km (30,000 miles) or 2 years, whichever occurs first.

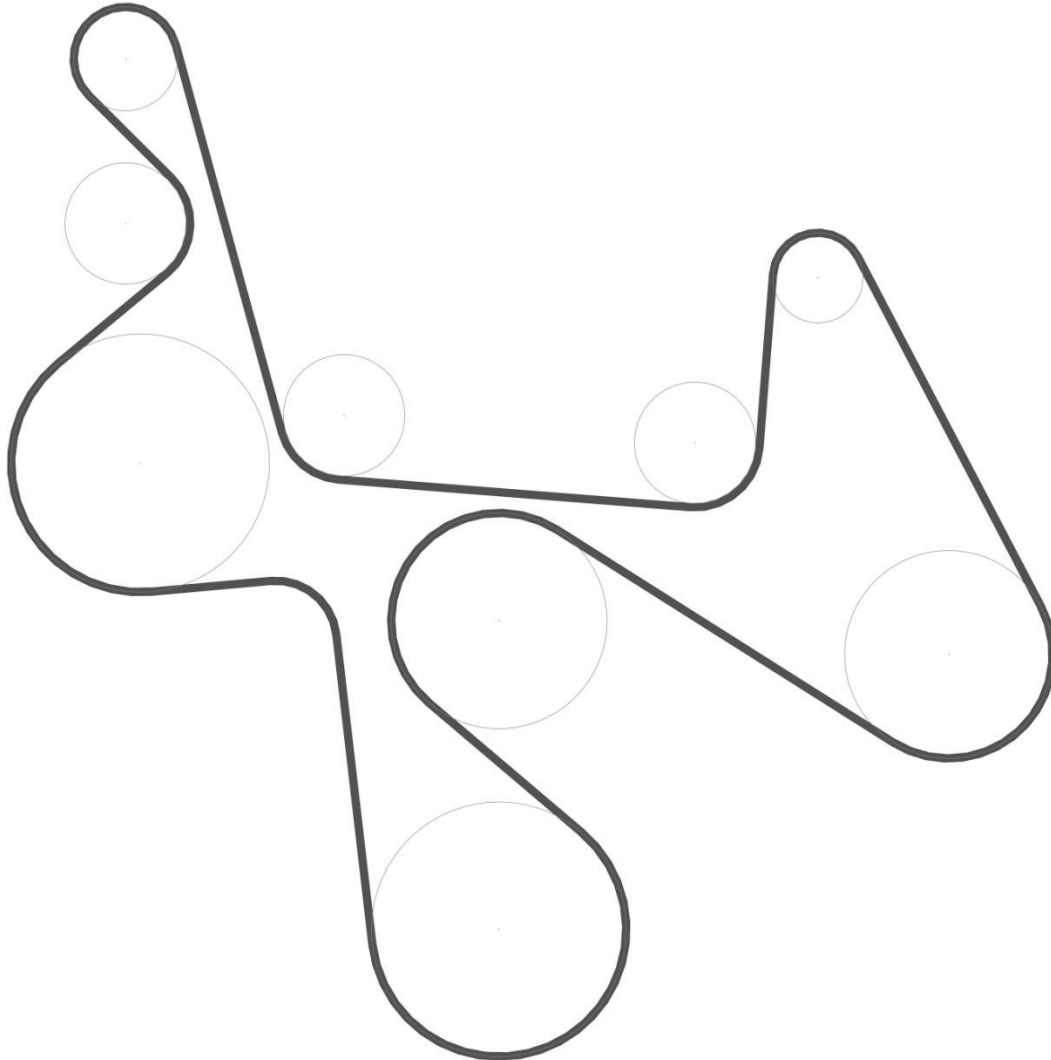

Use long series 3/8" breaker bar to release the dynamic tensioner and remove the belt.

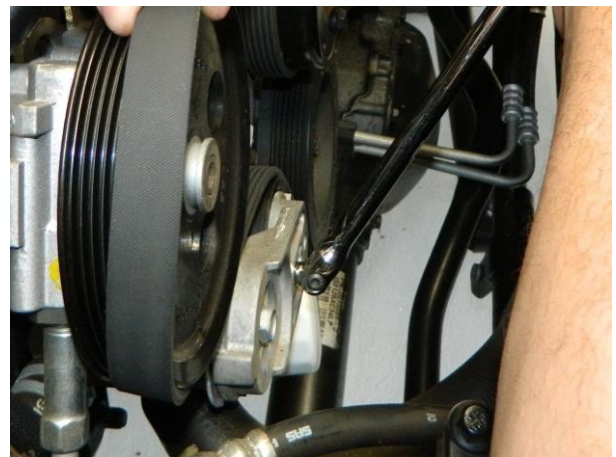

Supercharger without sight glass

2. Supercharger Lubrication Service

1. Drain and replace oil every 40,000 km (25,000 miles) or 2 years (whichever is earlier).
2. Place a suitable funnel under drain plug at front side bottom of Supercharger extension housing. Remove the blanking plug on top centre of cover to allow complete draining. Remove bottom plug and drain.
3. Fit the bottom drain plug back.
4. Replenish with **112ml or 3.79 US fluid ounces** of REDLINE 75W/90NS HIGH PERFORMANCE GEAR OIL.


NOTE:

1. Oil level should be checked at the fill plug at every general service. Oil level should be at the bottom of the fill point, with the supercharger installed to the vehicle (fill to spill)


(or)

Check the oil level in the sight glass (if equipped).

2. Oil level should be checked periodically (Recommended every week and also before & after a long journey).

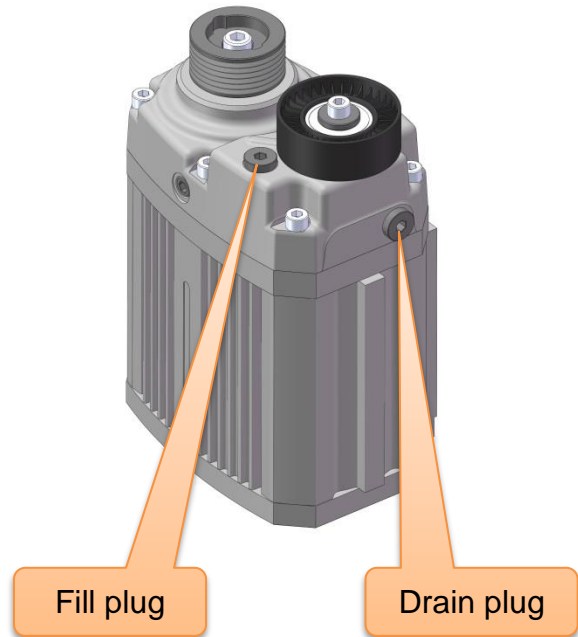

Supercharger with sight glass for oil level

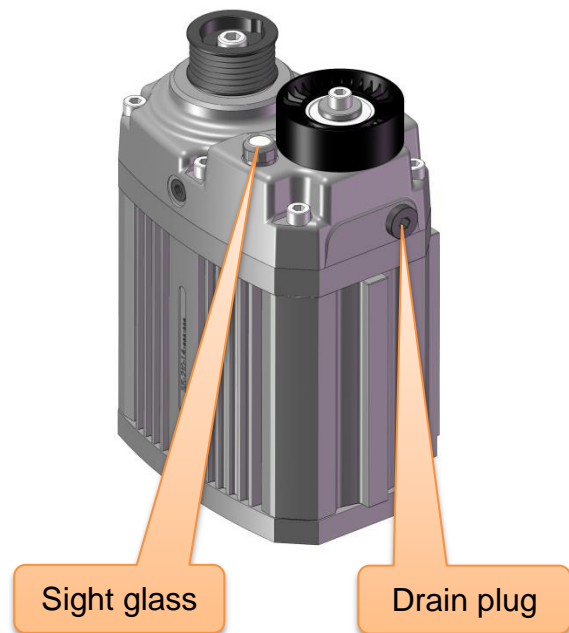

3. Supercharger Service

Sprintex recommends that the supercharger be serviced every 150,000 km. This entails a replacement of all bearings and seals.

NOTES: