



Above image shows optional mounting accessories sold separately

### H3R PERFORMANCE LIMITED WARRANTY

H3R Performance, Inc. warrants MaxOut™ and HalGuard™ fire extinguishers for a period of six (6) years from the date of purchase to be free from defects in material and workmanship. During the warranty period, any such defects will be repaired or the defective extinguisher replaced IF ONLY FACTORY REPLACEMENT PARTS HAVE BEEN USED TO SERVICE THE EXTINGUISHER. This warranty does not cover defects resulting from modification, alteration, misuse, exposure to corrosive conditions, improper installation or maintenance. ALL IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF FITNESS FOR PURPOSE AND MERCHANTABILITY, ARE LIMITED TO THE TIME PERIODS STATED ABOVE. IN NO EVENT SHALL H3R PERFORMANCE, INC. BE LIABLE TO INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. H3R Performance, Inc. neither assumes nor authorizes any representative or other person to assume for it, any obligation or liability other than as expressly set forth herein. This warranty gives you specific legal right and you may have other rights which vary from state to state. To obtain performance of the obligation of this warranty, write to H3R Performance, Inc., 103 H Street, Petaluma, CA 94952 for instructions.

**H3R Performance, Inc.**  
103 H Street  
Petaluma, CA 94952  
Tel (800) 249-4289 Fax (707) 765-3395  
h3rinfo@h3rperformance.com  
www.h3rperformance.com

### INSTALLATION

Install, inspect, maintain and test your fire extinguisher in accordance with the National Fire Protection Assoc. Standard No. 10 "Portable Fire Extinguishers."

Your fire extinguisher should be mounted in a clean, dry area, accessible to possible fire hazards and preferably near an exit.

Use the mounting bracket furnished with the extinguisher or another approved H3R Performance vehicle bracket if required. Fasten to a solid surface using strong screws or fasteners (not included).

### INSPECTION

Your extinguisher should be inspected monthly, checking for any possible damage, corrosion, leakage or obstructions in the discharge outlet. The tamper seal should be unbroken. The extinguisher should be cleaned so that the instructions on the label are always clearly visible.

Dry Chemical and Halotron I extinguisher pressure gauges should be checked. The indicator will vary slightly due to temperature but should always be in the GREEN area if it is fully pressurized. Weigh the extinguisher to affirm that the full weight is within the tolerances stated on the nameplate.

### IN CASE OF FIRE


1. Have everyone immediately evacuate the area.
2. Call the Fire Dept. even if the fire appears to be small (small fires quickly become LARGE fires). The Fire Dept. phone number should be posted at every phone.
3. Use your extinguisher properly, according to the instructions on the nameplate and in this manual. Professionals should fight a large fire. Be prepared to leave the area if the fire cannot be immediately controlled.

### HOW TO USE


Note: The following instructions are of a general nature, intended to familiarize the user with the basic operating techniques of H3R Performance hand portable extinguishers. All of them operate by removing the ring (safety) pin and squeezing the handles together. Since extinguishers differ, the extinguisher nameplate must be consulted for specific procedures and starting distances.

1. HOLD THE EXTINGUISHER UPRIGHT AND PULL THE RING (SAFETY) PIN breaking the plastic seal.
2. STAND BACK FROM THE FIRE (the minimum distance stated on the nameplate) and AIM AT THE BASE OF THE FIRE NEAREST YOU.
3. Keeping the extinguisher UPRIGHT, SQUEEZE THE HANDLES TOGETHER to discharge and SWEEP FROM SIDE TO SIDE. Move closer as the fire is extinguished but not so close as to scatter the burning material or liquid.
4. When the fire is out, back away while watching for possible re-ignition.
5. Evacuate and ventilate the area immediately after use. The fumes and smoke from any fire may be hazardous and can be deadly.


Note: WHENEVER POSSIBLE, PROTECTIVE CLOTHING AND BREATHING EQUIPMENT SHOULD BE USED WHILE FIGHTING A FIRE.

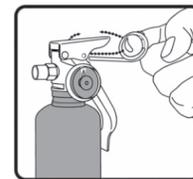

1. HOLD EXTINGUISHER UPRIGHT AND PULL THE RING (SAFETY) PIN

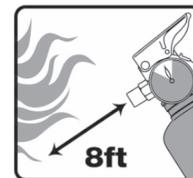

2. STAND BACK FROM THE FIRE AND AIM AT THE BASE OF THE FIRE NEAREST YOU

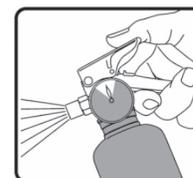

3. SQUEEZE HANDLES TOGETHER AND SWEEP THE EXTINGUISHER STREAM SIDE TO SIDE

REMEMBER THIS SIMPLE WORD: **PASS**  
**PULL - AIM - SQUEEZE - SWEEP**

### INSPECTION RECORD

Model No.: \_\_\_\_\_  
Serial No.: \_\_\_\_\_  
Mfg. Date: \_\_\_\_\_  
Date Installed New: \_\_\_\_\_

**INSPECTION** should be performed monthly or more frequently if circumstances dictate. The extinguisher should be checked to see that it is not damaged, the discharge outlet is not blocked, that it is fully charged, the seal is not broken and that the operating instructions are clearly visible.

**ANNUAL MAINTENANCE** is a more complete inspection of the extinguisher and should be done professionally. It will reveal the need for hydro testing which must be done on Dry Chemical and Halotron I extinguishers every TWELVE YEARS. Most local authorities require special tags be attached to the extinguisher to verify this service.

**SIX YEAR MAINTENANCE** - Every six years, extinguishers requiring a 12 year hydro test shall be emptied and subject to thorough examination of: mechanical parts, extinguishing agent and expelling means. When applicable maintenance procedures are done during periodic recharging or hydro testing, the six-year requirement will begin from that date.

**RECHARGE** should be done professionally immediately after any use by your local fire service company who has the trained personnel, extinguishing agents and equipment to do it properly. This extinguisher must be recharged with the extinguishing agent specified on the nameplate. Substitutions could cause damage or injury and will void the warranty.

DISTRIBUTED BY: \_\_\_\_\_

