


## HOW TO SET UP

1. Deflate a (spare) tyre to your preferred pressure.
2. Turn lock ring and adjustment cap clockwise until tight.
3. Install tyre deflator body onto the valve stem.
4. Turn adjustment cap anticlockwise until tyre starts deflating.
5. Immediately tighten adjustment cap until tyre stops deflating.
6. Turn lock ring anticlockwise until it reaches adjustment cap.

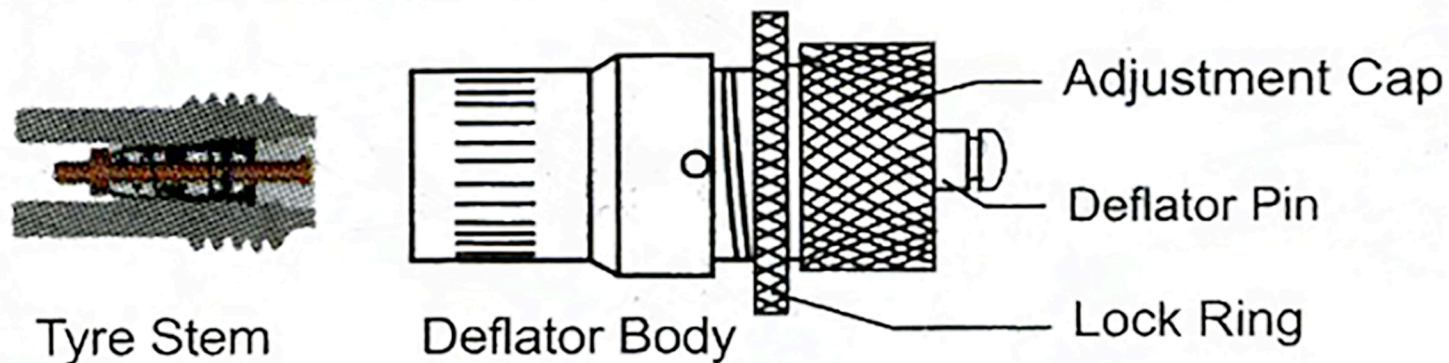

## HOW TO USE

With all four tyre deflators now set to your preferred pressure by following the How To Set Up procedure, you can deflate your tyres quickly and easily by installing the deflators on the tyre valve stem.

If the tyre pressure is within 8psi of the deflator setting, a manual start may be required. With the deflator installed, lift the deflator pin to start operation.

Remove Tyre Deflators once tyres are deflated.