

HYDRAULIC WHEEL DOLLY STORAGE RACK

INSTRUCTIONS

The **Eastwood Hydraulic Wheel Dolly Storage Rack** is manufactured from steel to provide years of rugged and reliable service.

INCLUDES

- (1) Cross Bar with 4 Locator Pins
- (2) Leg Bars
- (4) Nylon Castors with Nuts & Washers
- (4) Bolts & Washers for Frame Assembly

ASSEMBLY

- Remove all components from packaging.
- Loosely screw in 2 Bolts with Washers per side of the Cross Bar to attach the Cross Bar to the Leg Bars. The Cross Bar will mount on top of each of the Leg Bars. Once all 4 Bolts are installed and the Frame is straight, tighten all 4 Bolts.
- Install the 4 Nylon Castors on the assembled Frame and install the supplied Washers and Nuts.
 Tighten all 4 Nuts.
- Your Eastwood Hydraulic Wheel Dolly Storage Rack is now ready for use.

If you have any questions about the use of this product, please contact

The Eastwood Technical Assistance Service Department: 800.544.5118 >> email: techelp@eastwood.com

PDF version of this manual is available online >> eastwood.com/30580manual

The Eastwood Company 263 Shoemaker Road, Pottstown, PA 19464, USA

US and Canada: 800.345.1178 Outside US: 610.718.8335

Fax: 610.323.6268 eastwood.com

© Copyright 2014 Easthill Group, Inc. Instruction part #30580Q Rev. 8/14