

Eastwood[®]

DO THE JOB RIGHT.[®]

Item #30650

1500 LB. FOLDING SAW HORSE INSTRUCTIONS



The **EASTWOOD 1500 LB. FOLDING SAW HORSE** is constructed with heavy-gauge steel to provide years of rugged and reliable service. The Saw Horse is 38" long, features 5 height adjustment positions from 24-1/2" to 40-1/2", and folds flat for easy storage.

SAFETY INFORMATION

The following explanations are displayed in this manual, on the labeling, and on all other information provided with this product:

DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to personal injury.



READ INSTRUCTIONS

- Read this entire manual before set up and use.
- Keep this manual in a safe location as it will be necessary to refer to it often.





WARNING HAZARD!

- Pinch Hazard. Keep hands and feet away from moving parts when in use.
- **DO NOT** stand on or use the Eastwood Saw Horse as a member of a platform for standing on.
- Use **ONLY** on a completely flat, clean and level floor. Using on a sloped or inclined surface can cause Saw Horse to collapse resulting in serious personal injury, death, and vehicle or property damage.
- **DO NOT** use on crushed stone, gravel, sand, dirt, grass, hot asphalt or any other unstable surface.
- Never attempt to support a vehicle on the Eastwood Saw Horse.
- **DO NOT** exceed load rating of 1500lbs. (680 kg.) per unit.



SET-UP FOR USE

1. Remove the hook & loop closure retaining strap from the folded Saw Horse.
2. Place the Saw Horse upside-down with the top rail resting on a flat, clean and level floor surface.
3. Grip a set of legs and rotate them upward to the 90° position (**FIG. A**). Repeat for opposite set.
4. After both sets are firmly set in the unfolded position, pull them apart and rotate them fully outward allowing them to locate against the built-in vinyl coated Lock Tabs (**FIG. B**).
5. The Eastwood Saw Horse may now be used as is or adjusted for height.

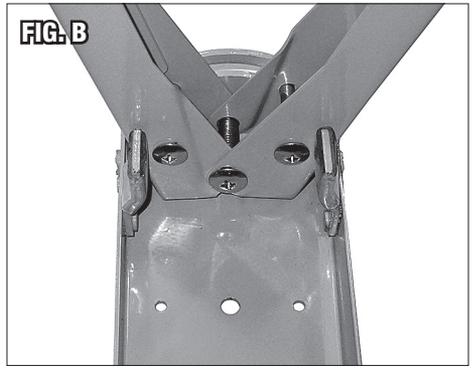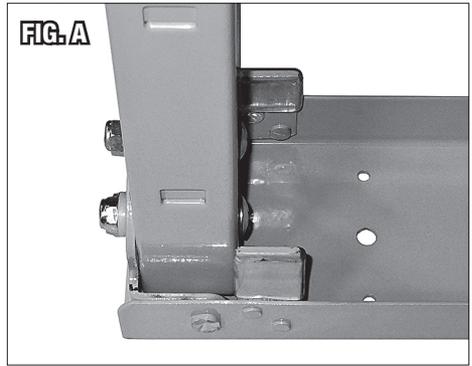

ADJUST FOR HEIGHT

1. Place the Saw Horse upside-down with the top rail resting on a flat, clean and level floor surface.
2. Loosen and remove the wing nuts and carriage bolts from their locations in the upper area of the legs.
3. Remove the lower telescoping section of each leg and slide it outward to one of the 5 chosen positions. Use care to allow the larger rectangular cutouts of the lower leg to slide under the lock-tabs of the upper leg (**FIG. C**).



⚠ WARNING

Be sure that at least 2 lock-tabs are engaged at all times.

4. Replace the carriage bolts through the nearest square holes and tighten the respective wing nuts securely.

FOLDING FOR STORAGE

1. Place the Saw Horse upside-down with the top rail resting on a flat, clean and level floor surface.
2. Remove wing-nuts and carriage bolts to shorten legs to fully retracted, storage length. Replace carriage bolts and wing nuts.
3. Pull each set of legs inward toward each other to clear the built-in vinyl coated lock tabs.
4. Rotate both sets of Legs 90° downward and nest them into the underside of the top rail.
5. Wrap the hook & loop closure retaining strap around the folded Saw Horse assembly for transport.

If you have any questions about the use of this product, please contact

The Eastwood Technical Assistance Service Department: 800.343.9353 >> email: tech@eastwood.com

PDF version of this manual is available at eastwood.com

The Eastwood Company 263 Shoemaker Road, Pottstown, PA 19464, USA

800.343.9353 eastwood.com