



# Installation Instructions

Product: Adjustable Trackbar

Part Number: PN OGS155

## Welcome

CONGRATULATIONS on your purchase of a new JKS Adjustable Trackbar system! At JKS Manufacturing, we are committed to providing you with the best products available and your satisfaction is our first priority.

PLEASE READ these Installation Instructions carefully, and save them for future reference, as they contain important installation and maintenance information.

## Important Safety Information

**CHECK TORQUE SPECIFICATIONS regularly.**

## Warning


NOT COMPATIBLE WITH right hand drive vehicles.

## Tools Required

- Metric/Standard Socket Wrench Set
- Torque Wrench
- Tape Measure
- 1-7/16" Open-End Wrench
- Heavy Duty Ratchet Strap \*
- Anti-Seize Lubricant
- Hydraulic Press \*
- Wheel Bearing Grease

*\* Asterisk denotes tools that are not required for some applications. Thoroughly read instructions first to determine which tools will be required for your application.*

## Parts

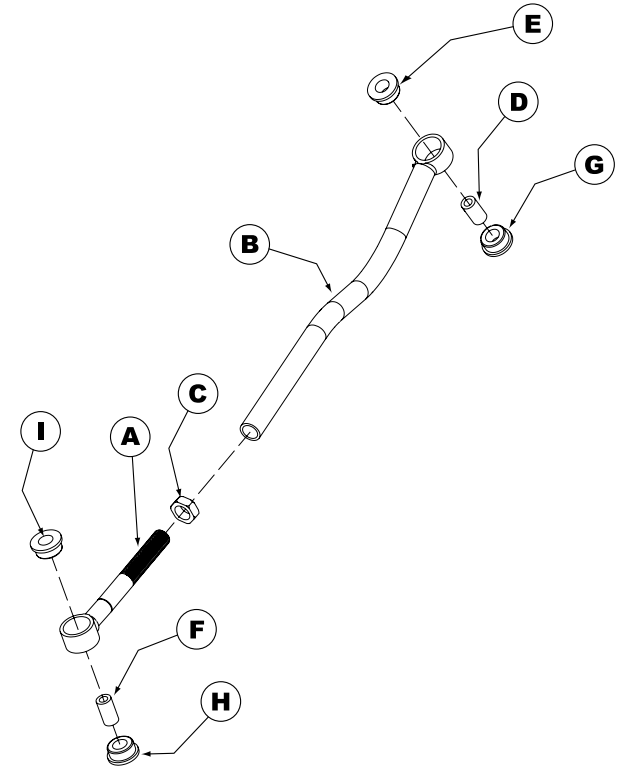

<b>A</b>	Male Threaded (Axle) End
<b>B</b>	Female Threaded (Chassis) End
<b>C</b>	1" NF Jam Nut
<b>D</b>	Sleeve
<b>E</b>	Polyurethane Bushing
<b>F</b>	Sleeve
<b>G</b>	Polyurethane Bushing
<b>H</b>	Polyurethane Bushing
<b>I</b>	Polyurethane Bushing

## Installation

### ❑ REMOVE ORIGINAL EQUIPMENT (OE) REAR TRACK BAR

- Remove rear track bar and mounting hardware per the factory service manual instructions for your vehicle. Retain the original mounting hardware as it is required for Adjustable Trackbar installation.

**HINT:** The original trackbar bushings may be retained as spares for your Adjustable Trackbar if replacement parts are ever needed. See Maintenance section for details.

### ❑ LUBRICATE BUSHINGS AT BOTH ENDS OF ADJUSTABLE TRACKBAR

- Locate the bag of parts containing the Polyurethane Bushings (E, G, H, & I) and Sleeves (D & F).
- Liberally apply wheel bearing grease to surface of bushings.
- Assemble Polyurethane Bushings and Sleeves at each end of trackbar as indicated in the parts diagram on page 1.

### ❑ MOUNT ADJUSTABLE TRACKBAR TO CHASSIS RAIL BRACKET

- Mount Chassis End (B) of Adjustable Trackbar to the chassis rail bracket and temporarily secure with the original mounting hardware. Apply anti-seize lubricant to bolt threads.

**HINT:** When installed correctly, the curve in Adjustable Trackbar should point toward the front of vehicle.

### ❑ CENTER REAR AXLE HOUSING

The rear axle housing must be in perfect lateral alignment with vehicle chassis before Adjustable Trackbar installation can be completed.

- Determine if the axle housing is centered by measuring the distance between the tire and chassis, using the exact same points on each side of the vehicle to ensure accuracy.



**HINT:** For example, measure from the edge of a tire tread lug to the outboard side of the chassis, then repeat the measurement on the other side of vehicle using the exact same points.

- If the two measurements are equal, the axle is centered. If the measurements vary, divide the difference in half to determine the amount of adjustment required.

**HINT:** If the axle housing is not centered, the chassis can be laterally shifted using either of the following methods.

#### Ratchet Strap (preferred)

- Attach a heavy duty ratchet strap to the chassis on one side of the vehicle, and to the axle housing on the other side.
- Slowly tighten the strap in small increments to pull the chassis in alignment with the axle. Take measurements after each adjustment until centered.

#### Pushing Vehicle Body

Although this method will laterally shift position of chassis relative to axle housing, it does not enable the position to be easily stabilized while measurements are taken.


- With the vehicle safely on the ground, have a partner gently push on the vehicle body above the rear wheels.

### ❑ SET ADJUSTABLE TRACKBAR LENGTH AND MOUNT TO AXLE

**IMPORTANT:** The length of the Adjustable Trackbar must be set with the axle housing perfectly centered and the vehicle at normal ride height.

- With the axle housing centered beneath the chassis, adjust the length of Adjustable Trackbar by rotating the Axle End (A) until the Bushing Sleeve (F) aligns with the mounting holes on the axle bracket.

**IMPORTANT:** If Bushing Sleeve at Axle End is not parallel with axle bracket mounting holes, first confirm that the factory bend in Axle End of trackbar is pointing towards the front of vehicle. If Bushing Sleeve is still out of alignment, it may be necessary to slightly bend the Axle End of trackbar using a hydraulic press. Variations in the axle bracket position are typically the result of modifications to related suspension parts.

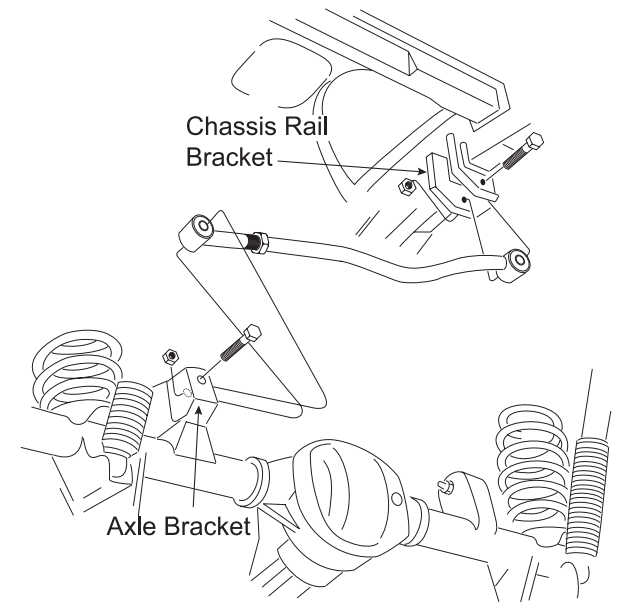

**HINT:** The factory rear trackbar bracket on the axle utilizes a “pocket” design that requires the Adjustable Trackbar be removed from the chassis rail bracket before the Axle End (A) can be inserted. This may not be necessary if an aftermarket extension bracket has been installed on the factory axle bracket.

---

## SET ADJUSTABLE TRACKBAR LENGTH AND MOUNT TO AXLE *(cont.)*

- Apply anti-seize lubricant to original mounting bolt threads and adjustment threads of trackbar.
- Install Axle End (A) of Adjustable Trackbar to the axle bracket by securing with the original mounting hardware.
- Take measurements again to ensure axle housing is perfectly centered and make any final adjustments if necessary.
- Once all adjustments are complete, fully tighten the Jam Nut (C) to prevent Adjustable Trackbar length from changing.

**HINT:** *It may be easier to tighten Jam Nut with the Adjustable Trackbar removed from the vehicle.*

- Tighten mounting bolts on axle bracket and chassis rail bracket to 50 ft-lb. using a torque wrench.

## **Maintenance**

Check torque specifications regularly.

Regular cleaning with pressurized water is recommended to maximize reliability.

The original equipment trackbar uses the same bushing size as the JKS Adjustable Trackbar. Upon removal of the original trackbar, the OE bushings should be retained if in good condition. In the unlikely event that the Adjustable Trackbar bushings wear out, the OE trackbar bushings may be used as replacements.

---

© 2006 JKS Manufacturing, Inc & Aftermarketing, LLC  
Revision Date 4/7/2006