



INSTALLATION INSTRUCTIONS

YJ Glove box Part # 036

Please read and fill out the enclosed warranty registration card to activate your warranty.

Tools Needed

- #2 Phillips head screwdriver
- 7/16" Socket and Ratchet or 7/16" Wrench

Shipping Package

- (8) Phillips panhead 1/4-20x1/2" bolts
- (4) 1/4-20 nuts
- (12) 1/4" washers
- (2) Brackets

Mounting Directions

Remove factory glove box

1. Remove the three screws from across the top of the glove box face above the panic handle, see figure 1, save these screws.
2. Open the glove box, remove the screws fastening the lid and remove the lid.
3. Reach behind the dash and remove the (4) nuts on the backside of the glove box face. There are two nuts behind each end of the panic handle. These nuts are very difficult to get to and tedious to remove. We recommend using a 1/4" drive ratchet with a 7/16" socket. *Warning- in some cases there may be sheet metal screws instead of nuts, however they are located in the same spot.*

Install Tuffy glove box

1. Using the same holes that the factory panic handle was connected, install the (2) "L" brackets using the (4) 1/4-20x1/2" bolts, washers, and nuts. The 3/8" holes in the "L" bracket should be mounted in front of the metal frame, see figure 2.
2. Insert the Tuffy glove box and fasten the remaining (4) 1/4-20x1/2" bolts and washers to the "L" brackets through the holes on the inside of the glove box, see figure 2.
3. Refasten the (3) original screws across the top of the glove box face.

ATTENTION:

FREQUENT LUBRICATION IS NECESSARY ON THE LOCKING SYSTEM

The pushbutton lock contains an "O" ring seal to protect the interior from dust and water. If this mechanism is not lubricated regularly it will become difficult to operate and it may not return to its home position preventing the key from operating the lock. If this happens simply pull up on the pushbutton to manually bring it back to its home position. Lubricate the pushbutton with a light lubricant such as silicone spray. The pushbutton may have to be periodically disassembled and cleaned.

THE TUFFY WARRANTY

We build Tuffy products to last a lifetime and that's how long we'll stand behind them. Tuffy Products are warranted against defects in material and workmanship, excluding the coating, under normal use during the time that the original owner possesses the vehicle in which the part is installed and used. Warranty does not cover rusting, the coating, expenses for installation, service, or down time. Warranty does not cover material, labor, or additional parts required for replacement or repair of damages, malfunctions, or service failures caused by abuse (including fire or wreckage), misuse, neglect, failure to follow the manufacturer's operating and/or installation instructions, repairs made or attempted by unauthorized persons, and/or any claims for incidental or consequential damages for breach of any express or implied warranties. Tuffy Security Products, Inc. shall only be responsible to the extent of replacing or repairing materials supplied to customers, which are determined by Tuffy Security Products, Inc. to be defective and shall have no liability beyond such repair or replacement. Tuffy Security Products, Inc. expressly disclaims all other warranties, express or implied, and specifically disclaims any implied or other warranty of fitness for any particular purpose for which the product is supplied without Tuffy Security Products, Inc.'s knowledge or consent. Any use or application of the material and/or products supplied to its customers for the purpose not intended for such material and/or products shall operate to void all warranties and Tuffy Security Products, Inc. expressly disclaims any liability resulting from material and/or product failure in such event. This warranty gives you specific legal rights and you may have other rights, which vary, from state to state

For office use only

- Shipping package
- Warranty Card
- Lid Support Strap
- Sticker
- Keys
- Rubber Seal

Checked by _____

Call (800)348-8339 for technical assistance