

2501 Ludelle Street Fort Worth, Texas 76105 817-244-6212 Phone • 817-244-4024 Fax 888-350-6588 Sales • 800-423-9696 Tech E-mail: painless@painlessperformance.com Web: www.painlessperformance.com

## 30301

### **UNIVERSAL DASH HARNESS**

#### (INSTALLATION OF WIRES ON GAUGES)

TACHOMETER PURPLE/WHITE TO ATACH@ TERMINAL

RED/WHITE TO BATTERY (+)

BLACK TO GROUND (-)

<u>FUEL LEVEL GAUGE</u> PINK TO SENDER (S)

RED/WHITE TO BATTERY (+)

BLACK TO GROUND (-)

OIL PRESSURE GAUGE LIGHT BLUE/BLACK TO SENDER (S)

RED/WHITE TO BATTERY (+)

BLACK TO GROUND (-)

WATER TEMPERATURE GAUGE LIGHT GREEN TO SENDER (S)

RED/WHITE TO BATTERY (+)

BLACK TO GROUND (-)

VOLTMETER RED/WHITE TO BATTERY (+)

BLACK TO GROUND (-)

ALL DASH LIGHTS BROWN TO LIGHT **B**+

BLACK TO GROUND

<u>LEFT TURN INDICATOR</u> LIGHT BLUE TO INDICATOR **B**+

**BLACK TO GROUND** 

RIGHT TURN INDICATOR BLUE TO INDICATOR **B**+

BLACK TO GROUND

HIGH BEAM INDICATOR GREEN TO INDICATOR **B**+

BLACK TO GROUND

30301.doc 1/26/96

#### **NOTES:**

- 1. IF YOUR GAUGES HAVE STUDS WITH NUTS INSTEAD OF BLADE PUSH ON CONNECTORS, USE THE ADAPTER TERMINALS SUPPLIED FOR CONVERSION TO THE PUSH ON STYLE.
- 2. IF YOUR DASH LIGHTS HAVE A SINGLE WIRE COMING OUT THE CENTER OF THE SOCKET, ATTACH THE BROWN WIRE TO IT AND ATTACH THE BLACK WIRE TO THE GAUGE MOUNTING BRACKET USING THE RING TERMINALS PROVIDED.
- 3. IF YOUR INDICATOR LIGHTS HAVE PUSH ON TERMINALS, REMOVE THE BUTT CONNECTORS INSTALLED ON THE HARNESS INDICATOR WIRES AND REPLACE WITH THE PUSH ON CONNECTORS SUPPLIED.
- 4. IN THIS HARNESS THE LEFT AND RIGHT TURN SIGNAL INDICATOR WIRES ARE IN THE SEPERATE 2 WIRE CONNECTOR.

#### 바 COOLING FAN BATTERY HORN 924 GRN 14 + 바 1 BALLAST RESISTOR BYPASS (OPTIONAL) SOLENOID CHOKE ALTERNATOR 0 0 OIL PRESSURE SENDING UNIT JUMPER STARTER 954 RED 18 MAXI FUSE DISTRIBUTOR COOLANT TEMP SENDING UNIT BALLAST RESISTOR S ~ 923 PPL/WHT 18 922 LT BLU/BLK 18 921 LT GRN 18 ALTERNATOR EXCITOR BRAKE SWITCH 901 GRY/WHT 18 920 PNK 14 919 PPL 12 916 RED 10 917 ORN 16 918 WHT 16 914 WHT 14 915 RED 10 IGNITION COIL BRAKE SWITCH B+ HORN B+ TACHOMETER OIL PRESSURE GAGE TEMPERATURE GAGE ALTERNATOR B+ TURN SIGNAL SWITCH ALT. EXCITOR FAN SWITCH ACCY B+ ACCY B+ IGNITION SWITCH B+ START 934 RED 12 933 ORN 12 CHOKE 932 BRN 12 931 PNK 14 COIL B+ (HORN RELAY) **IGNITION SWITCH** FUSE BLOCK TURN SIGNAL SECTION ACCESSORY SECTION SWITCHES INSTRUMENT PANEL SECTION

**ENGINE WIRING** 

3

## 유 INST PNL GROUND BUS RT INDICATOR INSTRUMENT PANEL LIGHTING (6 PL) VOLTMETER OIL PRESSURE GAGE INSTRUMENT PANEL SECTION WIRING INST PNL LIGHTING BUS ENGINE SECTION A 921 LT BLU/BLK 18 OIL PRESS GAGE TACHOMETER 923 PPL/WHT 18 TACH BEAM (IND INST PNL GAGES B+ BUS Q TAIL SECTION 939 PNK 18 FUEL GAGE SPEEDOMETER TURN SIGNAL SECTION 937 LT BLU 18 LT IND 936 BLU 18 RT IND TEMP FUSE BLOCK 935 RED/WHT 18 GAGES B+ FUEL HEADLIGHT SECTION B 930 BRN 18 INST PNL LIGHTING 2<u>5</u> DIMMER SWITCH SECTION 936 GRN 18 HIGH BEAM IND

# Painless Performance Limited Warranty and Return Policy

Chassis harnesses and fuel injection harnesses are covered under a lifetime warranty. All other products manufactured and/or sold by Painless Performance are warranted to the original purchaser to be free from defects in material and workmanship under normal use. Painless Performance will repair or replace defective products without charge during the first 12 months from the purchase date. No products will be considered for warranty without a copy of the purchase receipt showing the sellers name, address and date of purchase. You must return the product to the dealer you purchased it from to initiate warranty procedures.