

VECTOR GRILL™

WHAT YOU NEED TO KNOW:

1) WATCH THE DIY INSTALLATION VIDEO GUIDE:



www.vimeo.com/343039635



2) WIRING OPTIONS:

For best overall control of the DRL lights on the Vector Grill connect the power lead wire to a switch if you have an existing switch bank. This will allow you to control the LEDs and leave the lights on when your Jeeps is parked, etc. If you do not have a switch and would rather the lights turn on and off automatically use the included Add-A-Circuit to easily and safely tap power from the fuse panel. We recommend to use fuse location F52 (Cigarette Lighter) position.



ADD-A-CIRCUIT INFORMATION


The output wire has a blue butt connector that crimps to the wiring harness lead.

This fuse powers the Grill DRL. If the DRLs do not come on this is the fuse to check.

The original fuse goes into this location. A spare fuse is shipped in this location.

Plugs into the original fuse location (#F52).

Spare Fuse

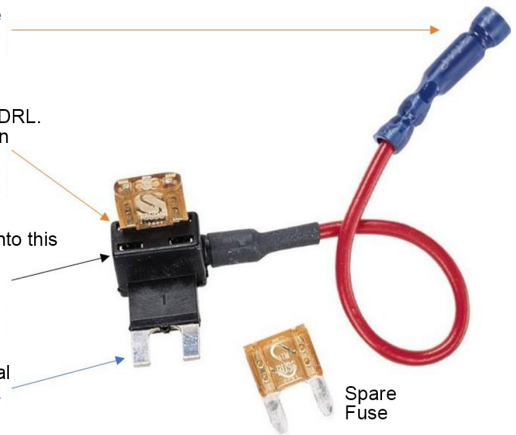

3) USE THE ORACLE FAQ PAGE:

Visit www.oraclelights.com/vector for information and videos on common questions and tips & tricks for using your Vector Grill. All ORACLE Vector Grills come from the factory with a baseline level for the driving beams and low beams. Depending on your lift, tires, etc you may need to make additional adjustments to the beam level to insure maximum light on road for best visibility while creating minimal glare.

