

# OCULUS

## HEATED LENS SUPPLEMENTAL GUIDE


### 1) WATCH THE DIY INSTALLATION VIDEO GUIDE:



WATCH  
THE  
VIDEO:


You Tube

[YOUTUBE.COM/WATCH?V=FTTEPXTBMMC](https://www.youtube.com/watch?v=FTTEPXTBMMC)

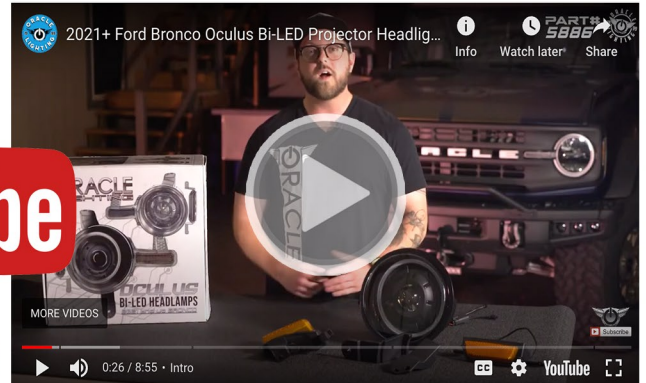

### 2) WIRING INFO:

Because the headlight heating element needs power the heater positive cables from the headlights need to be connected to the fuse box using the included Add-A-Circuit to get power. (Fuse Position F66)

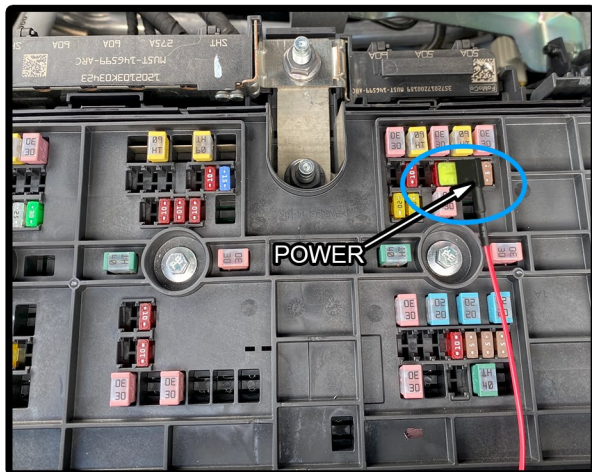


The output wire has a blue butt connector that crimps to both RH/LH power wires.

Fuse Powers the Heater.  
If the heater is not active  
check this fuse.

The original fuse goes into this  
location. A spare fuse is  
shipped in this location.

Connect this back into the  
original fuse position.



**Add-A-Circuit**

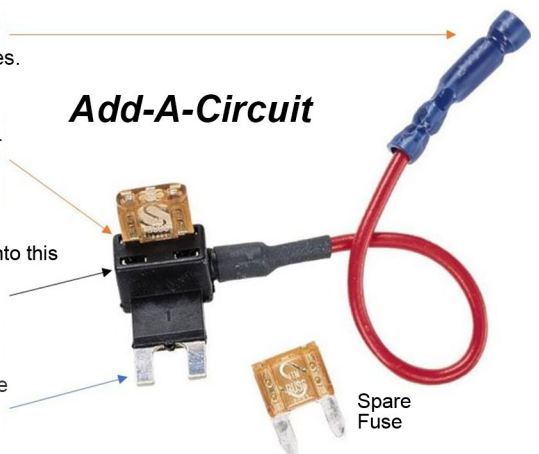

### 3) MOUNT THE TEMPERATURE SENSOR:

Start by connecting the sensors to the headlight cable with the Plug-&-Play connector (A). Mount the

sensor in this location (B) so that it is away from any heat source and can get a good read on the ambient temperature. First clean the surface with alcohol and secure any extra cables. Repeat on both sides RH and LH Headlights.

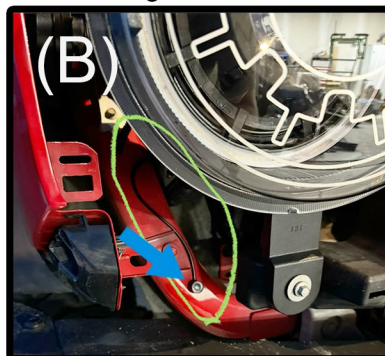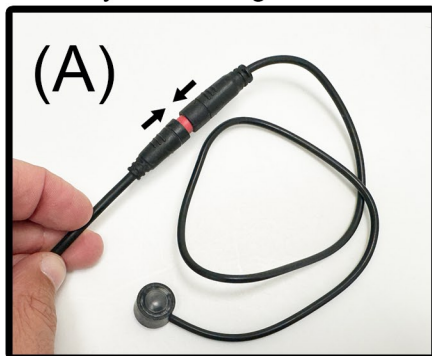

**ORACLE**  
LIGHTING

[www.oraclelights.com](http://www.oraclelights.com)

© 2020 ORACLE LIGHTING

4401 Division St.  
Metairie, LA 70002  
P: 1(800)407-5776  
F: 1(800)407-2631