


IPF INSTALLATION INSTRUCTIONS

1. Remove the negative cable (-) of the battery to prevent short circuits.
2. Connect relay to 4 pole connector of relay harness.
3. Install relay in the engine bay with supplied screw and washer. (Mount upright)
4. Thread parallel wires with terminals of relay harness into an existing grommet on firewall and pull it inside the vehicle.
5. Thread yellow wire of switch harness into existing grommet from inside vehicle and pull it into the engine bay.
6. Connect the terminals from the relay harness to terminals from the switch harness inside the vehicle.
7. Connect yellow wire with 2 amp fuse from switch harness using electro tap to high beam wire (+) of headlamp.
8. Connect switch to 3 pole connection of switch harness and secure lead with 'U' grips.
9. Connect ground ring terminal from black wire of relay harness and horse shoe shape terminal with supplied screw and washer to BARE METAL inside engine bay.
10. Connect relay harness to the 2 pole connector from the lamps.
11. Secure all cables with cable ties.
12. Connect ring terminal of yellow wire with 25A fuse on relay harness to the positive (+) terminal of the battery.
13. After installation check for correct wiring and connect the negative (-) terminal of the battery.

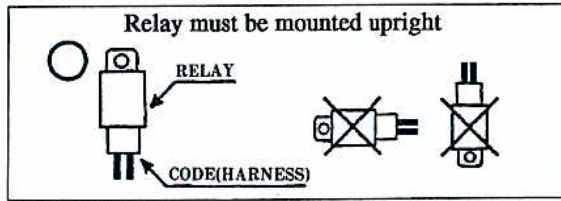

1. MOUNT WIRING CODE(HARNESS) OF RELAY DOWNWARD. DONT MOUNT IT UPWARDS OR SIDWARD. IT IS CAUSED FIRE TO COLLECT WATER, DUST ETC.
2. MOUNT RELAY TIGHTLY BY BOLT & SCREW.
3. MOUNT RELAY AT NON-SPLASHED WITH MUD & WATER ETC.

