



ORACLE LIGHTING

INSTALLATION INSTRUCTIONS

MANUAL- BC2 LED CONTROLLER

PART#BC2-6

REV.04.04.2024

BLUETOOTH BC2 CONTROLLER

BEFORE YOU GET STARTED:

If you have not already watched the installation video please review for the latest information regarding the controller, the App, and the Installation of the device.

WATCH THE DIY INSTALLATION VIDEO GUIDE:




WATCH
THE
VIDEO

vimeo

www.vimeo.com/930701535

BC2 CONTROLLER OVERVIEW:

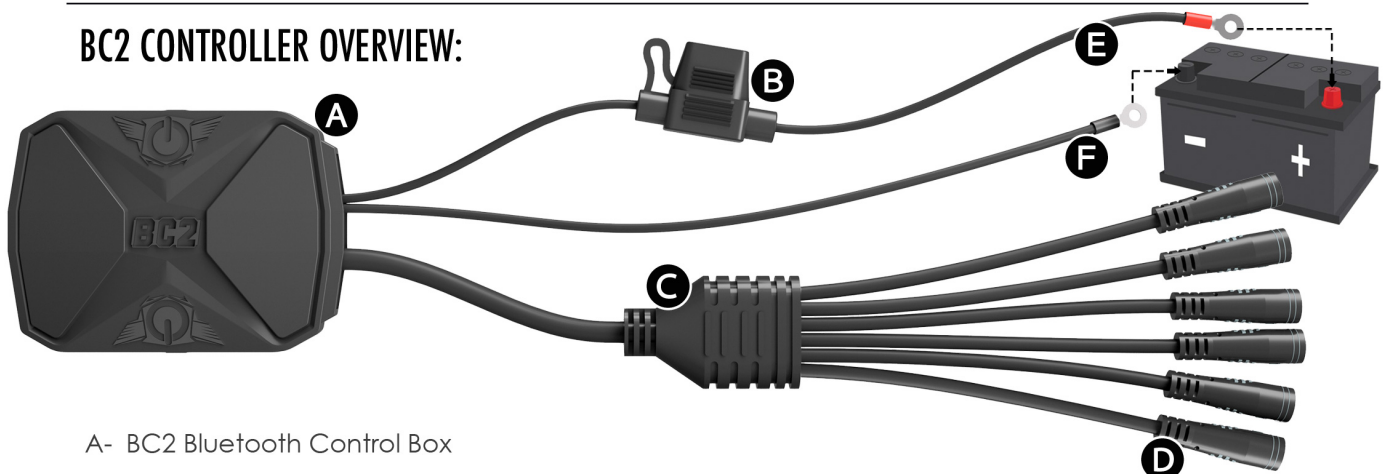

A- BC2 Bluetooth Control Box

B- Fuse Holder- 10 AMP Mini

C- Output Splitter Hub

D- RGB Connector (Connect to RGB Lights)

E- DC Power Cable (Connect to + Power 12-24VDC)

F- Ground Cable (Connect to solid chassis ground or Battery - post)

INSTALLATION STEPS:

- 1- Disconnect negative battery post while working with vehicle electronics.
- 2- Find suitable location for the control box near the battery away from water and heat.
- 3- Mount control box using strap clamp mounts on the bottom of the control box.
- 4- Connect RGB lights to the output cables. Cap off any outputs not being used.
- 5- Connect Positive (Red) Power Wire to Battery + Terminal
- 6- Connect Negative (Black) Ground Cable to Chassis Ground of Battery - Terminal.
- 7- Reconnect negative battery post.
- 8- Download and install ColorSHIFT™ PRO App and enable all Permissions.
- 9- Connect to the Device in the App and Switch Device to "ON" Position.

ORACLE
LIGHTING

www.oraclelights.com

© 2023 ORACLE LIGHTING

4401 Division St.
Metairie, LA 70002
P: 1(800)407-5776
F: 1(800)407-2631