



Corbeau 3-Point Retractable Seat Belt

Corbeau provides the following installation information as a general set of instructions to help you properly install your Corbeau 3-Point Retractable Seat Belt. These instructions are not all-inclusive and may not cover every aspect of installation as some applications may require extra parts or interior modifications. Please contact Corbeau or your local authorized dealer if you have installation questions. We assume no responsibility for proper or improper installation.



Installation Guidelines

1. Remove existing seat belt and components including the female end on the console side.
2. Place the stock retractor bolt through the bolt hole on the new retractor. Screw the bolt into the stock anchor point at the bottom of the B-pillar (Figure 1a).

If the anchor point is in the floor pan rather than the B-pillar, bolt the provided "L" bracket to the floor pan using the stock bolt followed by mounting the retractor to the vertical mount of the "L" bracket. To mount the retractor to the "L" bracket, use a provided bolt, lock washer, and nut (Figure 1b).

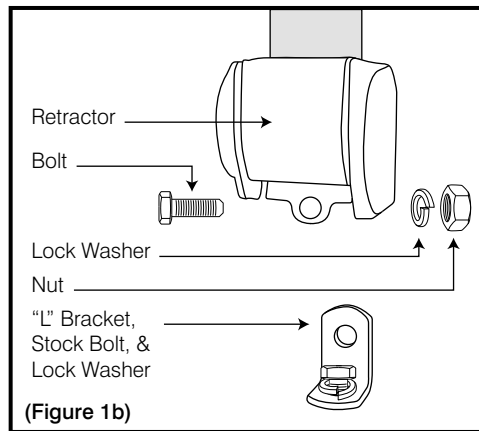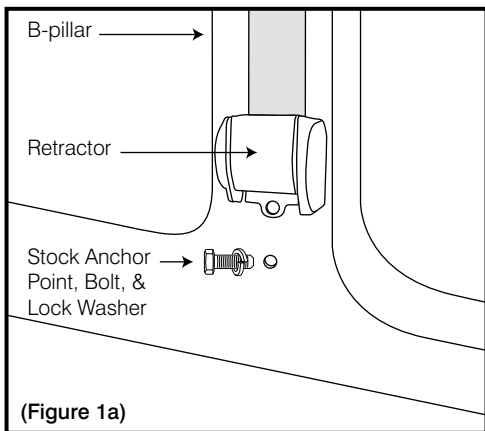


3. With the retractor mounted, pull the shoulder mount up to the factory anchor point on the upper B-pillar. Place the provided 7/16" x 1.5" fine thread bolt through the provided bolt sleeve. Run bolt and sleeve through the shoulder mount and thread into the factory anchor point (Figure 2a). Install plastic cover (Figure 2b).

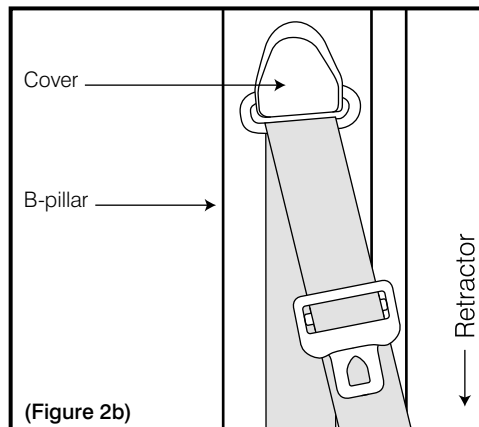
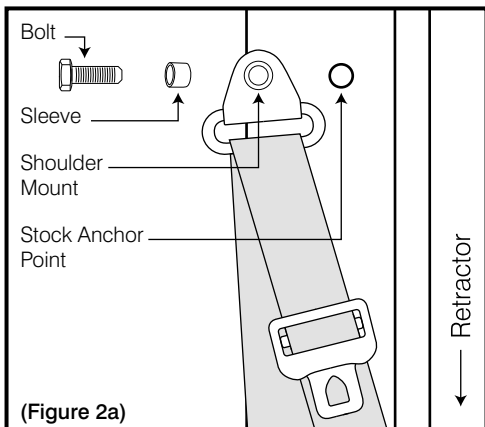


- Using a stock bolt, mount the belt end to the factory anchor point. The mounting point is on the outboard side in your floor pan or on the floor pan (Figure 3a).

Insure that all bolts are tightened completely.

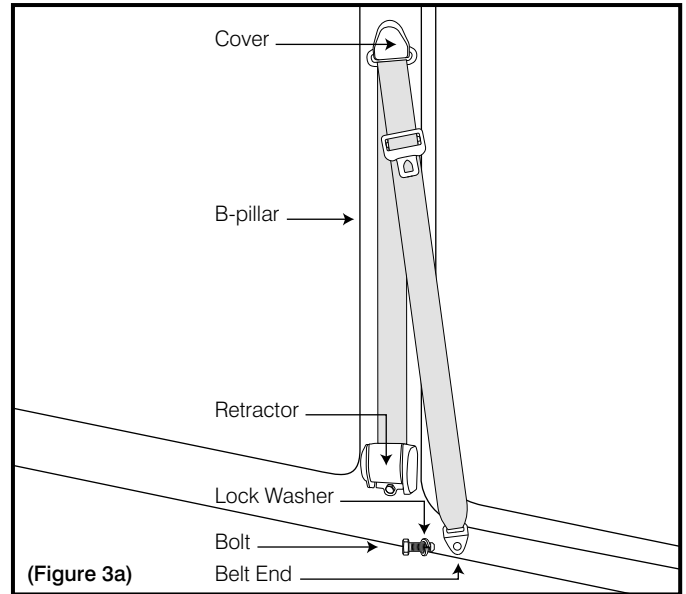

- Install the female buckle end of the seat belt on the console side of the floor pan. If a factory anchor point exists on the side of the transmission tunnel, bolt directly to the factory anchor point (Figure 4a). If the factory anchor point is flat in the floor pan, use the provided extended “L” bracket to bolt to the floor pan and the vertical mounting hole to mount the female buckle end (Figure 4b).

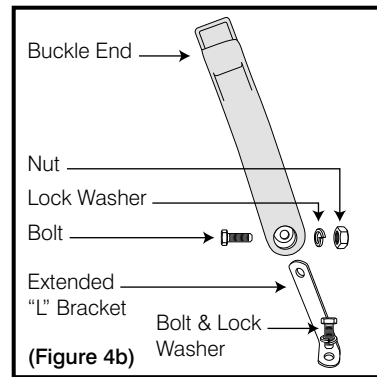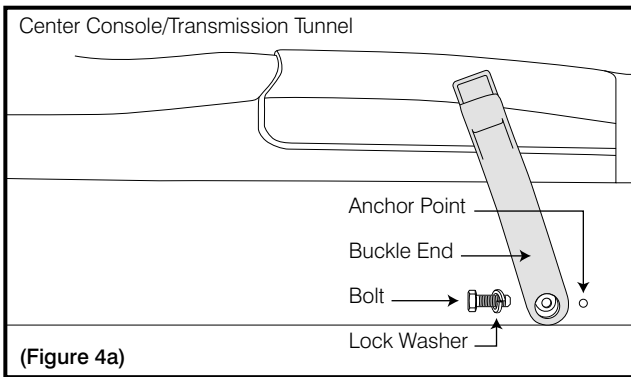

Important Notes

- Insure that the belt path is free of sharp or harsh edges during use.
- When mounting belt ends, insure that no carpet or other materials are between the mount and solid mounting surface.
- Belts should always be mounted to factory anchor points. If the vehicle has never had 3-point retractable seat belts installed, you must create sufficient anchor points before installing. If you drill mounting holes, be cautious not to damage fuel or brake lines or any electrical wiring. Be aware of where you are drilling to avoid damaging your vehicle.
- If the vehicle is involved in a collision, all elements of the seat belt including mounting hardware must be replaced.

3-Point Retractable Seat Belt Disclaimer

No warranty or representation is made as to this product's ability to protect the user from injury or death, the user assumes that risk. The effectiveness, warranty and longevity of these products are directly related to the manner in which they are installed, used, and/or maintained.