

Wheel Spacer Set Part #: RT32015 & RT32016



- (2) Wheel Spacers
- (10) Wheel Bolts
- (10) Lug Nuts
- Thread Locker



-Read all instructions carefully prior to starting installation.

- **1.** Ensure that all components in kit are accounted for.
- **2.** Park on a flat, level surface.
- 3. Set the parking brake and chock a wheel not being raised. Loosen the lug bolts.
- **4.** Safely raise the vehicle and set on a jack stand.
- **5.** Remove the lug bolts. Remove the wheel. The factory lug bolts are no longer needed.
- **6.** Clean the wheel mounting surface of both the hub and the wheel. Remove the rotor/drum retainer clips if present.
- 7. Install a Wheel Spacer using the included Wheel Bolts, adding a few drops of Thread Locker onto each Wheel Bolt prior to installation. Do not add any Thread Locker to the wheel studs that are pressed into the wheel spacers.
 - Ensure the wheel spacer is sitting flush on the wheel mounting surface. Torque the wheel bolts in a star pattern to 95 ft. lbs.
- 8. Install the wheel to the Wheel Spacer using the supplied Lug Nuts. Ensure the wheel is sitting flush on the wheel spacer. Torque the Lug Nuts in a star pattern to 95 ft. lbs.
- 9. Lower the vehicle.
- **10.** Repeat Steps 3-9 on the other side.
- **11.** Re-torque all hardware after 50 miles.



Replacement Parts

6502738 Lug Nut