





Part # 11540.29

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

XHD Stinger Guard

CONTENTS:

XHD Stinger Guard

HARDWARE:


• Self-Tapping Screw

(8)

- Drill
- 9/64" Drill Bit
- Center Punch

TOOLS REQUIRED:

 Phillips Head Screwdriver

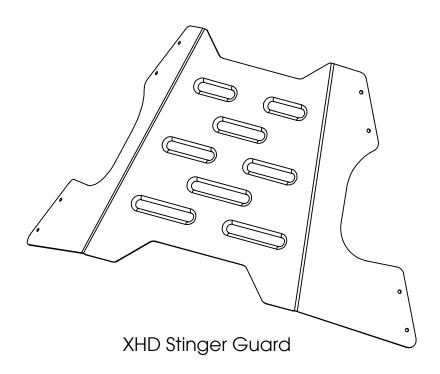





Careful attention is required to this instruction or operation, but does not generally relate to pesonal injury. Damage to your product or other property may result if you do not follow instructions.

OMIX-ADA® TECHNICAL SUPPORT

PHONE: M-F 8am - 5pm EST 1-800-449-6649 | EMAIL: techsupport@omix-ada.com

FOR WARRANTY INFORMATION VISIT: www.Omix-Ada.com








460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

XHD Stinger Guard


1. With XHD Stinger installed, allign XHD Stinger Guard and mark hole locations.

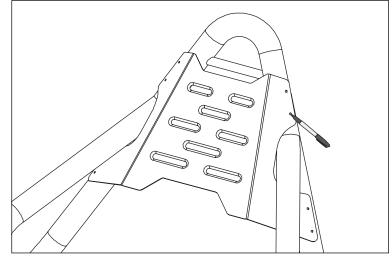

2. Remove XHD Stinger Guard, re-mark hole locations with a Center Punch, and drill pilot holes with a 9/64" Drill Bit.



Use caution when drilling pilot holes to not drill through both sides of tube and to ensure best possible fit of product.

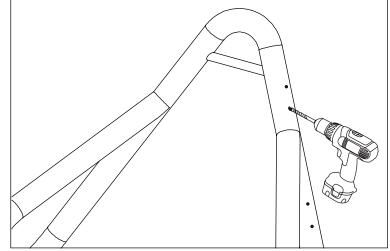

3. Place XHD Stinger Guard on XHD Stinger and attach with the supplied Self-Tapping Screws using a Phillips Head Screwdriver.

