



Installation Instructions

Full Metal Stereo Security Floor Console with External iPod – MP3 Attachment Points

76-95 CJ & Wrangler P/N: 13104.01

IMPORTANT NOTICE:

Carefully read instructions before attempting to install this product. Rugged Ridge – Outland Automotive is in no way responsible for any damage to the vehicle or personal injury that may occur during the installation or use of this product. **DRILLING REQUIRED.**

INCLUDED COMPONENTS

- | | |
|-----------------------------------|---|
| 1 – Security Floor Console | 1 – 5/16" x 1 3/4" Hex Head Bolt |
| 1 – Mounting Bracket | 3 – 5/16" Lock Nuts |
| 2 – Keys | 6 – 5/16" Flat Washers |
| 1 – Neoprene Gasket | 6 – 10-32 x 1/2" Hex Washer Phillips Screws |
| 2 – 5/16" x 5 1/2" Hex Head Bolts | 4 – 10-32 Cap Nuts |
| 2 – Seat Belt Straps | 3 – 10-32 Lock Nuts |
| 1 – Stereo Support Strap | 7 – 10-32 Flat Washers |

INSTALLATION INSTRUCTION

1. Apply Neoprene Gasket to the bottom of the main compartment.
2. Locate (4)-Cap Nuts, (4)-10-32 x 1/2" Hex Washer Phillips Screws, (4)-10-32 Flat Washers, and (2)-Seat Belt Straps. Attach Seat Belt Straps to the side of the Security Console by using the hardware listed in this step (Figure 1).
3. If not already installed, locate console padded armrest. Attach to top of security console by using (2)-Cap Nuts. If already installed skip to step #4. (Figure 2).



Figure 1



Figure 2

Locate (2)-10-32 x 1/2" Hex Washer Phillips Screws, (2)-10-32 Flat Washers, and (2)-10-32 Lock Nuts. Attach Mounting Bracket to the two small center holes on the bottom of the console by using the hardware listed in this step (Figure 3).

4. Position Security Floor Console between the seats and mark the floor directly under the three mounting holes on the bottom of the Console (Figure 3). NOTE: Check to make sure that the shift lever will not interfere with console.

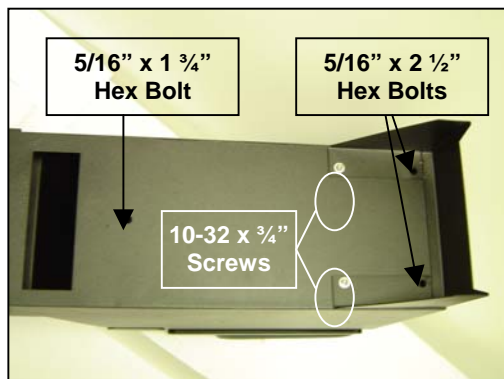


Figure 3

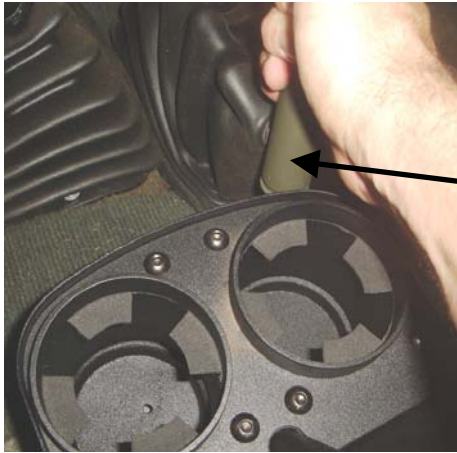


Figure 4

NOTE: When installing the console it is important to make sure that there is no interference with both the transmission and transfer case shift levers. Move console around until a position is found that allows the operation of these levers with no contact during use. If your vehicle is equipped with a fold and tumble rear seat also check for proper function of seat with minimum contact to the back of console. Seat should stay in upright position when folded forward. (Figures 5 – 6)

NOTE: This console has been designed to be used in a stock Jeep application. Some fitment issues may arise if installed in a vehicle that has been modified with a body lift, different transmission, different transfer case, and different aftermarket seats. It is the owner’s responsibility to modify these products if fitment issues arise. If vehicle is equipped with a body lift the transmission and transfer case shift levers may need to be bent to allow for proper fitment of console.

Figure 5



Check
Transmission
and Transfer
Case Levers for
No Contact
During Operation.

Fold Seat
Forward and
Check for
Contact.

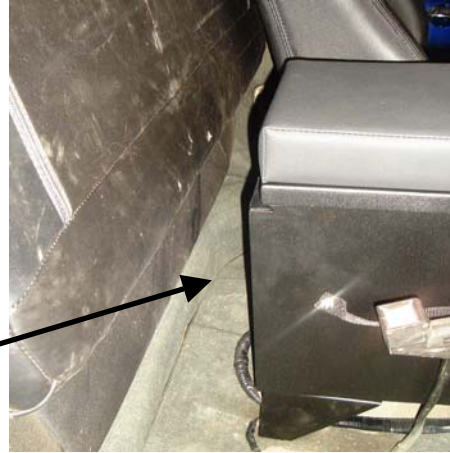


Figure 6

WARNING! Before you proceed to the next step, make sure that there is nothing under the vehicle that will be damaged by the drill bit when drilling.

WARNING! Console must be secured and tightened down before driving. Injury may result if not properly mounted.

- Remove the Security Floor Console, cut holes in the carpet where the marks are and drill a 5/16” hole on each marked spot (Figure 4). Use touch up paint or silicone sealant (not included) in any drilled holes to prevent rusting.

NOTE: If you are not installing a stereo proceed to Step 12.


NOTE: If a stereo is to be mounted in the console, an antenna extension wire will be required and is available at most stereo equipment stores.

- Run all required stereo and speaker wires to the console mounting location. Smittybilt recommends running wires in a protective wire loom and using rubber grommets when passing through any drilled holes.
- Fasten the included Stereo Support Strap to the back of the stereo.
- Insert stereo into the front of the Security Console. Follow stereo manufactures instructions (Figure 7).
- Locate (1)-10-32 Lock Nut, and (1)-10-32 Flat Washer. Attach the other end of the Stereo Support Strap to the threaded stud located on the bottom of the console by using the hardware listed in this step (Figure 8).



Insert Stereo into
Console.
Follow Stereo
Instructions

Threaded Stud
(pre- installed),
10-32 Lock Nut
and 10-32 Flat

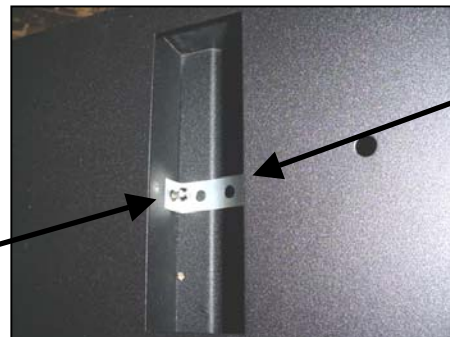

Stereo Support
Strap

Figure 7

10. Connect all wires to the stereo according to your stereo owner's manual.

Figure 8

- 11. Locate (2)-5/16" x 2/12" Hex Head Bolts, (4)-5/16" Flat Washers, and (2)-5/16" Lock Nuts. Fasten down the rear of the console through rear holes in the Security Console and holes in Mounting Bracket by using the location and holes listed in step #5 (Figure 4).
- 12. Locate (1)-5/16 x 1 3/4" Hex Head Bolt, (2)-5/16" Flat Washers, and (1)-5/16" Lock Nut. With rear bolts in place fasten down the front of the Security Console to hole previously drilled in step #5.
- 13. MP3 players and or cell phone cases can be attached to either the top metal tab and or the front tab. The MP3 player stereo attachment cord can be routed through supplied holes located on either side of stereo security lid. (Figure 10)

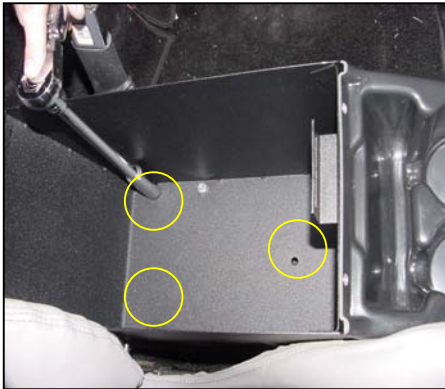


Figure 9

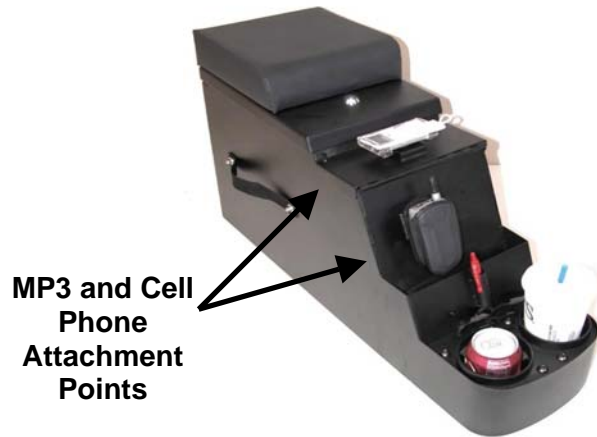


Figure 10

To lock and unlock Security Console; insert key, push down and turn.

LIMITED 90 DAY WARRANTY
Applies to Rugged Ridge by Omix-ada Inc. Products

Rugged Ridge Off Road (the Company) warrants to the original purchaser of this product that should the product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 90 DAYS from the date of original purchase, such defect(s) will be repaired or replaced or credited at the Company's sole option.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. Dated bill of sale), specification of defect(s) to the place of purchase or, with prior approval from the Company (Return Authorization Number is required), freight pre-paid to the Company address listed below.

This warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident or by acts of nature. THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERHCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN THE PERIOD OF 90 DAYS FROM DATE OF ORIGINAL PURCHASE.

IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Omix-ada Inc.
 460 Horizon Dr. Suite 400
 Suwanee, Georgia 30024

Rugged Ridge – Outland Automotive
Made in Taiwan

