


## BODY AROMR 4X4 TJ-1951 FRONT TUBLAR BUMPER

Parts Included	Qty
Front Bumper	1

Tools Needed
Ratchet with # 55 Torx Bit

### Section One

1. Remove factory bumper (If applicable) by removing the two top and two bottom bolts. **Note:** Save hardware for later use.
2. Carefully place front bumper on factory frame. Align the holes in the bumpers mounting plate with the holes in the frame. Mount using the factory hardware you removed in Step 1

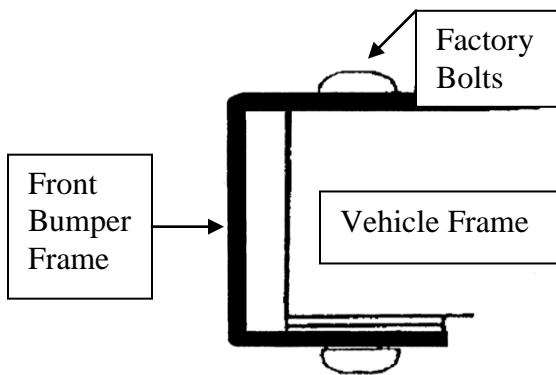

**NOTE:** To protect your investment, wax this product after installing. Regular waxing is recommended. Do not use any type of polish/wax that contains abrasives that could damage the finish. The finish is warranted for manufacturing defects for a period of 60 days after purchase. Rock chips and scratches are not considered to be manufacturer defects. Surface rust can occur, it is the responsibility of the user to properly maintain the finish of the product.

**NOTE:** Carefully read entire instructions thoroughly before attempting to assemble and/or install this product. Body Armor 4x4 is in no way responsible for any damage to the vehicle or personal injury that may occur during the installation or use of this product. CAUTION: This product is designed primarily to enhance the appearance of the vehicle. Do NOT rely on it in any way to protect against injury or death in the event of an accident. "ALWAYS WEAR YOUR SEAT BELT"