


Advantage BedRack

Assembly and use Instructions-

To assemble quickly and properly read all instructions prior to assembly.

Once you open the box, make sure all of the components are enclosed. If you find a discrepancy, call us and we will help you with any questions you may have. Our toll free number is 888-722-5240. If you call on the weekend or after hours, leave a message and we will get back to you promptly. Our time zone is PST.

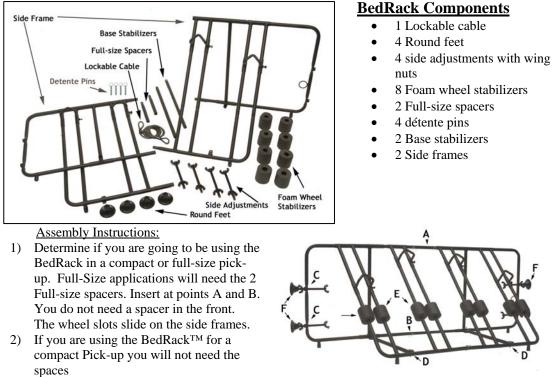

- 3) Connect the two frames, making sure that the "buttons" snaps into place holding the 2 frames together securely.
- 4) Remove the loose wing nut from each of the 4 side adjustments, then thread side adjustments in at point C towards the outside of the rack, the stationary wing nut towards the inside of the rack. Repeat for all 4 side adjustments on both side frames.
- 5) Thread on the remaining wing nuts on the outside of the side framed to secure the side adjustments.
- 6) Press the round feet onto outside of side threaded adjusters as in point F
- 7) Connect the 2 base stabilizers with détente pins at point D to both the front and back of the BedRack.
- 8) Slip the 8 foam wheel stabilizers on the stabilizing bars

HEIMINGER HOLDINGS, LLC Makers of Advantage® Sports Rack, HitchMate® Cargo Products, CommuteMate[™] Travel Enhancements, GarageMate® Organization/Tools Products 2222 Queen Street, Bellingham, WA 98229-4753 USA www.heininger.biz Phone: 888-722-5240, Fax: 360-756-2414, At this point the BedRack[™] is fully assembled. Now you are ready to install the rack into your pick-up.

- 1. Set the BedRackTM in the bed of the pick-up with side adjustments close to the cab
- 2. Tighten the side adjustments against the bed wall until they are snug and secure. Then tighten the outside wing nut securing the side adjustments in place.
- 3. Place up to 4 bikes in the BedRack[™] with the rear wheel in the rack. Loosen the wheel tensioner so that the rear bike tire can be fully inserted into the BedRack[™]. Slide the wheel tensioner snug against the rear wheel and tighten the fastening thumb screw on the side. Should look like picture below. Repeat for each bike.
- 4. Press the foam wheel stabilizers against the rims to keep give the wheel a snug fit.
- 5. Secure bicycles using enclosed locking cable by looping the cable through the bike frame(s) and BedrRack[™], then attach the pad lock to the end-loops.



Also use the BedRackTM as a bike rack when camping. Now you don't have to lay your bikes up against a tree, vehicle or lay them on the ground.



If you have questions on how to assemble the BedRack please call **1-888-722-5240**. Hours of operation 8-5PM M-F PST.

HEININGER HOLDINGS, LLC Makers of Advantage® Sports Rack, HitchMate® Cargo Products, CommuteMate™ Travel Enhancements, GarageMate® Organization/Tools Products 2222 Queen Street, Bellingham, WA 98229-4753 USA www.heininger.biz Phone: 888-722-5240, Fax: 360-756-2414,