



Vacuum Pump Relocation Bracket

1. Remove vacuum pump from factory bracket.
2. Cut front factory bracket as shown in Photo 1. Completely remove this tab with stud.

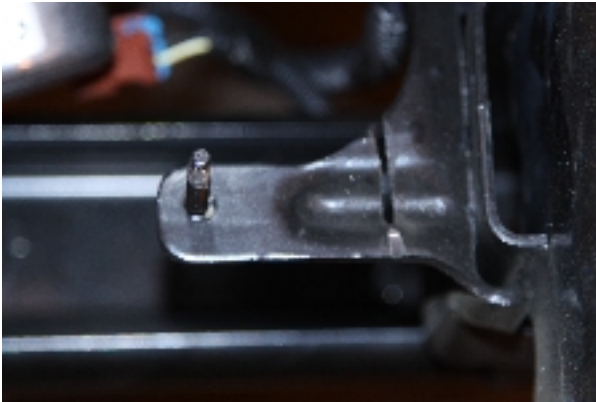


Photo 1

3. Install new bracket using 1-6mmx1.00x20mm bolt and factory stud as shown in photo 2. Use 6mm nylock nut on factory stud.



Photo 2

4. Install pump as shown in photo 2 using 2-6mmx1.00x35 bolts and flange nuts removed from factory studs. Check clearance at steel line above pump and clearance below pump above stabilizer. Bend bracket if necessary.

Tech Support Line (308) 750-4690