




**Crown Automotive Sales Co., Inc.**


**JK Windshield Light Bracket Kit  
Replaces Part Number: 82210556AB**

**Kit Contents:**

- 1** – Left Light Bracket
- 1** – Right Light Bracket
- 1** – Antenna Bracket
- 1** – Antenna Grommet
- 4** – Torx Screws

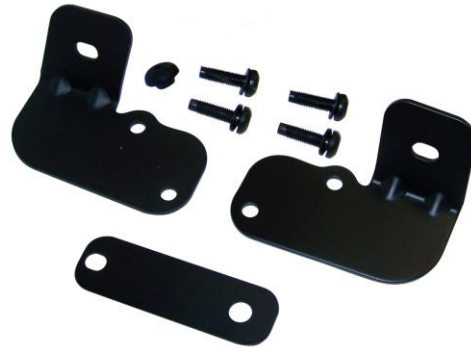


- 1.** Ensure that all components in kit are accounted for.
- 2.** Remove the front windshield reinforcement bracket bolts from the left and right side of the vehicle. (See Figure 1) These can be disposed of.
- 3.** Install light brackets using the attached hardware. (See Figure 2) Ensure that the light mounting surface is level. Torque hardware to 15 ft. lbs.
- 4.** Install an auxiliary light onto the left light bracket and torque to manufacturer's spec.
- 5.** Install the grommet into the round hole on the supplied antenna bracket. Soap and water helps with this.
- 6.** Slide the antenna through the grommet with the button side up.
- 7.** Install an auxiliary light through the slotted hole in the antenna bracket first, then through the right light bracket. (See Figure 3) Loosely install the nut onto the light.
- 8.** Adjust the antenna bracket so the antenna cannot contact the auxiliary light housing. Torque nut to spec.
- 9.** Wire auxiliary lights according to the manufacturer's instructions.
- 10.** Re-torque all hardware after 500 miles.

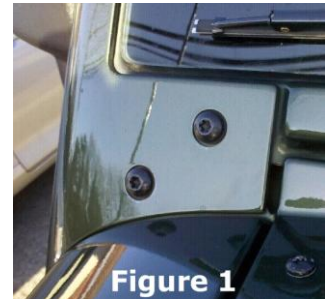

**Figure 1**



**Figure 2**

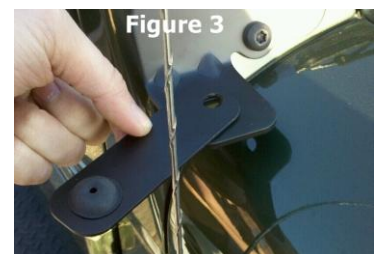

**Figure 3**

*While every attempt is made to ensure that the information contained in these instructions is correct, no liability can be accepted by the authors for loss, damage, or injury caused by any errors in, or omissions from the information given. All service should be performed by qualified mechanics. Crown Automotive Sales Co., Inc. cannot be held responsible for any mechanical work performed. Standard and accepted safety precautions should be used in every procedure.*