

**Kit# RTBA65K**  
**Optional Rear Trackbar**  
**For 6" TJ**



**6" REAR TRACKBAR KIT**  
**SPECIAL INSTRUCTIONS**

*NOTE:* This is an accessory kit for TJ's lifted 5-6" that are NOT equipped with a SKYJACKER® suspension



*Rear Trackbar Bracket (installed) driver side view*

Place new trackbar relocating bracket over the OEM trackbar mount at differential. Place the new 12mm x 70mm bolt through the original trackbar location. Use the supplied spacer (#54314) to fill the space where the OEM track bar was located. Apply lock nut and tighten. Drill a 1/2" hole through the hole in the driver's side of the new bracket. Install the 1/2" x 1 1/4" bolt with washers on each side through the newly drilled hole and tighten with self locking nut. Install the 5/16" x 1" fine thread bolt, washers and nut into the forward hole of the new bracket. Place the trackbar into the upper hole of the new bracket using the original hardware and tighten once vehicle has been lowered to the ground.

**Kit# RTBA65K**  
**Optional Rear Trackbar**  
**For 6" TJ**



**6" REAR TRACKBAR KIT**  
**SPECIAL INSTRUCTIONS**

*NOTE:* This is an accessory kit for TJ's lifted 5-6" that are NOT equipped with a SKYJACKER® suspension



*Rear Trackbar Bracket (installed) driver side view*

Place new trackbar relocating bracket over the OEM trackbar mount at differential. Place the new 12mm x 70mm bolt through the original trackbar location. Use the supplied spacer (#54314) to fill the space where the OEM track bar was located. Apply lock nut and tighten. Drill a 1/2" hole through the hole in the driver's side of the new bracket. Install the 1/2" x 1 1/4" bolt with washers on each side through the newly drilled hole and tighten with self locking nut. Install the 5/16" x 1" fine thread bolt, washers and nut into the forward hole of the new bracket. Place the trackbar into the upper hole of the new bracket using the original hardware and tighten once vehicle has been lowered to the ground.


**Kit# RTBA65K  
Optional Rear Trackbar  
For 6" TJ**



**6" REAR TRACKBAR KIT  
SPECIAL INSTRUCTIONS  
CONTINUED**

Insert two small stepped spacer halves into each rod end of the rear trackbar. This new trackbar replaces the OEM trackbar. Install the short end of the bar to the frame with the bend facing upwards. Then install the other end into the SKYJACKER® trackbar bracket located at the differential.

*passenger side view*

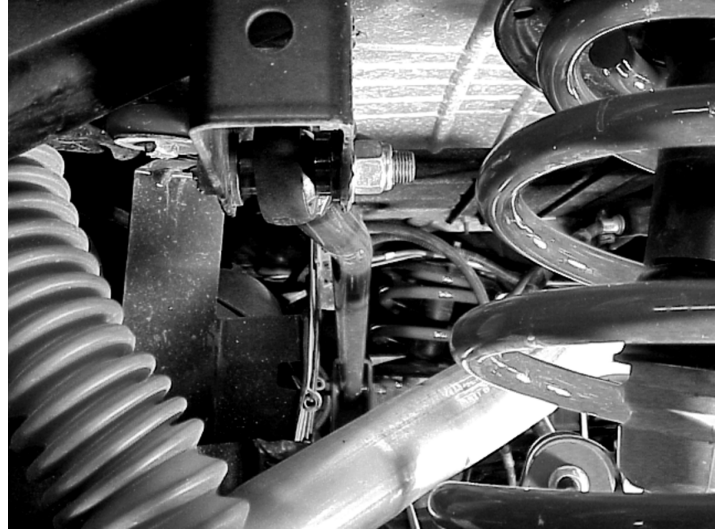

*Rear Trackbar installed (notice the location of the bend)*

**Kit# RTBA65K  
Optional Rear Trackbar  
For 6" TJ**



**6" REAR TRACKBAR KIT  
SPECIAL INSTRUCTIONS  
CONTINUED**

Insert two small stepped spacer halves into each rod end of the rear trackbar. This new trackbar replaces the OEM trackbar. Install the short end of the bar to the frame with the bend facing upwards. Then install the other end into the SKYJACKER® trackbar bracket located at the differential.

*passenger side view*



*Rear Trackbar installed (notice the location of the bend)*