



852-Light Pods

852-171 Gloss Black

852-174 Texture Black

Sold in Pairs.

Bolts onto 2007 to current Wrangler JK Olympic front Boa Bumpers, Rescue Winch Bumpers and Rock Bumpers. Required to install factory Fog lights and a winch with Boa and Rescue Bumpers.

852- Light Pods easily bolt into face of Olympics' Boa Bumpers, Rescue Winch Bumpers and Rock Bumpers.

Can be installed on any model and year vehicle where there is a hole in the face of the bumper to accommodate the back of the fog light.

DO NOT TIGHTEN HARDWARE UNTIL ALL HARDWARE IS IN PLACE, OR INSTRUCTED TO DO SO.

Contents:

Two- Light Pods, consisting of :

- 2- Front Face Plates
- 2- Light Housing Body
- 2- Wire Guards
- 2- Rubber Grommets

Hardware:

- 8 - 8/32 X 1 1/4" Phillips Pan Machine Screws
- 8 - 8/32 X 3/4" Phillips Pan Machine Screws
- 16 - 8/32 Nylock Nuts
- 16 - 8/32 Jam Nuts
- 4 - #14 Self Threading Tek Screws

Tools Required:

- Small Phillips Head Screw Drive
- 11/32 wrench, socket or small Crescent Wrench
- 3/8 Socket
- 1/4" Ratchet for Socket

Optional Tools:

Drill Motor and socket adapter to install 3/8 socket.



Step 1. Place four of the 8/32 x 1 1/4" machine screws through the mounting holes in the Face Plate and screw on two of the 8/32 jam nuts to each screw. Secure one jam nut to the face plate, leave the other jam nut about 3/4" to 7/8" from the interior surface of the face plate.


Step 2. Install the Rubber Grommet into the face plate. From the interior side of the face plate push and rotate the fog light into the Light Grommet. Line up the four mounting positions on the Fog Light with the four machine screws you installed on the face plate. You can adjust the jam nut as needed. Place the 8/32 nylock Nut on the machine screw and secure the fog light. Now follow the same process and assemble the other face plate.

DO NOT INSERT FOG LIGHT INTO LIGHT HOUSING BODY UNTIL INSTRUCTED TO DO SO IN Step. 4:


Step 3. Position the Light House body against the face of the Bumper lining up the existing mounting holes in the bumper and secure them in position using the 8/32 X 3/4 machine screws and nylock nuts.

Step 4. Now, insert Face Plate with Fog Light into the Light House Body. The face plate will butt up against the light housing. Position the light guards over the light housing, lining up the mounting holes in the light guards with the holes on the sides of the light housing and insert #14 self threading Tek Screw. Fasten with ratchet and 3/8 socket, if you have a Socket adapter for use with a drill motor use it.

Please contact Olympic at 800 777 0878 for any assistance needed.

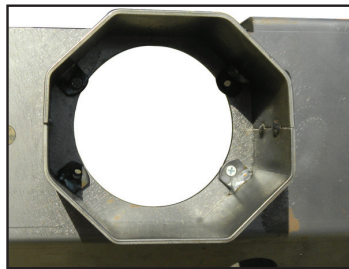

Housing attached to Bumper.

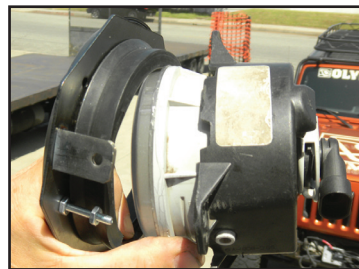

Inserting Fog Light into Faceplate.



Faceplate hardware assembly.



Light Guard shown installed.