




## Stainless Steel Hood Catch Kit Installation Instructions Part #: RT34083 & RT34084

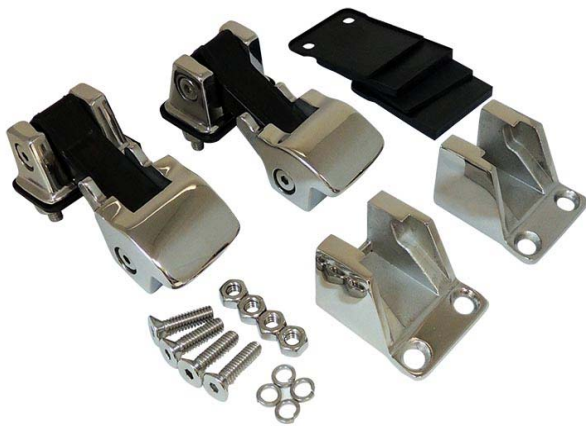

### Kit Contents

- 2 – Hood Catch Assemblies w/ Hardware
- 4 – Plastic Spacers

### Installation

1. Ensure that all components in kit are accounted for.
2. Open the hood and remove the upper and lower hood catches.
3. Install the upper hood catches and spacers using the provided hardware. The tapered spacers should be used on CJ's and the flat spacers should be used on YJ's (see image).
4. Install the lower hood catches using the provided hardware ensuring that the catch is oriented correctly.
5. Close the hood and ensure that the upper and lower hood catches are aligned. Improper alignment may cause premature wear to the rubber portion of the catch.

