

# LOD OFFROAD

## Optional 3<sup>rd</sup> Brake Light Mount Installation Instructions




1. If you already have a rear bumper installed you need to start by removing the isolator mount on the rear door. The 3<sup>rd</sup> brake light tabs need to be bolt underneath the isolator mount. Otherwise, begin with mounting the two brackets to the door using the top holes from the factory tire mount. Leave these brackets loose until the next step is complete.



2. Bolt the third brake light mount to the mounting tabs. Use the four (4) 5/16" x 1" bolts to achieve this. Tighten the bolts on the rear door first. Then adjust the mount so that it is straight up and down and tighten those bolts as well.



3. Plug the factory light back into the harness plug.

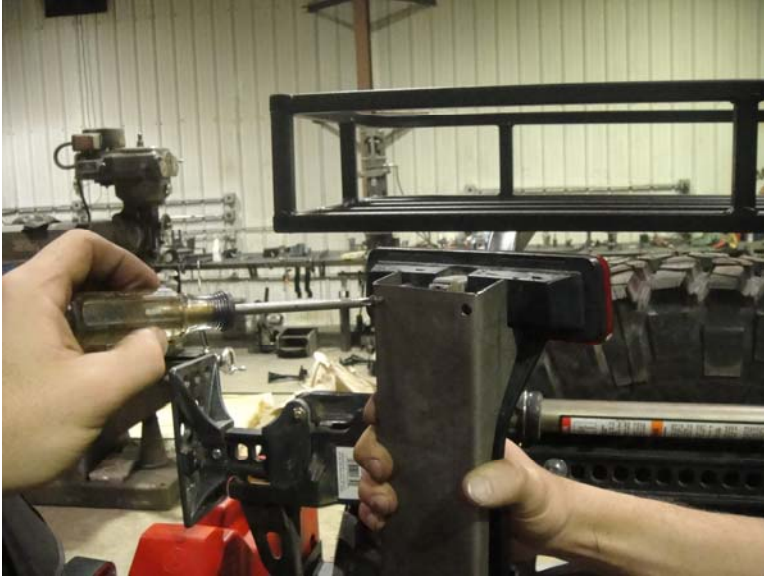

4. Screw the light into the mount. Use the screws provided with the bolt kit for the top two holes. Use the factory screws for the bottom two.

