


KARGO MASTER®

SAFARI

55015 Installation Instructions

Step 1


- Remove 5 TORX bolts on both the driver and passenger side using a T40 drive. Remove the top three bolts on the side panel and both bolts near the windshield. See Picture

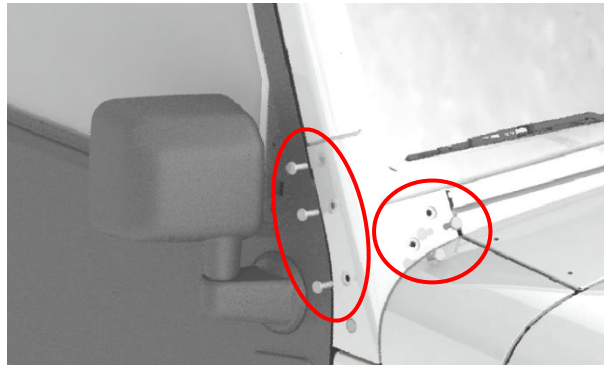

Step 2

- After removing all 10 bolts, install 55015. The A-Frame will line up with the holes from bolts previously removed.
- In between the A-frame and the body of the JEEP, be sure to insert Nylon spacer. Bolt in place using a M8 x 35MM button head screw with a M8 split lock washer and a M8 flat washer in place of previously removed TORX bolts.

****DO NOT TIGHTEN ANY BOLTS UNTIL ALL 10 BOLTS ARE INSTALLED****

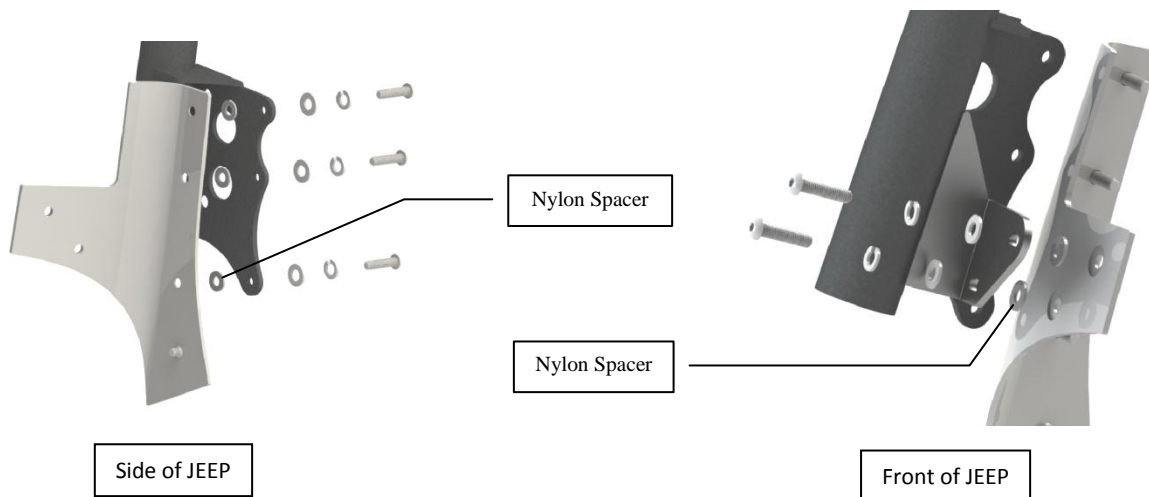

Step 3

- **TIGHTEN** all bolts from previous steps.



