



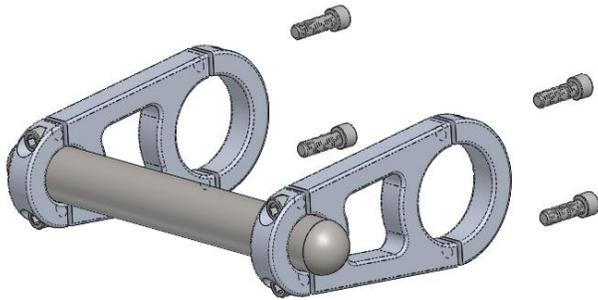

## Grab Handle (60245/60250) Installation Instructions

### Step 1

- Clamp and bolt grab handle (61000-00-085) to the small end of the standoff brackets (60321/60320) using four 5/16" x 1" socket head bolts.

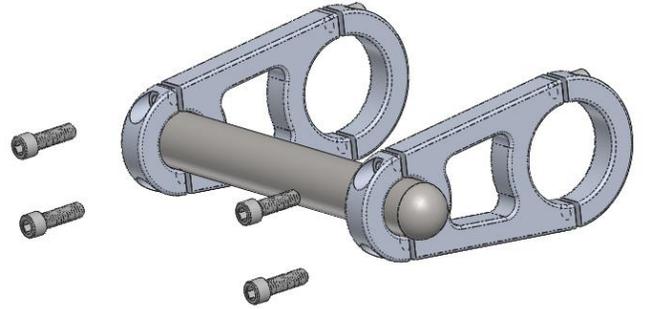


### Step 2

- Bolt large end of the standoff brackets (60321/60320) using four 5/16" x 1" socket head bolts to the roof rails (55020,55025,55045).

### Step 3

- Position your Grab handle in desired location.
- Tighten bolts to secure grab handle.

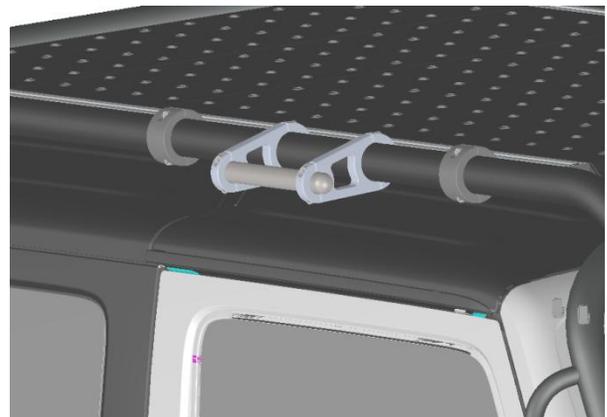

Your installation is now complete.