



*Performance Spoken Fluently*

## Instruction Manual




### 3.8L & 3.6L Pentastar Exhaust System System



**JEEP Wrangler  
2007-2015**

RIPP Exhaust System for 2007-2015 JEEP Wrangler JK 3.8 & 3.6

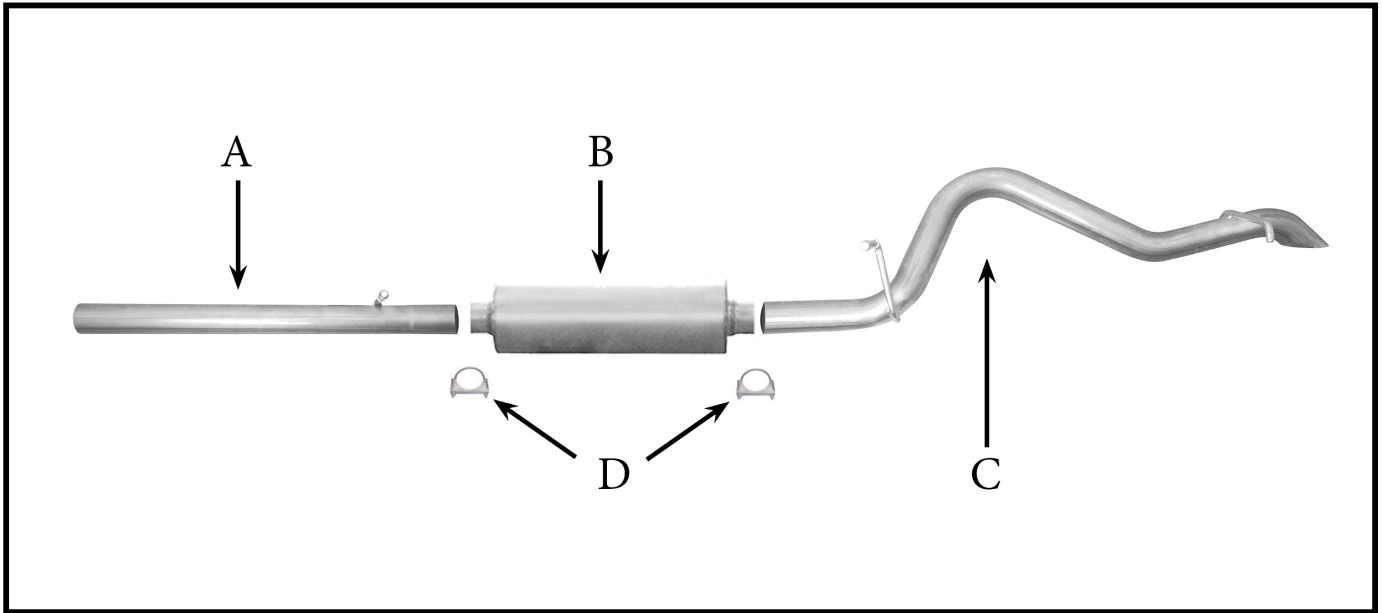

ITEM	PART	QUANTITY	DESCRIPTION
A	999700823S	1	2.5" Headpipe with welded hanger
B	788200SR	1	Superflow SFT Muffler
C	999700824S	1	2.5" Tailpipe
D	5757	3	2.5" clamp

Thank you for purchasing our RIPP Superchargers Exhaust System for your vehicle.

If you need further assistance, please email us at [TECH@RIPPMODS.com](mailto:TECH@RIPPMODS.com) or call 718-815-1313


Monday through Friday, 8am to 5 pm.

# Installation Instructions

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when working under the vehicle, set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

**SUGGESTED TOOLS:** 1/2", 9/16", 15mm wrenches & sockets, WD-40, jack stands

1. Disconnect the negative battery cable before removal of OEM exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual.
2. Remove clamps holding factory exhaust at the headpipe and muffler. Work from rear of the vehicle to front undoing rubber exhaust hangers.

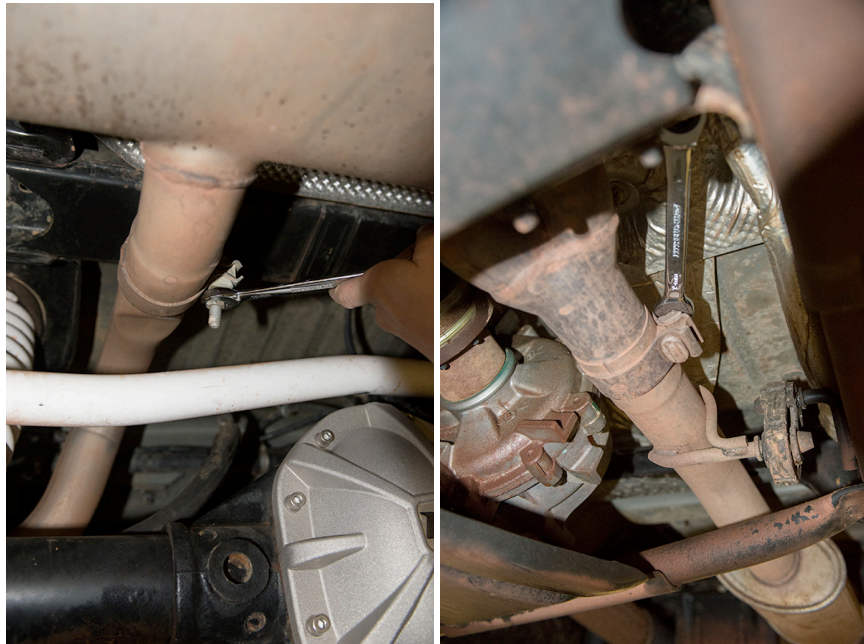

3. Jack up rear of the vehicle to relieve slack on the rear axle to remove factory exhaust pipe. (**Note: Removing transmission skid plate may make it easier to remove factory exhaust system.**)
4. Install headpipe #A onto your existing stock front headpipe using clamp #D to secure pipes together. Do not tighten. Insert welded hanger into rubber grommets.
5. (**If installing on 2 door cut 19" off end of the headpipe.**) Slide muffler #B over headpipe 1.5-2" with the louvers facing towards the converter. Use a jack stand to support the muffler. Use clamp #D to secure the muffler to the headpipe. Do not tighten. Muffler inlet is looking into the louvers.
6. Slide the over axle tailpipe #C into the muffler 1.5-2". Use clamp #D to secure tailpipe to muffler. Do not tighten. Insert welded hangers into rubber grommets.

RIPP Superchargers Exhaust systems are designed on a factory stock vehicle. Any aftermarket products installed could increase the sound levels of the exhaust.

**Make sure there is a 1" clearance from ALL rubber brake lines, shock boots, lines, tires, etc. to prevent heat related damage or fire.**

