

420 N. Grove, Richardson, TX 75081 Tele: (800) 527 - 4345 Fax: (800) 442 - 5263 Web site: www.goindustries.com E-mail: gosupport@goindustries.com

## **Rock Guard Steps**

Installation Instructions

**94400** Jeep Wrangler 4-Door 2007-2015

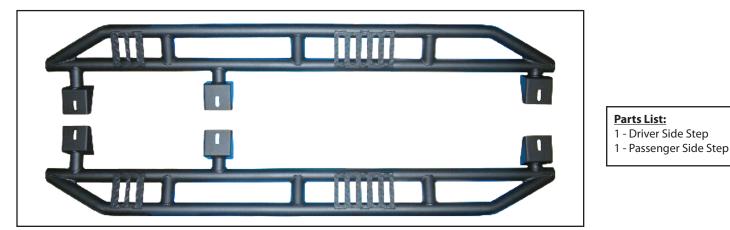


Diagram 1

## Note: Completely read instructions before beginning installation!


1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase.

2. Starting on either the driver or passenger side remove the three body mount bolts from the underside of the Jeep. The large washer should remain on the bolts. View **Diagram 2** for the body mount locations.

3. Chose the step that lines up with the body mounts and place it up to the bottom of the body mounts on the Jeep. Insert the factory bolts with the factory washer through the mounting holes in the step and thread into the body mount holes. Repeat this procedure for the opposite side.

4. The steps are slightly adjustable and can be positioned to the installers preference. Tighten all bolts at this time. **Do not use a pneumatic impact to tighten hardware.** 

## **Driver Side Rock Guard Step Installed**

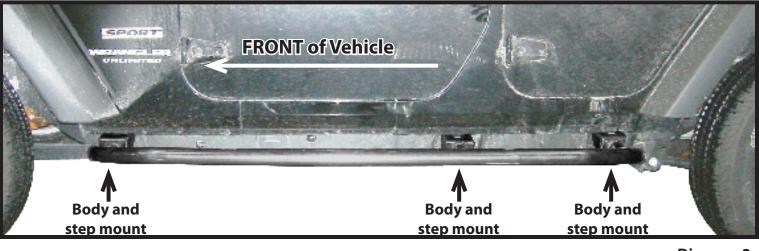

## Diagram 2

Thank you for choosing Go Industries' products. For additional installation assistance, please call Technical Support (800) 527-4345 or (972) 783-7444