

131- Safari Doors

Olympic 4x4 Products are serviced by our factory. We provide answers to installation questions. We ship parts ASAP. Try us before the hassle of returning Olympic 4x4 Products to your retailer or mail order specialist.


For assistance please call (800)777-0878.



TJ Wrangler shown with Safari doors and with adventure netting, arm pads, top hat rack, and mountaineer rack sold separately.

Safari Doors are an appearance item only. They are designed to enhance styling only. They are NOT intended to provide protection in the event of a roll over, accident, collision, or other mishap. They have not been certified or approved by any government agency. To prevent dome light from being on, pull the dome light interrupt fuse as described in your instruction manual.

Optional accessories: 117-Safari mirror, 133-Adventure net, and 135-Arm pads

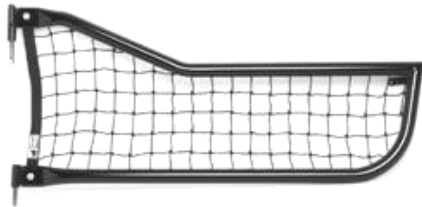


Safari door with optional Adventure netting



Safari door with optional arm pad.

Contents

- 2 Safari doors
- 2 Upper door mounting brackets with threaded shafts.
- 2 Lower door mounting brackets with unthreaded shafts.
- 2 lock mechanisms (left and right)

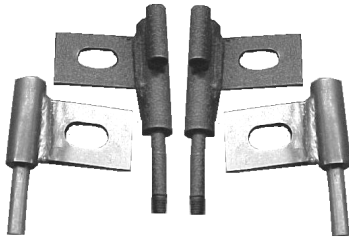

Mounting brackets


Hardware list

- 4 3/8" hex head bolts
- 4 3/8" NyLock nuts
- 8 3/8" flat washers
- 2 5/16" NyLock nuts
- 4 1/4" x 1 1/4" hex head bolt
- 4 #12 flat washer
- 4 #1/4-16 NyLock nut

Tools required

1/2", 5/16", and 9/16" wrenches
Black electrical tape

- Step 1. Remove existing doors by removing the lock nuts that secure the OEM hard doors. Use a 5/16" wrench to remove those nuts.
- Step 2. Insert the upper and lower door mounting hinge brackets into the tube openings in the safari doors.

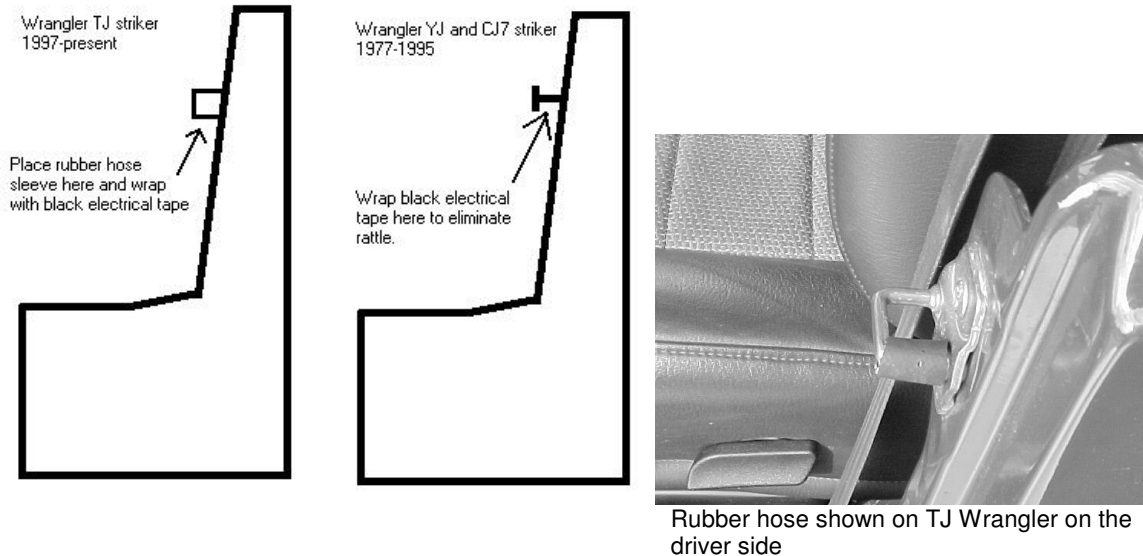

Rubber hose shown on TJ Wrangler on the driver side

- Step 3. For 1977-1995 Wranglers, wrap black electrical tape around the door striker bolts. For 1997-present Wranglers, Place the black rubber hose sleeve over the U-bolt style door strikers and then wrap with black electrical tape.
- Step 4. Insert the safari door hinge brackets into the hinge brackets on your jeep. The 3/8" hinge shafts have been painted over. If you experience any difficulty when inserting the shaft into the hinge bracket, you will need to remove the paint on the hinge shaft. You can do this by rocking the hinge shaft back and forth in the hinge bracket or you may sand the paint off the hinge shafts.
- Step 5. Install lock on each safari door using 1/4" x 1 1/4" hex head bolts, flat washer and secure with 1/4" NyLock nut. You may install the lock with either the opening latch towards the top of the door or the bottom of the door
- Note:** When placing safari door with brackets on to the windshield hinge and lower door mounting brackets, you may need to increase or decrease the spread between the tubes. To do this gently pull or press the tubes together or apart by putting your right hand on the lower door tube and your left hand on the top tube and gently pull or push them until they fit into the mounting pivots.
- Step 6. For 1977-1995 Wranglers, close the door so that the rotors on the latch are positioned in the middle or to the front of the striker. You may need to open the door and push it towards the hinges to center the rotors. On 1997-present Wranglers no modification is needed.
- Step 7. Using a 9/16" wrench, tighten the 3/8" bolts that secure the upper and lower door hinge brackets inside the safari door.
- Note:** Tightening these bolts may scratch the paint surrounding the bolts. Tighten them very slowly.
- Step 8. Open and close your safari doors, the rotors and the striker bolt should line up perfectly.
- Step 9. Secure safari door to the jeep using a 5/16" NyLock nut on the upper door hinge brackets.