



350-532 INSTALLATION INSTRUCTIONS
2005-07 Dodge Magnum RT 5.7L/6.1L SRT-8
2005-07 Chrysler 300C 5.7L/6.1L SRT-8
2006-07 Dodge Charger RT 5.7L/6.1L SRT-8
2006-07 Jeep Grand Cherokee 6.1L SRT-8

Thank you for purchasing the PowerAid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Contact AIRAID @ (800) 498-6951 8:00 AM - 5:00 PM MST Weekdays for questions regarding fit or instructions that are not clear to you. Your PowerAid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, please contact AIRAID.

Thank you for selecting AIRAID.



**Also available for your Dodge Magnum RT /
Chrysler 300C / Dodge Charger, the Airaid
Intake System. Call for Details!**

Parts List

- 1- Power Plate
- 1-"O" Ring
- 4- 6mm x 60mm Bolts
- 4- 6mm Flat Washers

Tool List

- 8mm Socket
- 10mm Socket
- Ratchet


Installation Instructions. Read Me!

1. **DISCONNECT NEGATIVE (-) BATTERY CABLE.**
2. Remove air intake assembly.
3. Remove the original (4) bolts from the throttle body.
4. Install power plate using supplied (4) 6mm x 60mm bolts and (4) 6mm flat washers. (Ref. "B")
5. Inspect & Test throttle linkage for full Open & Closed travel before driving. Some cruise or kickdown cables may require adjustment. Please refer to your vehicles service manual.
6. Reinstall the throttle body air intake assembly using **Step 2** as an example.
7. Reconnect negative battery cable. Enjoy!

The sound of power...The "whistle" means its working!

Included with your Poweraid Spacer is a sticker with a California Air Resources Board (C.A.R.B.) Executive Order (EO) number. This sticker must be placed in plain view inside of the engine compartment. Failure to do so may prevent you from passing a smog inspection.

Ref. "A"- (1) Power Plate
(1) "O"-Ring

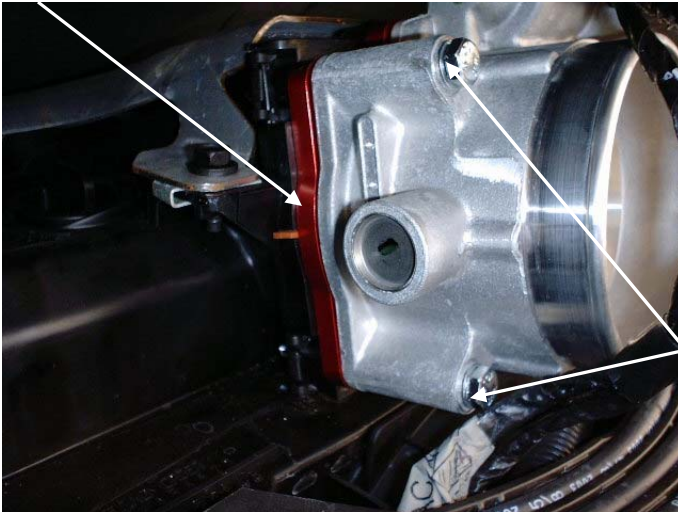

Ref. "B"- (4) 8mm x 60mm Bolts
(4) 8mm Washers