

IMPORTANT: Read And Understand All Instructions Before Installation • QUESTIONS? CALL 1-800-982-1180

BILLET SIDE MIRROR SURROUNDS

Time To Install: Approx. 20 Minutes


Tool Needed: T-40 Torx Bit



1. Extremely Important: Clean the area where the Side Mirror Surround is to be installed. If the area where the trim accessory is to be installed is not clean, dry, and free of any vinyl dressing, the trim accessory piece will not stick in place. Begin by cleaning the area thoroughly with a good non-residue cleaner such as Windex, or just clean thoroughly with soap and water and dry completely.



2. Using a T-40 Torx Bit, remove the mirror from its base. (See photos 2A & 2B)

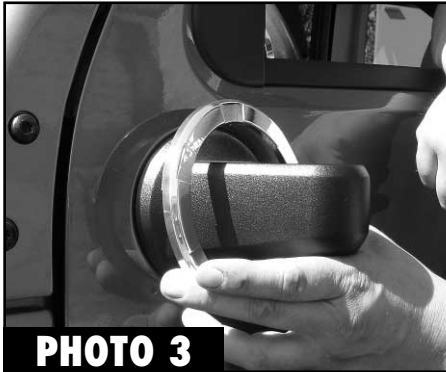

3. Position and Adhere the Mirror Surround. Before removing any heavy duty 3M Tape backing from the Trim Piece, loosely place it in position to verify how it will fit. Make sure the part lines up with any openings and fits side-to-side and top-to-bottom. Next peel off all the paper from the double-sided tape on the back of the Trim Piece. Carefully place the Trim Piece in position. Push and hold firmly for a few seconds.



4. Using a T-40 Torx Bit, re-install the mirror to its base. (See Photos 4A & 4B) Repeat for the other side and you are finished. (See Photo 4C)



RealWheels Corporation • 3940 Tannahill Drive • Gurnee, IL 60031

847-662-7722 • Fax 847-662-7744 • www.realwheels.com • info@realwheels.com • toll-free 1-800-982-1180