

IMPORTANT: Read And Understand All Instructions Before Installation • QUESTIONS? CALL 1-800-982-1180

BILLET FOG LIGHT SURROUNDS

Time To Install: Approx. 15 Minutes



PHOTO 1

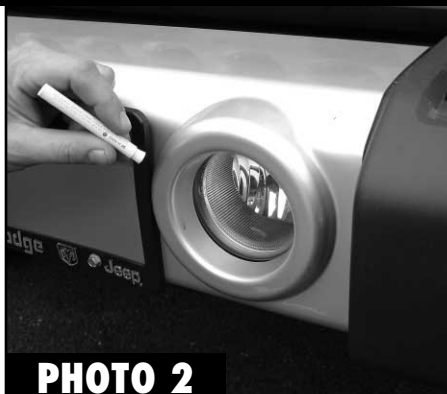


PHOTO 2

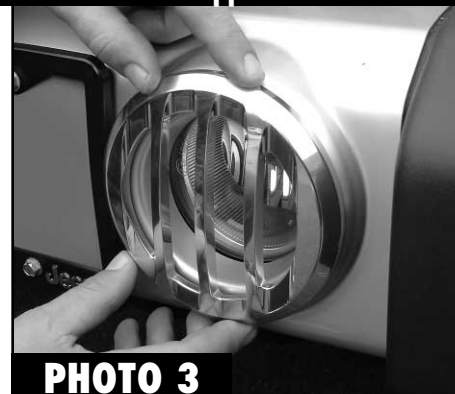


PHOTO 3

1. Extremely Important: Clean the area where the Fog Light Surrounds are to be installed. If the area where the trim accessory is to be installed is not clean, dry, and free of any vinyl dressing, the trim accessory piece will not stick in place. Begin by cleaning the area thoroughly with a good non-residue cleaner such as Windex, or just clean thoroughly with soap and water and dry completely. **Note: Do not** use the 3M Tape Primer as a cleaner.

2. Important: Prime only the plastic area where the Fog Light Surrounds are to be installed. After the areas are completely cleaned and dry, you must then coat these plastic areas with 3M Tape Primer 94 (included). Thoroughly coat the cleaned area where the trim is to be installed with the Primer 94 and wait 5 minutes before installing the Trim Piece.

3. Position and Adhere the Fog Light Surrounds. Before removing any heavy duty 3M Tape backing from the Trim Piece, loosely place it in position to verify how it will fit. Make sure the part lines up with any openings and fits side-to-side and top-to-bottom. Next peel off all the paper from the double-sided tape on the back of the Trim Piece. Carefully place the Trim Piece in position. Push and hold firmly for a few seconds. Repeat for the other side.

STAINLESS STEEL SIDE MIRROR BEZELS

Time To Install: Approx. 15 Minutes

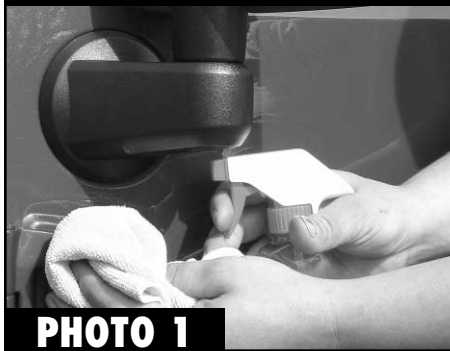


PHOTO 1



PHOTO 2A



PHOTO 2B

1. Extremely Important: Clean the area where the Side Mirror Bezel is to be installed. If the area where the trim accessory is to be installed is not clean, dry, and free of any vinyl dressing, the trim accessory piece will not stick in place. Begin by cleaning the area thoroughly with a good non-residue cleaner such as Windex, or just clean thoroughly with soap and water and dry completely.

2. After cleaning area to be applied, remove tape backing and carefully twist the Mirror Bezel around the mirror arm and **evenly place** the Mirror Bezel into place and push firmly for a few seconds. Repeat for the other side.



PHOTO 2C

RealWheels Corporation • 3940 Tannahill Drive • Gurnee, IL 60031

847-662-7722 • Fax 847-662-7744 • www.realwheels.com • info@realwheels.com • toll-free 1-800-982-1180