

**IMPORTANT: Read And Understand All Instructions Before Installation • QUESTIONS? CALL 1-800-982-1180**

**TOW HOOKS**

**Time To Install: Approx. 30 minutes**

Tool Needed: 7/64" and 1/16" Allen Keys

**REAR TOW HOOK**




**PHOTO 1**

**1.** Begin by placing the top half of the tow hook cover over the factory tow hook.



**PHOTO 3A**

**3.** Insert all three screws (See Photo 3A), and tighten using a 7/64" allen key (See Photo 3B).

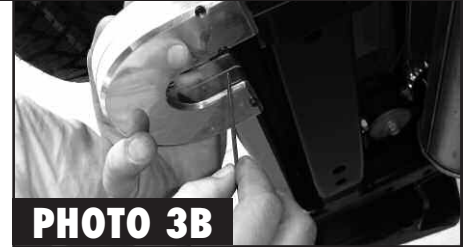

**PHOTO 3B**



**PHOTO 2**

**2.** Place the bottom half of the tow hook cover over the factory tow hook and align the screw holes.




**PHOTO 4A**

**4.** Next tighten up the center set screw by using a 1/16" allen key (See Photo 4A). And you're finished (See Photo 4B)



**PHOTO 4B**

**FRONT TOW HOOKS**

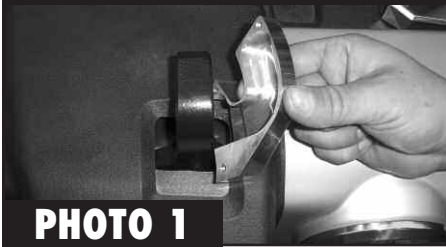

**PHOTO 1**

**1.** Begin by placing one half of the tow hook cover over the factory tow hook.



**PHOTO 3A**

**3.** Now insert all three screws through the tow hooks (See Photo 3A), and tighten the screws using a 7/64" allen key (See Photo 3B).



**PHOTO 3B**



**PHOTO 2**

**2.** Place the other side over the factory tow hook.



**PHOTO 4**

**4.** Now insert the small supplied set screw through the inner portion of the tow hook and tighten. Repeat for the opposite side and you're finished!

**RealWheels Corporation • 3940 Tannahill Drive • Gurnee, IL 60031**

**847-662-7722 • Fax 847-662-7744 • www.realwheels.com • info@realwheels.com • toll-free 1-800-982-1180**