

IMPORTANT: Read And Understand All Instructions Before Installation • QUESTIONS? CALL 1-800-982-1180

DOOR HINGE

Time To Install: Approx. 45-90 minutes

Tool Needed: Razor Blade, T-50 Torx Driver, Grease



PHOTO 1A



PHOTO 2A



PHOTO 3A



PHOTO 1B



PHOTO 2B

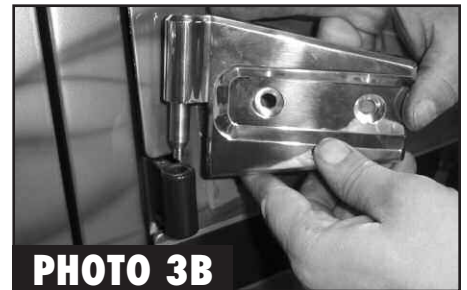


PHOTO 3B

1. Begin by making a slit around the hinge and screw heads (See Photo 1A & 1B).

2. Using a T-50 driver, remove the bottom nut under the hinge (See Photo 2A), and the two screws mounting the hinge (See Photo 2B). You can now remove the hinge from the door.

3. Take your new billet hinge and heavily grease the exposed pin (See Photo 3A). Place the hinge back onto the door (See Photo 3B).



PHOTO 4A



PHOTO 5A



PHOTO 5B



PHOTO 4B

4. Insert the two screws that mount the hinge back into place and finger-tighten (See Photo 4A). Place the bottom nut back into place (See Photo 4B).

5. Using a T-50 driver, tighten the bottom nut and the two mounting screws (See Photo 5A & 5B). Repeat for the remaining hinges and you're finished! (See Photo 5C)



PHOTO 5C

RealWheels Corporation • 3940 Tannahill Drive • Gurnee, IL 60031

847-662-7722 • Fax 847-662-7744 • www.realwheels.com • info@realwheels.com • toll-free 1-800-982-1180