



3651 N Highway 89 • Chino Valley, AZ 86323
 (928) 636-7080 • www.p-a-g.net

JEEP WRANGLER (TJ) / UNLIMITED (TJL) STREET SLIDER STEPS INSTALLATION INSTRUCTIONS

1997-2002 TJ **KIT # 87200***
 2004-2006 TJL **KIT # 87204****

* Requires installation of Kit # 84200

** Requires installation of Kit # 84204

⚠ WARNING

Read and understand all instructions, warnings, cautions, and notes in this sheet and in your owner's manual before you install this kit.

Before starting installation

⚠ NOTE

Parts provided in this kit are prefaced by the word **kit** and appear in **bold font**.


1. Read all warnings and instructions completely and carefully before you begin.
2. Check to make sure the kit is complete (refer to the Kit Parts List at the end of this document).
3. Only install this kit on the vehicle for which it is intended. If anytime during the installation you encounter something different from what is outlined in the instructions, call technical support at (928) 636-7080.

Install kit


⚠ NOTE

Before installing this kit, install Rock Slider Rocker Panels (Kit **84200** for TJ, Kit **84204** for TJL).


1. Cut the kit **edge guard** in half (two 63" pieces, one for each **kit plate**).

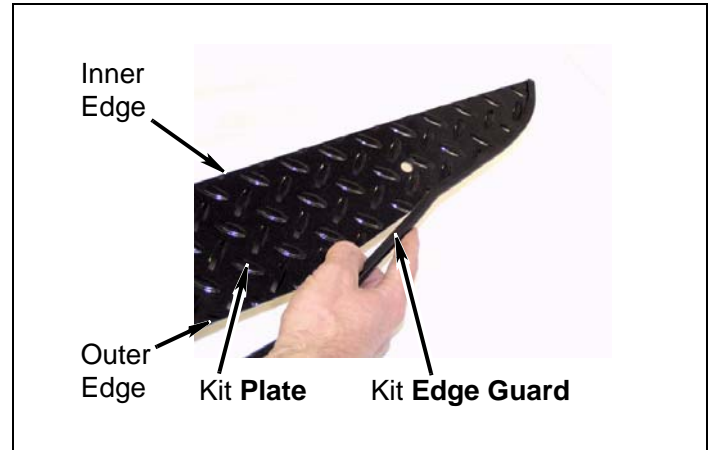


2. Apply **kit edge guard** to outer edge of **kit plate** (DO NOT apply to inner edge).
3. At front slot of **ORF rocker panel** (floor drain hole), loosen **nut** (1/2" Nylock).

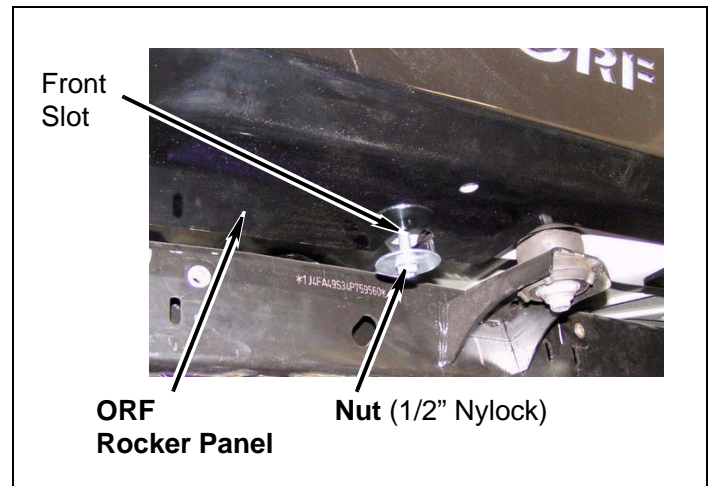


- At rear slot of **ORF rocker panel**, loosen **nut** (3/8" serrated flange).

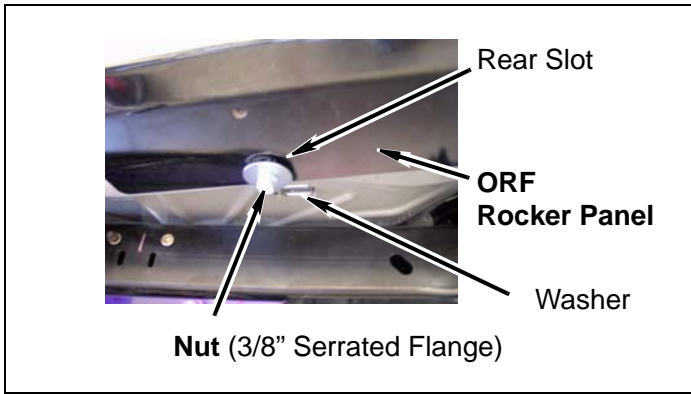


- Install kit **side bar** between **washers** (9/16" ID x 2" OD) and **ORF rocker panel**.

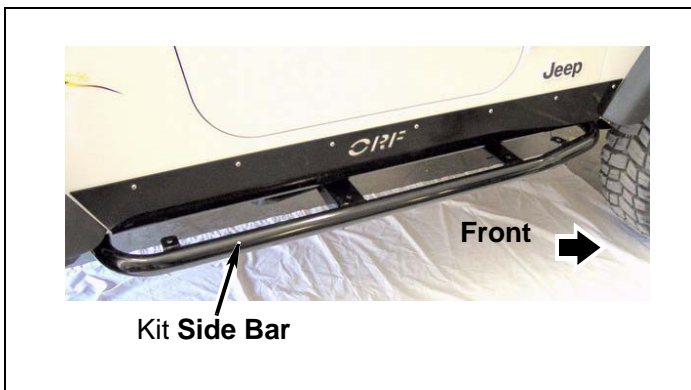

- Fasten kit **side bar** to **ORF rocker panel** with two kit **bolts** (3/8" x 1") and **washers** (3/8" USS). **DO NOT** tighten.

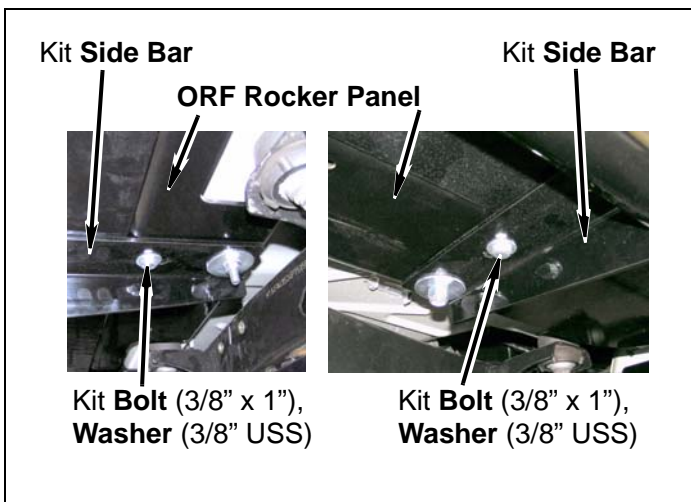

- Install kit **plate** on kit **side bar** with four kit **bolts** (3/8" x 1 1/4" stainless button-head) and **nuts** (3/8" serrated flange).

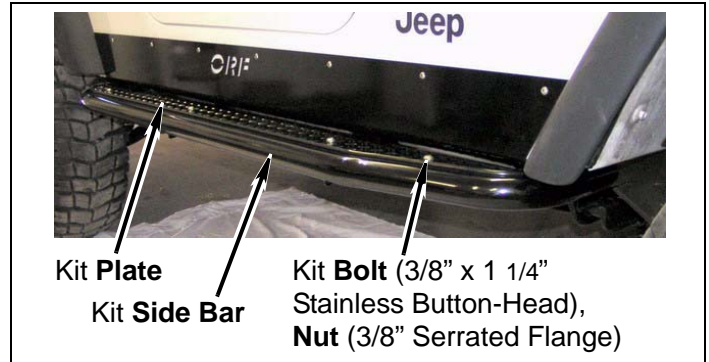

- Align kit **side bar** parallel with vehicle body.
- Tighten two kit **bolts** (3/8" x 1"), **nut** (3/8" serrated flange), and **nut** (1/2" Nylock).
- Repeat installation for other side of vehicle.

Accessories

The following accessories are also available:

Kit # 83200: Rock Slider Front Bumper

Kit # 83201: Rock Slider Front Bumper w/ Grille Guard

Kit # 83100: Rock Slider Rear Bumper

Kit Parts List

<u>Qty.</u>	<u>Description</u>
4	Bolt , 3/8" x 1"
8	Bolt , 3/8" x 1 1/4" stainless button-head
1	Edge guard , 10 1/2'
8	Nut , 3/8" serrated flange
1	Plate , diamond Left
1	Plate , diamond Right
1	Side bar , driver side
1	Side bar , passenger side
4	Washer , 3/8" USS