



ARMORLITE

INSTALLATION INSTRUCTIONS

07-10 Jeep Wrangler JK 2 Door

Wheelhouse covers



GoArmorlite.com

If you have trouble at any point refer to our website support section, install videos, and tips and tricks are available.

GoArmorlite.com

If you continue having trouble, email us at orders@goarmorlite.com

SUGGESTED TOOLS

Gloves

T50 torx

Plastic trim tools

Optional trim pliers



Before we start:

- Remove your Armorlite from the box and bring it to a warm place and let it relax. You would get weird too if you were folded up in a box.
- Make sure your vehicle is in a stable environment with the parking brake engaged.
- Armorlite components are year and model specific, do not install in any other vehicle.
- We do not guarantee this floor will fit with any aftermarket product or modification, we do guarantee it will fit your vehicle in a stock situation.
- Armorlite replaces your carpet, do not install it over the top of your existing flooring.
- Do not use floor mats on top of your Armorlite floor. You don't need them, and they are a hazard.
- Make sure your floor is installed correctly before driving. Double check that the pedals are not obstructed before driving.
- Cutting the floor in areas not designated for cutting will void your warranty, if you are having fit issues, email us, including some clear pictures that have context of where your issue is will help us help you. orders@goarmorlite.com

1. Disconnect the negative terminal on your battery.

2. Remove factory wheelhouse carpet, there are cut seams around the rollcage, these were not fully cut from the factory and may need a slice or pulled apart.


3. Clean and vacuum the area prior to installing.

4. Not required but you can remove the seatbelt retractor, The bolt uses a T50 Torx and will require an extension. Removal of other seatbelt mounts not needed.



5. Start installing the Armorlite Wheelhouse at the rollcage using the slit to locate the cage to the round opening.

6. Tuck the top of the wheelhouse under the body.

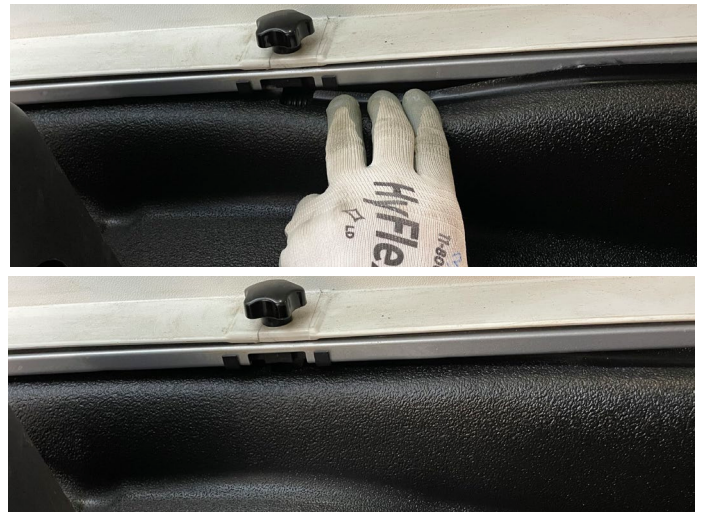

7. Pull the top harness through the slot to the designated hole.

8. Tuck corner fully under sheet metal.



9. On the Driver and Passenger side, tuck the rear edge of the wheelhouse cover under the weather stripping, be sure to get it fully under weater strip between metal body and the rubber. On the passenger side, align the tailgate wire harness with the opening as shown.



10. Layer the under carpet section on top of the wheelhouse as shown, or remove all together.
Currently no plan to make a replacement part.



11. Layer front of wheelhouse over the rear floor and the cargo mat as shown.



12. Tuck the wheelhouse edge behind the B pillar trim. Trim does not need removal, a trim tool can aid this step



13a. If you do not have the factory sub, use the provided cap to plug the hole on the passenger side. For Factory sub see 13b



13b. The factory sub uses 3 bolts, the top one has a hole provided precut, the cargo mat should be cut as shown to allow for the base mounting. Behind the sub is a circle marking that can be cut to allow the plug harness to pass through as shown below.



You're Done!

It should look like the installed pictures below, if it doesn't go through the steps again and see what you missed. If you still can't get it, email us at orders@goarmorlite.com.



Cleaning and care:

In most cases water and a brush is all that is needed to clean your floor. Be sure to open your plugs before spraying the floor down with water.


Break up any mud then rinse down the drain.



Another method is to break up any mud with a brush vacuum clean. Afterwards, you can mist with water and wipe with a towel.

If your floor continues to look dusty or gray, use Armorlite's floor cleaner, which is available at GoArmorlite.com.

Lightly mist the floor with a small amount of floor cleaner, and wipe down with a towel.

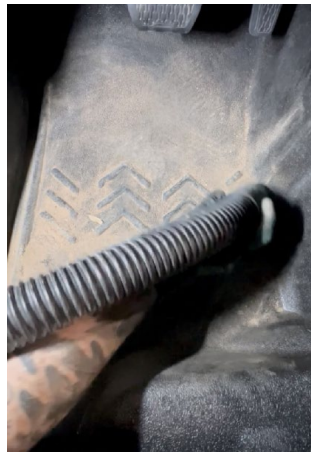

DO NOT use an excess amount of soap as it can make the floor slick.

Do NOT use any silicone-based products, or products that add shine, these can make the floor slick.

Keeping your floor clean will prolong the life of your Armorlite floor system.

We warranty the Armorlite floor system against normal off road and every day use wear and tear when properly maintained.