



CFE PRODUCTS

JK CUSTOM TWEETER UPGRADE KIT






MODEL #JK-TWEET [rev P]

2007 to 2010

REV 2013 P

1. Using a flat edge as shown, remove the factory tweeters (fig. #1) and unplug the factory connector (fig. #2).
2. Using a flat edge as shown, remove the side dash panel (fig. #3).
3. Pull the Tweeter wire down into the side panel so you have more room to work (fig. #4).
4. Feed the new Tweeter wire down into the side panel (fig. #5).
5. Plug the new Tweeter crossover into the factory tweeter plug (fig. #6).
6. Attach red and black leads from the crossover to the new red and black Tweeter leads (fig. #7).
7. Wipe metal dash with alcohol or window cleaner to assure proper tape adhesion.
8. Peel the back off the double-sided tape and attach the crossover network to the dash (fig. #8 and #9).
9. Mount the tweeter. Line up the insert tabs (the slot should be at the 4:00 position (fig.#10 and #11)). Grasp the back rim of the tweeter housing and rotate clockwise until the tweeter logo & slot are at the 6:00 position and neaten up wires.
10. Turn your system and verify proper operation, then reinstall side panels.

Congratulations, the installation is complete.

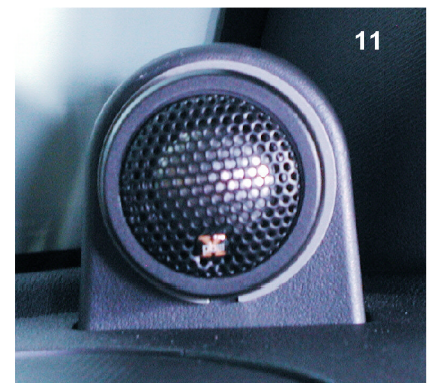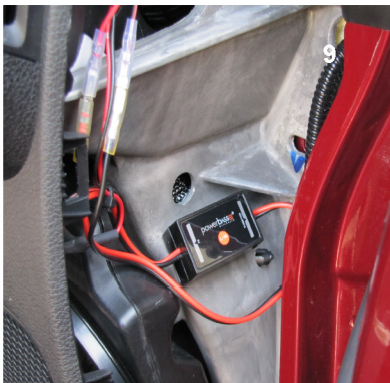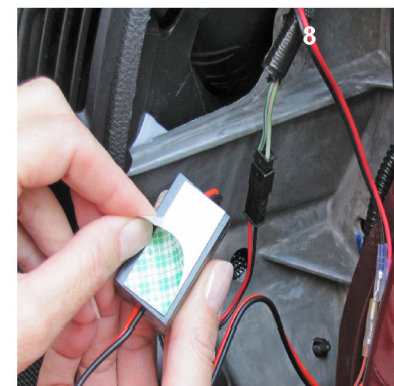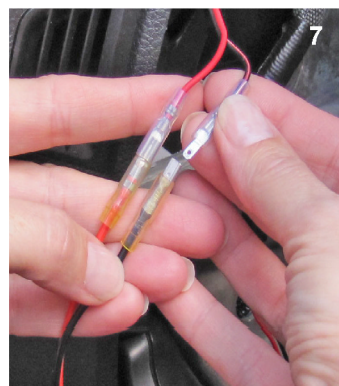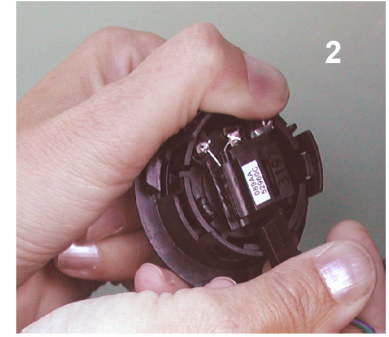

Questions or comments call
CFE Products and ask for Bob. 610-358-1886.