





CFE PRODUCTS

3rd BRAKE EXTENSION LIGHT

MODEL #JK-3BKL

Jeep Wrangler JK 2007 & up

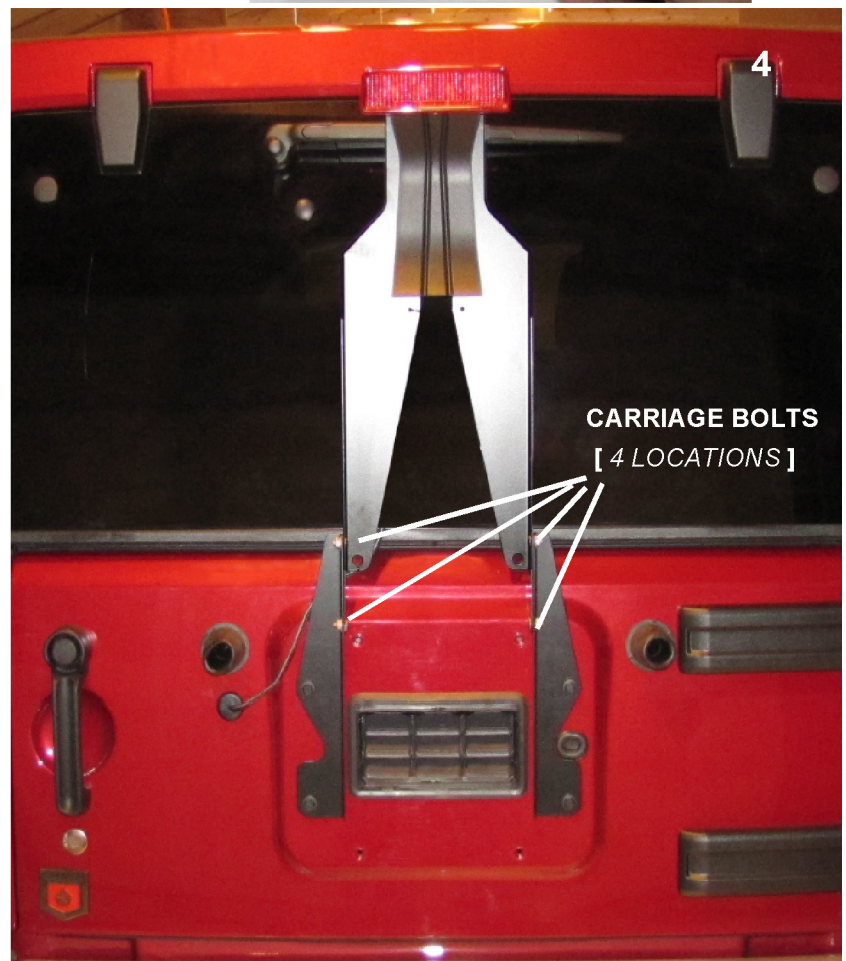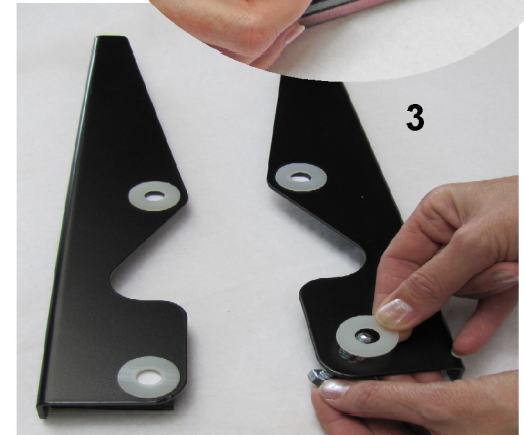

INSTALLATION INSTRUCTIONS

1. Remove the Factory Third Brake Light from the spare tire carrier by removing the 4 T20 torx head screws from the back as shown in picture #1. Unplug Factory Connector as shown in picture #1A. (screws will be reused in step 2.)
2. Mount the Factory Third Brake Light to the Extension Arms reusing the Original Screws. If the screws are too long, use the 4 Nylon Shims included in the kit as shown in pictures #2 & #2A. The spacers at the bottom of the bracket install as shown in picture #2. The spacer at the top installs between the light and the bracket as shown in picture #2A.
3. Mount the 2 Shorter Tailgate Brackets to the Tailgate of the Jeep reusing the 4 of the Original Bolts from the Factory Spare Tire Carrier. Make sure to place the Large White Nylon Washers between the Tailgate and the Mounting Bracket to protect from scratching paint as shown in picture # 3.
4. Mount the Extension Arms to the Tailgate Brackets using the 4 Carriage Bolts supplied and adjust height according to the tire size as shown in picture #4.
5. Reattach Factory Connector to Brake Light.