



CFE PRODUCTS

High - Lift JACK MOUNT

MODEL #JK- HLJM new rev B



JK 2007 & 2010 & 2011 & UP / 2Door & 4Door

JK High-Lift Jack Installation Instructions

Note: If you have a 2011 or newer JK, the High Lift Jack Mount may look slightly different but the installation procedure is exactly the same.

1. OPTIONAL BUT RECOMMENDED

To avoid any possible scratches to your Roll Bar it is recommended to apply Black Tape to the Mounting Clamps as shown in picture#1.

2. JEEP PREPARATION If you have a Soft Top, it is recommended that you Remove the Rear Window. On the Two Door Models, Fold the Back Seat Forward.



When installing the U-Bolts around the Roll Bar in the following steps, make sure that no wires or the seat belt are pinched or caught between the U-Bolt and the Roll Bar.

3. Install the Passenger side U-Bolt around the Roll Bar **Do Not Catch the Seat Belt Strap, any Wires or Roll Bar Cover in the U-Bolt or the Seat Belt will Not Function Correctly and the Bolts Won't Tighten Properly and Wires can be damaged.** as shown in picture #2.

4. Slide the U-Bolt Spacer on to the U-Bolt on the Passenger Side as shown in picture #3.


5. Position the Large Mount on the U-Bolt as shown in picture #4. (the U-Bolt should rest on the Seat Belt Retractor) Tighten Nuts with 1/2" Socket as shown in picture #4.

6. Install the Driver Side U-Bolt & Smaller Mount around Roll Bar as shown in picture #5. **Do Not Catch the Seat Belt Strap or Roll Bar Cover in the U-Bolt or the Seat Belt will Not Function Correctly and the Bolts Won't Tighten Properly and Wires can be damaged.** Tighten Nuts with 1/2" Socket.

Jack Installation: The positioning of the Jack will depend on whether you have a 2 door Jeep or a 4 door Jeep. The Jack for the 2 door will be positioned with the nose of the Jack facing toward the tailgate. For the 4 door, the nose of the Jack will face the back seat. If you don't position the Jack correctly, the Jack will either hit the back seat or your tailgate won't close.

7. Remove the Wing Nut from the supplied Bolt on the Driver Side Mount and Remove the Wing Nuts and Bolts from the Passenger Side Mount. Rest the 1st Notch of the Jack on the Driver Side Bolt and loosely tighten Wing Nut as shown in picture #6.

9. Feed the Bolts through the Jack and Mount on the Passenger Side and Tighten Wing Nuts as shown in picture #7 (2 door) or picture #8 (4 door). Finish Tightening Driver Side Wing Nut.

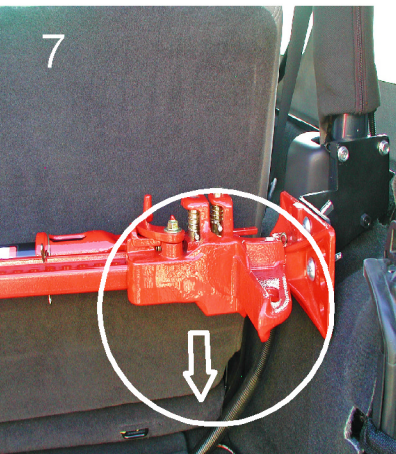

Questions or Comments ? call CFE PRODUCTS

@ 610 358 1886 / ASK FOR BOB