



# CFE PRODUCTS Hi - Lift JACK MOUNT MODEL #TJ - HLJM



Jeep Wrangler TJ 1997 to 2006

## TJ Hi-Lift Jack Installation Instructions


1. Assemble Mounts using a 9/16 Socket and the Two 3/8th Bolts & Lock Washers supplied as shown in picture #1.

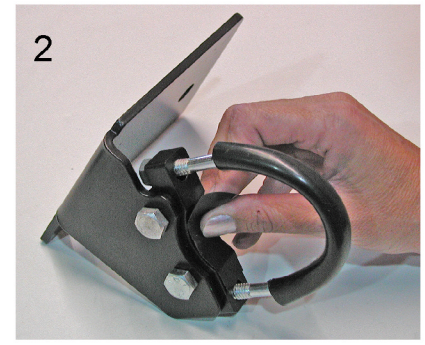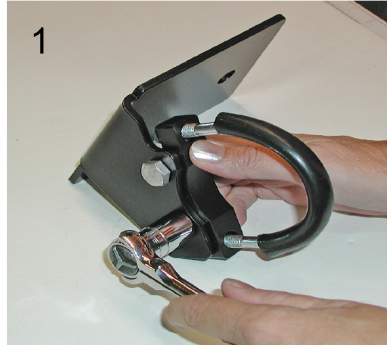

### 2. OPTIONAL BUT RECOMMENDED


To avoid any possible scratches to your Roll Bar it is recommended to apply Black Tape to the Mounting Clamps as shown in picture#2.

3. JEEP PREPARATION If you have a Soft Top, it is recommended that you Remove the Rear Window. On the Two Door Models, Fold the Back Seat Forward.

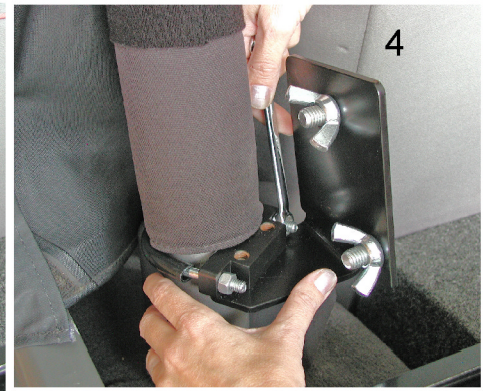


4. Install the Driver Side U-Bolt around the Roll Bar. **Do Not Catch the Seat Belt Strap or Roll Bar Cover in the U-Bolt or the Seat Belt will Not Function Correctly and the Bolts Won't Tighten Properly.** Slide the Larger Mount over the U-Bolt on the Driver Side as shown in picture #3.

5. Position the Large Mount 1/8" above the Seat Belt Retractor and Tighten Nuts with 1/2" Wrench as shown in picture #4.

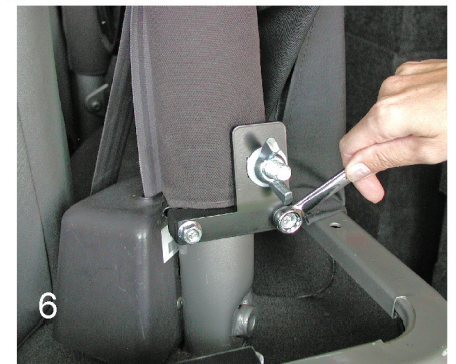

6. Install the Passenger Side U-Bolt & Smaller Mount around Roll Bar as shown in picture #5. **Do Not Catch the Seat Belt Strap or Roll Bar Cover in the U-Bolt or the Seat Belt will Not Function Correctly and the Bolts Won't Tighten Properly.** Tighten Nuts with 1/2" Wrench as shown in picture # 6.

7. Before Installing Jack be sure to Position Jack Components circled in Finished View in picture #9.

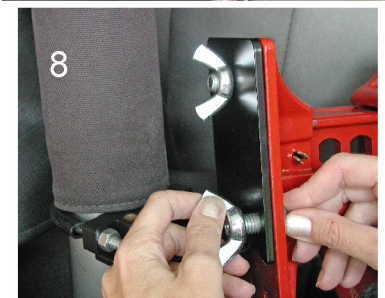

8. Remove the Wing Nut from the supplied Bolt on the Passenger Side Mount and Remove the Wing Nuts and Bolts from the Driver Side Mount. Rest the 1st Notch of the Jack on the Passenger Side Bolt and loosely tighten Wing Nut as shown in picture #7.

9. Feed the Bolts through the Jack and Mount on the Driver Side and Tighten Wing Nuts. Finish Tightening Passenger Side Wing Nut.



Questions or Comments ? call CFE PRODUCTS  
@ 610 358 1886 / ASK FOR BOB