

INSTALLATION MANUAL FOR


JEEP - GRAND CHEROKEE - 2008

Mount Location: To the right of the radio

MVM Multi Vehicle Mount

MVM-45-05

Includes PHS-203 Ultra Slim Swivel

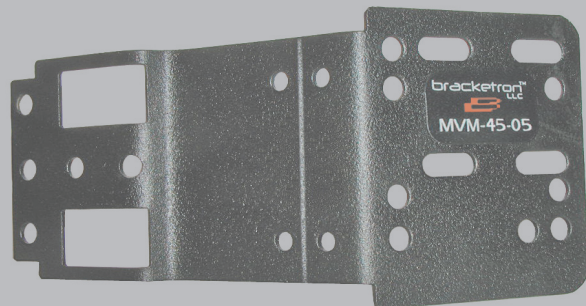

Thank you for purchasing your new Bracketron **MVM** Multi Vehicle Mount.

The Multi Vehicle Mount is an (end user-installer) modifiable professional mounting bracket for most all mobile electronics requiring a steady and secure installation in a motor vehicle. The MVM installs behind your vehicles dash panel using existing or non-visible holes and is designed to cleanly protrude out from your vehicle's dash panel.

Before installing, you must take the time to read and understand this installation manual and read all the warnings accompanying this product.

Instructions Include: tools needed for install, directions for dash panel removal, directions for modifying the MVM if required.

You can download this manual and any updates from
<http://www.bracketron.com/downloads>

IMPORTANT INFORMATION

IMPORTANT INFORMATION

Please read instructions completely before installing this Bracketron MVM Mount. All instructions are written from the drivers seat vantage point looking forward at the vehicles dash. We advise caution whenever you are removing or handling plastic parts of a vehicles dash. **WARNING:** Unnecessary force or pressure can cause pieces to crack or break.

PARTS INCLUDED: MVM-45-05 Mount, 3 - #8x3/4" Self Tapping Screws, 2 - M4x8 Phillips Pan Head Screws, 2 - M4 Nylon Stop Nuts, PHS-203 Ultra Slim Swivel and Mounting Hardware.

TOOLS NEEDED FOR DASH PANEL DISASSEMBLY

Dash Trim Tool (Part #SIT-104)
2 Phillips Screwdriver
9/32" Open End Wrench (for swivel)
Marking Pen

TOOLS NEEDED FOR MVM MODIFICATION *(if required)*


4 inch Mounted Bench Vise
12 oz. Ball Pein Hammer
Standard Tin Snips
Standard Hacksaw
Small File

Note: The hole pattern on the face of the MVM maybe different then what is shown in the pictures.

DASH DISASSEMBLY INSTRUCTION



- 1 Begin installation by removing the inside trim around the shifter. Insert a Dash Trim tool (part number #SIT-104) under the trim and pry upward. Set the trim aside in a safe place. Next remove the outer trim around the shifter. Insert a Dash Trim tool (part #SIT-104) in the back right corner. Work your way around the trim releasing the clips. Set this trim aside in a safe place.

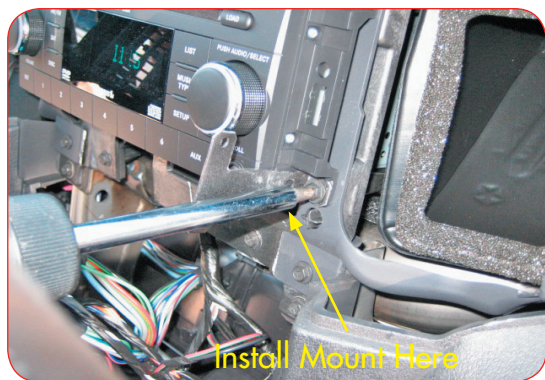

- 2 Next remove the one (1) phillips screw in the back of the pocket next to the lighter plug. Set the screw aside in a safe place. Continue by removing the bezel around the radio. Insert a Dash Trim tool (part #SIT-104) on the right side of the radio and work your way around the bezel releasing all the clips. **Note:** You do not need to disconnect any of the wiring to install your MVM.
- 3 Skip to **Step 6** on the following page if you have not yet formed the bracket to fit your vehicle.
- 4 Continue by removing the phillips screw on the lower right corner of the radio. Place the screw aside in a safe place. Place your MVM over the screw hole, and replace the factory screw. Tighten the screw down.
- 5 Carefully reinstall the dash in reverse order securing all screws and clips to the bezel. Install the included Ultra Slim Swivel #PHS-203 to your Multi Vehicle Mount or any other AMPs compatible device.




Your installation is complete

MVM MODIFICATION INSTRUCTIONS

PLEASE NOTE

The Bracketron MVM-45-05 mount is a modifiable mounting bracket. The illustrations on the left show how this mount should look during and after the modification steps in order to fit the listed vehicles on the front page of this manual. **Many vehicle applications may not require any modifications to the mount. If this is the case it will be noted below and there will be no steps to follow on this page.**

Picture 1

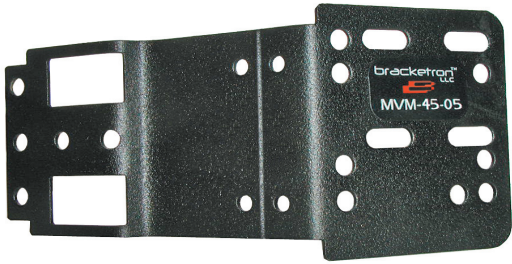


6 Before you begin to form your MVM, please make sure it looks exactly the way it does in the top picture to the left.

7 To begin, use a marking pen to draw the lines on the MVM as depicted in red in the middle picture to the left. **Note:** See red lines in the middle picture for guidance.


8 Use a tin snips to cut along these lines. Then the cuts have been made completely, continue by bending along the yellow lines. First flatten the MVM on the two (2) inside yellow lines. Next make the outside bend a 90° angle. If the bracket gets bent, use a small hammer to pound out any imperfections. If the paint chips use some black paint to cover it up.

Now go back to **Step 4** on the previous page to finish installation.

Picture 2 Bend Mount Here

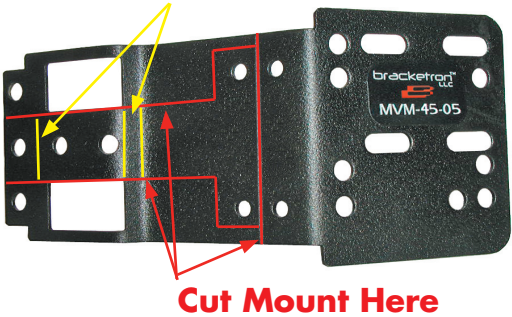

Picture 3

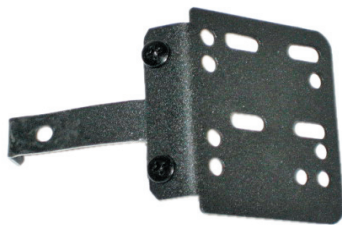

Note: The hole pattern on the face of the MVM maybe different then what is shown in the pictures.

Note: Please see page 3 in this manual for PHS-203 Ultra Slim Swivel Instructions.

PHS-203 ULTRA SLIM SWIVEL INSTRUCTIONS

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLING THIS BRACKETRON MOBILE SOLUTION.


This Professional Swivel Mount Solution is designed to be mounted to your MVM or any other 4 hole AMPs compatible mounting device. The Ultra Slim Swivel is compact with a low profile and is designed to provide adjustability to devices such as Satellite Radio Receivers, GPS monitors or Mobile Phones. The Ultra Slim Swivel angles your device for better viewing, tilting approx 15° in all directions and swivels 360° degrees for maximum adjustability. All mounting hardware is included in the kit along with our AMPs adapter plate to attach devices that support T- Notch mounting.

PARTS INCLUDED


- 1 - Ultra Slim Swivel
- 1 - AMPs Adapter Plate
- 4 - M4 x 10 Hex Head Screws
- 4 - M4 x 10 Pan Head Screws
- 4 - M4 x 12 Pan Head Screws
- 4 - M4 Hex Head Nuts
- 4 - M4 Nylon Locking Nuts
- 4 - M4 Star Washers

- 1** **Note: The swivel can be installed before or after the mount is installed in the vehicle.** Attach the Ultra Slim Swivel to any MVM or CBM Mount or other AMPs mounting device by inserting the M4x10 Pan Head screws through the holes on the back half of the swivel. Align the screws up with the holes on the mount. Attach the M4 Nylon Locking Nuts only finger tight. Rotate the front half of the swivel to gain access to the M4x10 Pan Head screws. (See Picture 1&2) Tighten all 4 screws with a #2 Phillips screwdriver and 9/32" open end wrench.


Picture 1

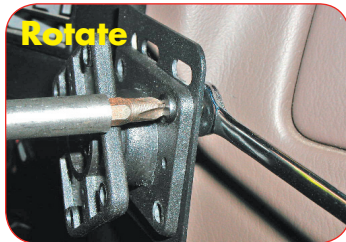

Picture 2

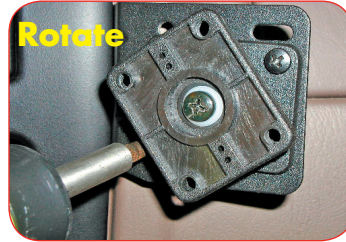

Picture 3

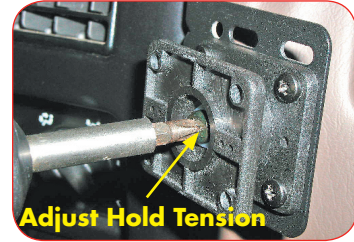

- 2** Tighten the center screw to adjust the desired tension of the swivel. (See Picture 3) **Note:** If Swivel becomes loose over time, you can grasp the swivel and pull toward you lightly while rotating it clockwise. This will tighten the swivel allowing you to create the desired tension needed.

For T- Notch Devices


Attach the AMPs T- Notch Adapter to the front half of the swivel using the M4x12 Pan Head screws. Attach the M4 Star Washers and M4 Hex Nuts to the screws and tighten the plate down with the #2 screwdriver and 9/32" open end wrench. Slide your device onto the T- notch Adapter plate to secure it to the swivel. (See Pictures 4)

- 3**


For AMPs Devices with Inserts

Attach your AMPs device using the M4x10 Hex Head screws and M4 Star Washers. Align the holes on the device with the holes on the front half of the swivel. Slide the Star Washers onto the Hex Head screws. Insert the screws through the swivel and into your device only finger tight. Tighten down the device with the 9/32" open end wrench. Your device is now secure to the swivel. (See Pictures 5)

Picture 4

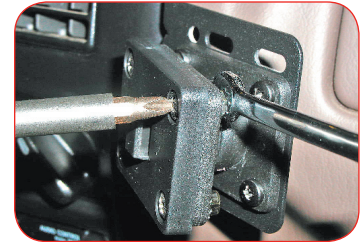

Picture 5

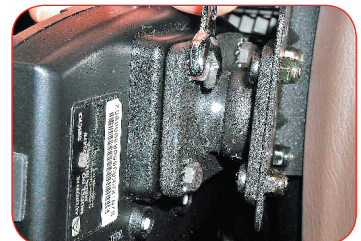

INSTALLATION MANUAL FOR


JEEP - LIBERTY - 2008

Mount Location: To the right of the radio

MVM Multi Vehicle Mount

MVM-45-05

Includes PHS-203 Ultra Slim Swivel

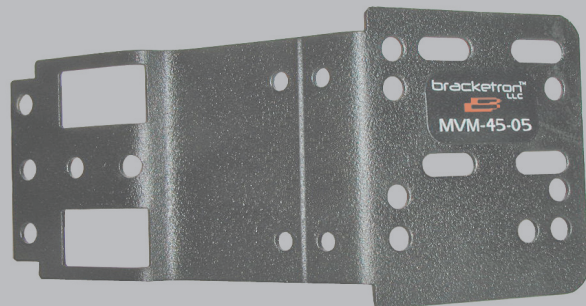

Thank you for purchasing your new Bracketron **MVM** Multi Vehicle Mount.

The Multi Vehicle Mount is an (end user-installer) modifiable professional mounting bracket for most all mobile electronics requiring a steady and secure installation in a motor vehicle. The MVM installs behind your vehicles dash panel using existing or non-visible holes and is designed to cleanly protrude out from your vehicle's dash panel.

Before installing, you must take the time to read and understand this installation manual and read all the warnings accompanying this product.

Instructions Include: tools needed for install, directions for dash panel removal, directions for modifying the MVM if required.

You can download this manual and any updates from
<http://www.bracketron.com/downloads>

IMPORTANT INFORMATION

IMPORTANT INFORMATION

Please read instructions completely before installing this Bracketron MVM Mount. All instructions are written from the drivers seat vantage point looking forward at the vehicles dash. We advise caution whenever you are removing or handling plastic parts of a vehicles dash. **WARNING:** Unnecessary force or pressure can cause pieces to crack or break.

PARTS INCLUDED: MVM-45-05 Mount, 3 - #8x3/4" Self Tapping Screws, 2 - M4x8 Phillips Pan Head Screws, 2 - M4 Nylon Stop Nuts, PHS-203 Ultra Slim Swivel and Mounting Hardware.

TOOLS NEEDED FOR DASH PANEL DISASSEMBLY

Dash Trim Tool (Part #SIT-104)
2 Phillips Screwdriver
9/32" Open End Wrench (for swivel)
Marking Pen

TOOLS NEEDED FOR MVM MODIFICATION *(if required)*

4 inch Mounted Bench Vise
12 oz. Ball Pein Hammer
Standard Tin Snips
Standard Hacksaw
Small File

Note: The hole pattern on the face of the MVM maybe different then what is shown in the pictures.

DASH DISASSEMBLY INSTRUCTION



- 1 Begin installation by inserting a Dash Trim tool (part #SIT-104) under the upper right corner of the bezel that surrounds the radio, with the climate controls in it. Work your way around the bezel releasing a total of 6 clips, two (2) on the top, two (2) on the bottom, and two (2) next to the radio. Carefully pull the bezel out of the way. Note: you do not need to disconnect any wiring for the installation.



- 2 Skip to **Step 5** on the following page if you have not yet formed the bracket to fit your vehicle.
- 3 Continue by removing the phillips screw on the lower right corner of the radio. Place the screw aside in a safe place. Place your MVM over the screw hole, and replace the factory screw. Tighten the screw down.
- 4 Carefully reinstall the dash in reverse order securing all screws and clips to the bezel. Install the included Ultra Slim Swivel #PHS-203 to your Multi Vehicle Mount or any other AMPs compatible device.

Your installation is complete




MVM MODIFICATION INSTRUCTIONS

PLEASE NOTE

The Bracketron MVM-45-05 mount is a modifiable mounting bracket. The illustrations on the left show how this mount should look during and after the modification steps in order to fit the listed vehicles on the front page of this manual. **Many vehicle applications may not require any modifications to the mount. If this is the case it will be noted below and there will be no steps to follow on this page.**

Picture 1

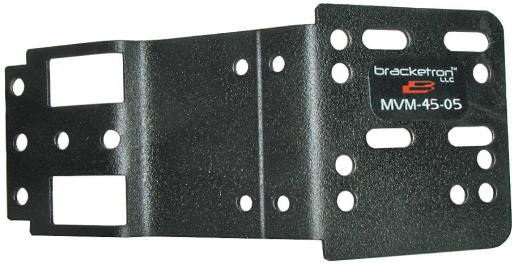


5 Before you begin to form your MVM, please make sure it looks exactly the way it does in the top picture to the left.

6 To begin, use a marking pen to draw the lines on the MVM as depicted in red in the middle picture to the left. **Note:** See red lines in the middle picture for guidance.


7 Use a tin snips to cut along these lines. Then the cuts have been made completely, continue by bending along the yellow lines. First flatten the MVM on the two (2) inside yellow lines. Next make the outside bend a 90° angle. If the bracket gets bent, use a small hammer to pound out any imperfections. If the paint chips use some black paint to cover it up.

Now go back to **Step 3** on the previous page to finish installation.

Picture 2 Bend Mount Here

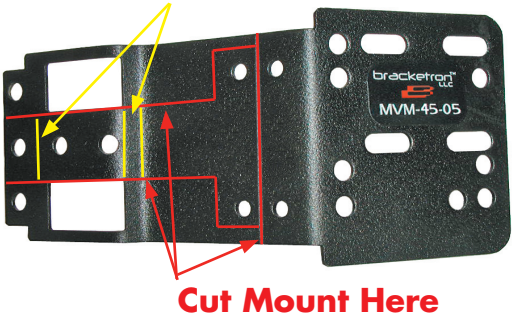

Picture 3

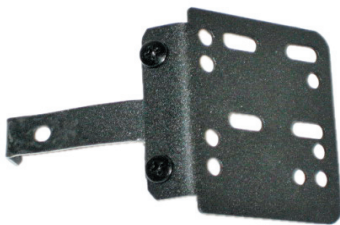

Note: The hole pattern on the face of the MVM maybe different then what is shown in the pictures.

Note: Please see page 3 in this manual for PHS-203 Ultra Slim Swivel Instructions.

PHS-203 ULTRA SLIM SWIVEL INSTRUCTIONS

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLING THIS BRACKETRON MOBILE SOLUTION.


This Professional Swivel Mount Solution is designed to be mounted to your MVM or any other 4 hole AMPs compatible mounting device. The Ultra Slim Swivel is compact with a low profile and is designed to provide adjustability to devices such as Satellite Radio Receivers, GPS monitors or Mobile Phones. The Ultra Slim Swivel angles your device for better viewing, tilting approx 15° in all directions and swivels 360° degrees for maximum adjustability. All mounting hardware is included in the kit along with our AMPs adapter plate to attach devices that support T- Notch mounting.

PARTS INCLUDED


- 1 - Ultra Slim Swivel
- 1 - AMPs Adapter Plate
- 4 - M4 x 10 Hex Head Screws
- 4 - M4 x 10 Pan Head Screws
- 4 - M4 x 12 Pan Head Screws
- 4 - M4 Hex Head Nuts
- 4 - M4 Nylon Locking Nuts
- 4 - M4 Star Washers

- 1** **Note: The swivel can be installed before or after the mount is installed in the vehicle.** Attach the Ultra Slim Swivel to any MVM or CBM Mount or other AMPs mounting device by inserting the M4x10 Pan Head screws through the holes on the back half of the swivel. Align the screws up with the holes on the mount. Attach the M4 Nylon Locking Nuts only finger tight. Rotate the front half of the swivel to gain access to the M4x10 Pan Head screws. (See Picture 1&2) Tighten all 4 screws with a #2 Phillips screwdriver and 9/32" open end wrench.


Picture 1

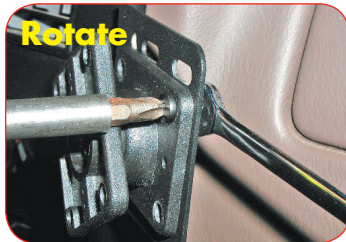

Picture 2

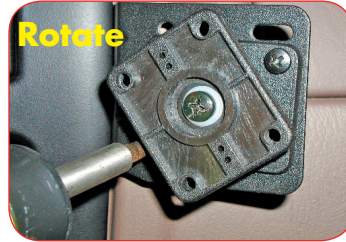

Picture 3

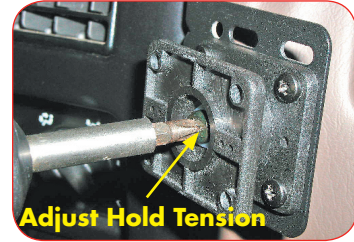

- 2** Tighten the center screw to adjust the desired tension of the swivel. (See Picture 3) **Note:** If Swivel becomes loose over time, you can grasp the swivel and pull toward you lightly while rotating it clockwise. This will tighten the swivel allowing you to create the desired tension needed.

For T- Notch Devices


Attach the AMPs T- Notch Adapter to the front half of the swivel using the M4x12 Pan Head screws. Attach the M4 Star Washers and M4 Hex Nuts to the screws and tighten the plate down with the #2 screwdriver and 9/32" open end wrench. Slide your device onto the T- notch Adapter plate to secure it to the swivel. (See Pictures 4)

- 3**


For AMPs Devices with Inserts

Attach your AMPs device using the M4x10 Hex Head screws and M4 Star Washers. Align the holes on the device with the holes on the front half of the swivel. Slide the Star Washers onto the Hex Head screws. Insert the screws through the swivel and into your device only finger tight. Tighten down the device with the 9/32" open end wrench. Your device is now secure to the swivel. (See Pictures 5)

Picture 4

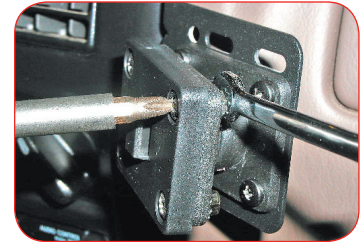

Picture 5

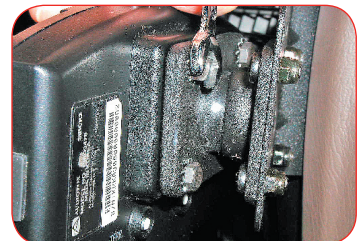

INSTALLATION MANUAL FOR

JEEP - COMPASS - 2007-2007


JEEP - PATRIOT - 2007-2007

Mount Location: To the right of the radio

MVM Multi Vehicle Mount

MVM-45-05

Includes PHS-203 Ultra Slim Swivel

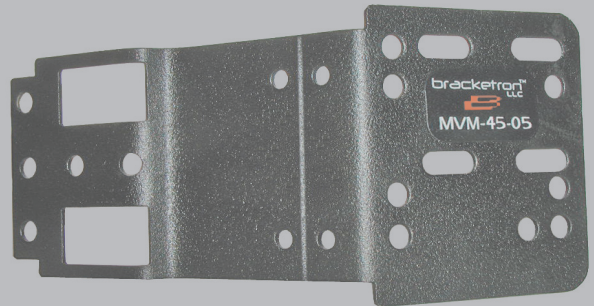

Thank you for purchasing your new Bracketron **MVM** Multi Vehicle Mount.

The Multi Vehicle Mount is an (end user-installer) modifiable professional mounting bracket for most all mobile electronics requiring a steady and secure installation in a motor vehicle. The MVM installs behind your vehicles dash panel using existing or non-visible holes and is designed to cleanly protrude out from your vehicle's dash panel.

Before installing, you must take the time to read and understand this installation manual and read all the warnings accompanying this product.

Instructions Include: tools needed for install, directions for dash panel removal, directions for modifying the MVM if required.

You can download this manual and any updates from
<http://www.bracketron.com/downloads>

IMPORTANT INFORMATION

IMPORTANT INFORMATION

Please read instructions completely before installing this Bracketron MVM Mount. All instructions are written from the drivers seat vantage point looking forward at the vehicles dash. We advise caution whenever you are removing or handling plastic parts of a vehicles dash. **WARNING:** Unnecessary force or pressure can cause pieces to crack or break.

PARTS INCLUDED: MVM-45-05 Mount, 3 - #8x3/4" Self Tapping Screws, 2 - M4x8 Phillips Pan Head Screws, 2 - M4 Nylon Stop Nuts, PHS-203 Ultra Slim Swivel and Mounting Hardware.

TOOLS NEEDED FOR DASH PANEL DISASSEMBLY

Dash Trim Tool (Part #SIT-104)
2 Phillips Screwdriver
9/32" Open End Wrench (for swivel)
Marking Pen

TOOLS NEEDED FOR MVM MODIFICATION (if required)

4 inch Mounted Bench Vise
12 oz. Ball Pein Hammer
Standard Tin Snips
Standard Hacksaw
Small File

Note: The hole pattern on the face of the MVM maybe different then what is shown in the pictures.

DASH DISASSEMBLY INSTRUCTION



- 1 Using a Dash Trim tool (part #SIT-104) remove the dash trim above the radio bezel. Starting in the front right corner and working your way around remove a total of six (6) clips. Place the bezel in a safe place. Next using a Dash Trim tool (part #SIT-104) remove the inside bezel around the shifter.

- 2 Continue by removing the two (2) phillips screws in the front of the outside bezel around the shifter. Next remove the outside bezel around the shifter and set it aside in a safe place. Now remove the two (2) phillips screws on the top of the radio bezel. Using a Dash Trim tool (Part #SIT-104) remove the bezel around the radio. Release two (2) clips on the right side and two (2) clips on the left side. Push the bezel to the left side.



- 3 Skip to **Step 6** on the following page if you have not yet formed the bracket to fit your vehicle.

- 4 Place your MVM in the location as shown. **Note:** There is an existing clip in the dash that you can screw the mount into. Insert the provided screw and tighten the mount down.

- 5 Carefully reinstall the dash in reverse order securing all screws and clips to the bezel. Install the included Ultra Slim Swivel #PHS-203 to your Multi Vehicle Mount or any other AMPs compatible device.

Your installation is complete




MVM MODIFICATION INSTRUCTIONS

PLEASE NOTE

The Bracketron MVM-45-05 mount is a modifiable mounting bracket. The illustrations on the left show how this mount should look during and after the modification steps in order to fit the listed vehicles on the front page of this manual. **Many vehicle applications may not require any modifications to the mount. If this is the case it will be noted below and there will be no steps to follow on this page.**




5 Before you begin to form your MVM, please make sure it looks exactly the way it does in the top picture to the left.

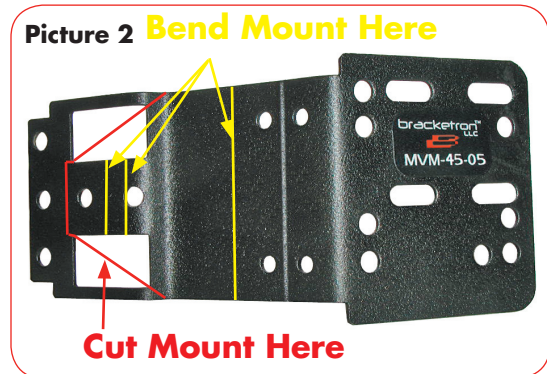

6 To begin, use a marking pen to draw a line on the MVM as depicted in red in the middle picture to the left. **Note:** See red lines in the middle picture for guidance.

7 Use a tin snips to cut along these lines. When the cuts have been made completely, continue bending along the yellow lines as depicted in the middle picture. Start by bending the middle line at a 90° angle. Next make the outside line a 90° bend, opposite direction of the first bend. **Note:** This will make a “U” Shape in the bracket. Each leg beng about 3/16” long. Last make the final bend a 90° bend also. If the bracket gets bent use a small hammer to pound out the imperfections. If the paint chips use some black paint to cover up the paint.

Now go back to **Step 4** on the previous page to finish installation.

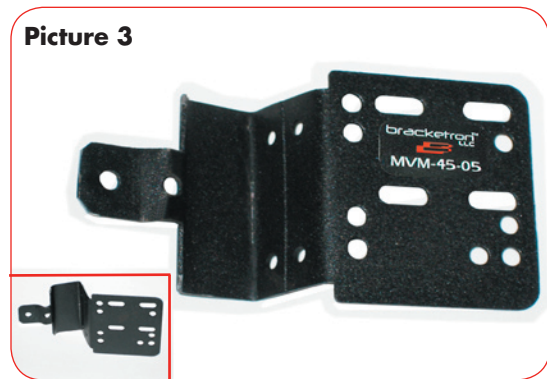

Note: The hole pattern on the face of the MVM maybe different then what is shown in the pictures.

Note: Please see page 3 in this manual for PHS-203 Ultra Slim Swivel Instructions.

PHS-203 ULTRA SLIM SWIVEL INSTRUCTIONS

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLING THIS BRACKETRON MOBILE SOLUTION.


This Professional Swivel Mount Solution is designed to be mounted to your MVM or any other 4 hole AMPs compatible mounting device. The Ultra Slim Swivel is compact with a low profile and is designed to provide adjustability to devices such as Satellite Radio Receivers, GPS monitors or Mobile Phones. The Ultra Slim Swivel angles your device for better viewing, tilting approx 15° in all directions and swivels 360° degrees for maximum adjustability. All mounting hardware is included in the kit along with our AMPs adapter plate to attach devices that support T- Notch mounting.

PARTS INCLUDED


- 1 - Ultra Slim Swivel
- 1 - AMPs Adapter Plate
- 4 - M4 x 10 Hex Head Screws
- 4 - M4 x 10 Pan Head Screws
- 4 - M4 x 12 Pan Head Screws
- 4 - M4 Hex Head Nuts
- 4 - M4 Nylon Locking Nuts
- 4 - M4 Star Washers

- 1** **Note: The swivel can be installed before or after the mount is installed in the vehicle.** Attach the Ultra Slim Swivel to any MVM or CBM Mount or other AMPs mounting device by inserting the M4x10 Pan Head screws through the holes on the back half of the swivel. Align the screws up with the holes on the mount. Attach the M4 Nylon Locking Nuts only finger tight. Rotate the front half of the swivel to gain access to the M4x10 Pan Head screws. (See Picture 1&2) Tighten all 4 screws with a #2 Phillips screwdriver and 9/32" open end wrench.


Picture 1

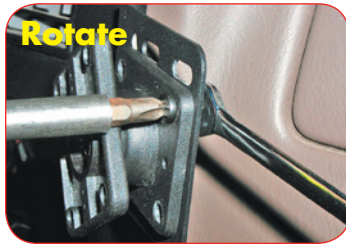

Picture 2

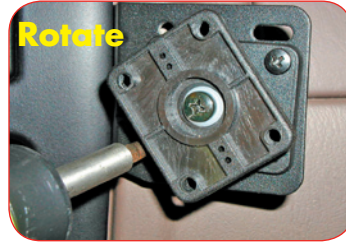

Picture 3

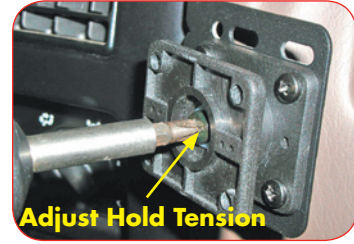

- 2** Tighten the center screw to adjust the desired tension of the swivel. (See Picture 3) **Note:** If Swivel becomes loose over time, you can grasp the swivel and pull toward you lightly while rotating it clockwise. This will tighten the swivel allowing you to create the desired tension needed.

For T- Notch Devices


Attach the AMPs T- Notch Adapter to the front half of the swivel using the M4x12 Pan Head screws. Attach the M4 Star Washers and M4 Hex Nuts to the screws and tighten the plate down with the #2 screwdriver and 9/32" open end wrench. Slide your device onto the T- notch Adapter plate to secure it to the swivel. (See Pictures 4)

- 3**

For AMPs Devices with Inserts

Attach your AMPs device using the M4x10 Hex Head screws and M4 Star Washers. Align the holes on the device with the holes on the front half of the swivel. Slide the Star Washers onto the Hex Head screws. Insert the screws through the swivel and into your device only finger tight. Tighten down the device with the 9/32" open end wrench. Your device is now secure to the swivel. (See Pictures 5)

Picture 4

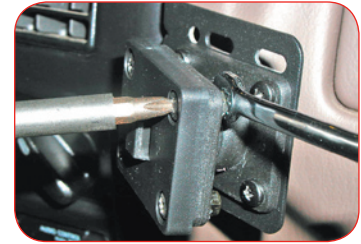

Picture 5



INSTALLATION MANUAL FOR


JEEP - COMMANDER - 2006-2007

Mount Location: To the Right of the Climate Control

MVM Multi Vehicle Mount

MVM-45-05

Includes PHS-203 Ultra Slim Swivel

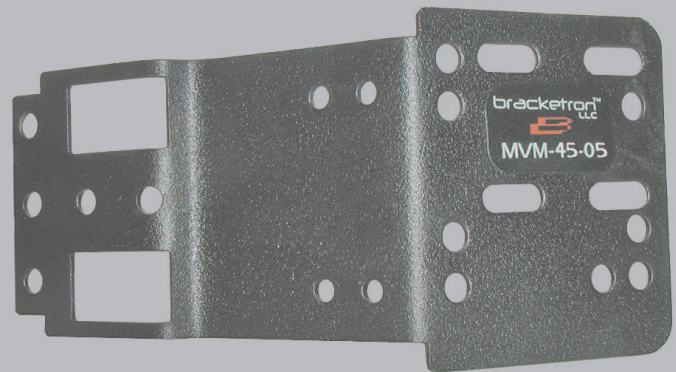

Thank you for purchasing your new Bracketron **MVM** Multi Vehicle Mount.

The Multi Vehicle Mount is an (end user-installer) modifiable professional mounting bracket for most all mobile electronics requiring a steady and secure installation in a motor vehicle. The MVM installs behind your vehicles dash panel using existing or non-visible holes and is designed to cleanly protrude out from your vehicle's dash panel.

Before installing, you must take the time to read and understand this installation manual and read all the warnings accompanying this product.

Instructions Include: tools needed for install, directions for dash panel removal, directions for modifying the MVM if required.

You can download this manual and any updates from
<http://www.bracketron.com/downloads>

IMPORTANT INFORMATION

IMPORTANT INFORMATION

Please read instructions completely before installing this Bracketron MVM Mount. All instructions are written from the drivers seat vantage point looking forward at the vehicles dash. We advise caution whenever you are removing or handling plastic parts of a vehicles dash. **WARNING:** Unnecessary force or pressure can cause pieces to crack or break.

PARTS INCLUDED: MVM-45-05 Mount, 3 - #8x3/4" Self Tapping Screws, 2 - M4x8 Phillips Pan Head Screws, 2 - M4 Nylon Stop Nuts, PHS-203 Ultra Slim Swivel and Mounting Hardware.

TOOLS NEEDED FOR DASH PANEL DISASSEMBLY

Dash Trim Tool (Part #SIT-104)
2 Phillips Screwdriver
Fiskars 8511 Craft Hand Drill (recommended)
5/64" Drill Bit
9/32" Open End Wrench (for swivel)
Marking Pen

TOOLS NEEDED FOR MVM MODIFICATION (if required)


4 inch Mounted Bench Vise
12 oz. Ball Pein Hammer
Standard Tin Snips
Standard Hacksaw
Small File

Note: The hole pattern on the face of the MVM maybe different then what is shown in the pictures.

DASH DISASSEMBLY INSTRUCTION



- 1 Begin installation by removing the silver trim bezel that surrounds the shifter knob. Use the Dash Trim Tool (part #SIT-104) to release six (6) ratchet style clips that and two guiding pins. Set the silver trim bezel aside carefully. Continue by removing the black trim bezel from beneath the silver trim. There are six (6) retainer style clips that secure this trim bezel. Set black trim bezel aside carefully.

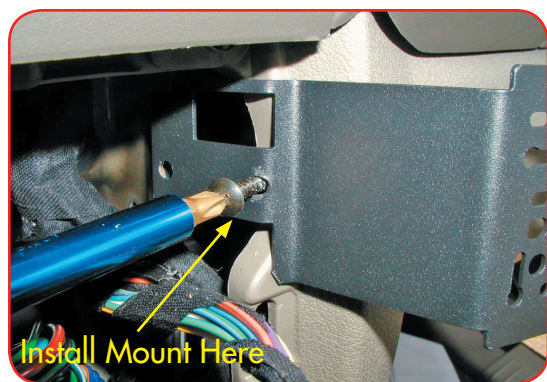

- 2 Continue by removing eight (8) 3/16" socket head screws from both the right and left hand sides of the radio/navigation system. Set these screws aside carefully. Locate and release a small metal clip from directly below the radio/navigation system. Note: See upper left inset in top picture.
- 3 With dash trim tool, release two (2) clips from each side of the climate control bezel. When it is partially loose, pull back the small bezel from directly below the radio/navigation system just enough to release two more clips from above the climate control bezel. Slide climate control bezel down and twist it so it is out of the way.

- 4 Skip to step 6 if you have not yet modified the metal bracket.

- 5 Locate the area to the right of the climate control cavity and place the MVM in the shown position. Note: See middle picture for guidance. Press the back of the MVM against the metal portion of the dash cavity and hold tightly to the dash pad. Insert one (1) #8x3/4" self tapping screw and tighten down the MVM bracket.




Carefully reinstall the dash in reverse order securing all screws and clips to the bezel. Install the included Ultra Slim Swivel #PHS-203 to your Multi Vehicle Mount or any other AMPs compatible device.

Your installation is complete

MVM MODIFICATION INSTRUCTIONS

PLEASE NOTE

The Bracketron MVM-45-05 mount is a modifiable mounting bracket. The illustrations on the left show how this mount should look during and after the modification steps in order to fit the listed vehicles on the front page of this manual. **Many vehicle applications may not require any modifications to the mount. If this is the case it will be noted below and there will be no steps to follow on this page.**

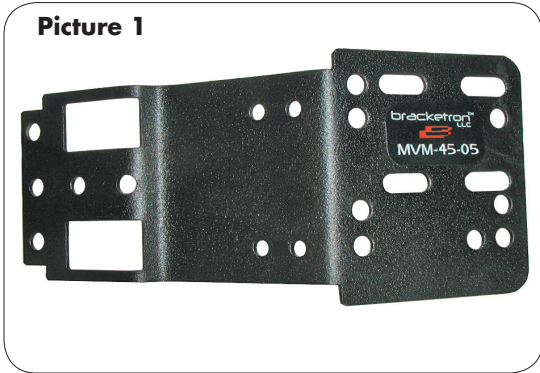

6 Begin MVM modification with bracket as shown in picture 1. Cut along solid red lines as shown in Picture 2.

7 Use a small hammer to bend metal bracket back into shape if it was altered when the cutting process occurred. Use a small file to perfect any other flaws in the metal bracket. Your final product is complete and should look like Picture 3.

8 Continue by going back to step **5** to finish the installation.

Note: Please see page 3 in this manual for PHS-203 Ultra Slim Swivel Instructions.



Note: The hole pattern on the face of the MVM maybe different then what is shown in the pictures.

PHS-203 ULTRA SLIM SWIVEL INSTRUCTIONS

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLING THIS BRACKETRON MOBILE SOLUTION.


This Professional Swivel Mount Solution is designed to be mounted to your MVM or any other 4 hole AMPs compatible mounting device. The Ultra Slim Swivel is compact with a low profile and is designed to provide adjustability to devices such as Satellite Radio Receivers, GPS monitors or Mobile Phones. The Ultra Slim Swivel angles your device for better viewing, tilting approx 15° in all directions and swivels 360° degrees for maximum adjustability. All mounting hardware is included in the kit along with our AMPs adapter plate to attach devices that support T- Notch mounting.

PARTS INCLUDED


- 1 - Ultra Slim Swivel
- 1 - AMPs Adapter Plate
- 4 - M4 x 10 Hex Head Screws
- 4 - M4 x 10 Pan Head Screws
- 4 - M4 x 12 Pan Head Screws
- 4 - M4 Hex Head Nuts
- 4 - M4 Nylon Locking Nuts
- 4 - M4 Star Washers

- 1** **Note: The swivel can be installed before or after the mount is installed in the vehicle.** Attach the Ultra Slim Swivel to any MVM or CBM Mount or other AMPs mounting device by inserting the M4x10 Pan Head screws through the holes on the back half of the swivel. Align the screws up with the holes on the mount. Attach the M4 Nylon Locking Nuts only finger tight. Rotate the front half of the swivel to gain access to the M4x10 Pan Head screws. (See Picture 1&2) Tighten all 4 screws with a #2 Phillips screwdriver and 9/32" open end wrench.


Picture 1

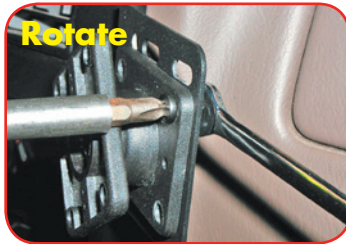

Picture 2

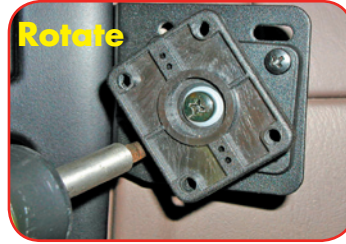

Picture 3

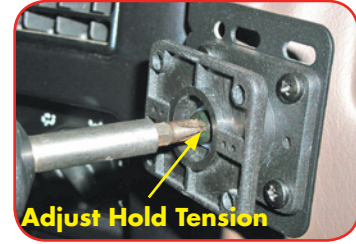

- 2** Tighten the center screw to adjust the desired tension of the swivel. (See Picture 3) **Note:** If Swivel becomes loose over time, you can grasp the swivel and pull toward you lightly while rotating it clockwise. This will tighten the swivel allowing you to create the desired tension needed.

For T- Notch Devices


Attach the AMPs T- Notch Adapter to the front half of the swivel using the M4x12 Pan Head screws. Attach the M4 Star Washers and M4 Hex Nuts to the screws and tighten the plate down with the #2 screwdriver and 9/32" open end wrench. Slide your device onto the T- notch Adapter plate to secure it to the swivel. (See Pictures 4)

- 3**

For AMPs Devices with Inserts

Attach your AMPs device using the M4x10 Hex Head screws and M4 Star Washers. Align the holes on the device with the holes on the front half of the swivel. Slide the Star Washers onto the Hex Head screws. Insert the screws through the swivel and into your device only finger tight. Tighten down the device with the 9/32" open end wrench. Your device is now secure to the swivel. (See Pictures 5)

Picture 4

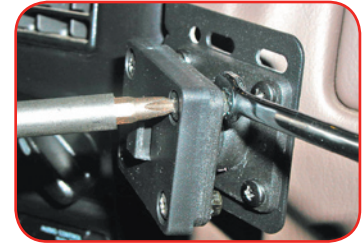

Picture 5

