



CFE PRODUCTS

JK ACCESSORY POWER TAP

MODEL # JK-APT

JK Wrangler 2007 to 2010



REV A

INSTALLATION INSTRUCTIONS

1. Using a flat edge (off-set screwdriver) remove the Lower Dash Panel by gently prying the top out on both sides as shown in picture #1.

2. Remove the two 7mm Screws as shown in picture #2.

3. Gently pull the bottom section of the Dash Panel forward exposing the Wires to the Driver Side Power Sockets as shown in picture #3.



4. The next step has two options. The first option is to Unplug the Power Lead from the Driver Side Power Socket as shown in picture #4. To unplug the Power Lead from the Power Socket, you must reach your hand up behind the dash and squeeze down on the tab shown in Picture 4B which will release the Plug. The second option (not shown) is to Pull the Wires Down without unplugging the Power Socket. There is not as much space to work with but Step #5 can be done without unplugging the Socket.

5. Attach the Quick Clips to the Wires as shown in picture #5 & #6.

CRITICAL STEP

6. Attach the Accessory Power Tap to the Quick Clips. The Blue Wire with the Pink Stripe is the POSITIVE LEAD. The RED WIRE from the Accessory Power Tap attaches to the Blue Wire with the Pink Stripe. The BLACK Wire is the NEGATIVE LEAD. The BLACK WIRE from the Accessory Power Tap attaches to the Black Wire with the White Stripe as shown in picture #7.

7. You now have the option of Routing the Accessory Power Tap Wires on either side of the Console. Pull back the carpet from the Console and make your connections. Accessories are easily attached by Stripping the Accessory Wire back 1/8" and Inserting into the Power Tap. RED (+) to RED and BLACK (-) to BLACK. Neaten Up the Wires with the Tie Straps supplied and tuck the wires back under the carpet. Reassemble Dash. Picture #8 shows the wire on the Passenger Side. Now you can Add or Remove Accessories without taking the dash apart.

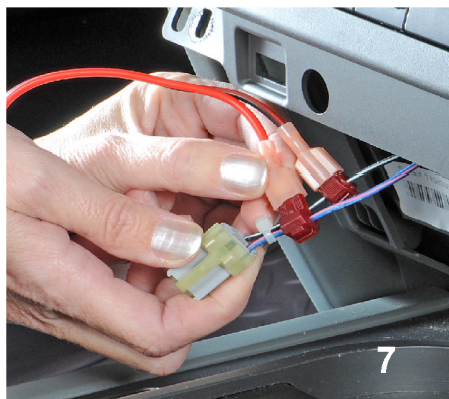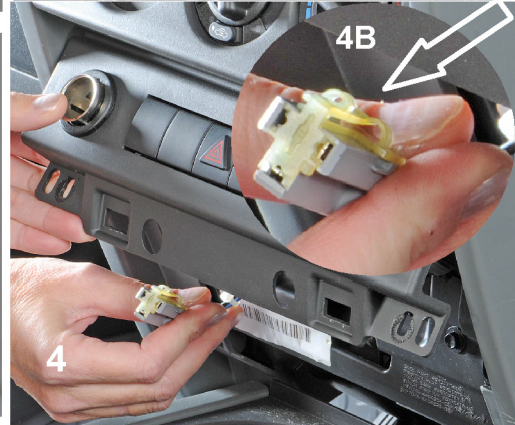

Questions or Comments? call CFE PRODUCTS @ 610 358 1886 ASK FOR BOB