



OMIX-ADA, Inc.


460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

11348.02


## Bug Deflector

### Contents:


- Bug Deflector (1)
- Screw Plugs (2)
- Phillips Head Screws (2)
- Washers (2)

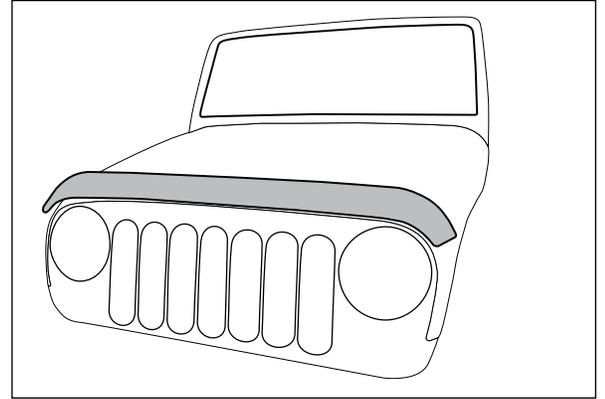

1. Clean and open hood. Test fit bug deflector centrally on hood. Note (2) holes in hood corresponding with two slots in bug deflector. Remove bug deflector. Insert plastic screw plugs into holes previously noted.

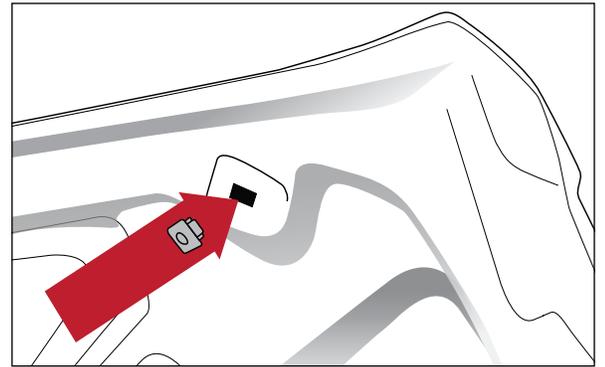

2. Remove red protective backing from double sided tape. Install bug deflector. Secure with two washers and two screws into previously plugged holes. Press firmly on taped areas and hold for 60 seconds.

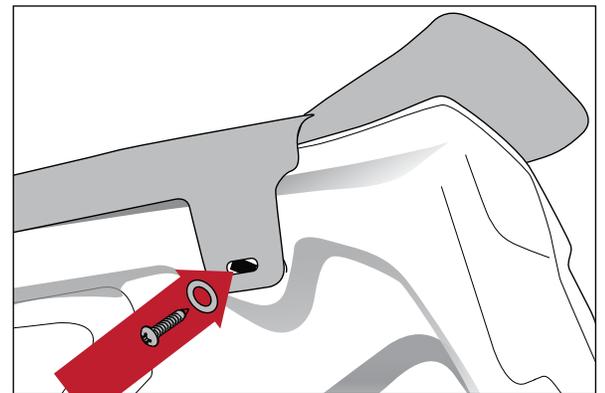

NOTE: Do not use power tools to install this product. Do not overtighten.

#### OMIX-ADA® TECHNICAL SUPPORT

PHONE: M-F 8am - 5pm EST 1-800-449-6649 | EMAIL: techsupport@omix-ada.com

FOR WARRANTY INFORMATION VISIT: [www.Omix-Ada.com](http://www.Omix-Ada.com)