


HIDDEN HITCH

HOW TO: INSTALL A 4 POLE FLAT CONNECTOR

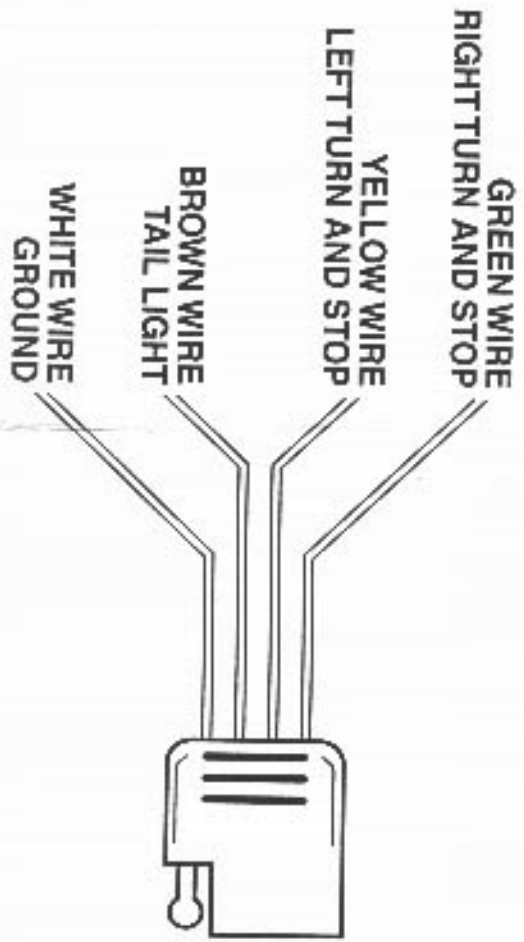

- To connect to tow vehicle:**
1. Locate proper wires found at rear of vehicle. Consult owners manual or chart below.
 2. Use circuit tester or "Quickee" tester (part number 39255), to ensure proper wires are selected.
 3. Use wire taps to make connection.
 4. Weather proof connection by sealing wire tap with silicone or grease.
 5. Connect ground wire (white) to vehicle frame.
 6. Test installation using Hidden Hitch™ Test Doctor, (part number 39265) to ensure correct installation.

WIRE COLOR BY VEHICLE MANUFACTURER

WIRE FUNCTION	VEHICLE MANUFACTURER						
	DUAL PURPOSE BULB SYSTEM						
	GMC	FORD	CHRYSLER	JEEP	TOYOTA	HONDA	MAZDA
RIGHT TURN AND BRAKE LIGHTS	GREEN	ORANGE WITH BLUE STRIPE	BROWN	BROWN	GREEN WITH YELLOW STRIPE	GREEN WITH YELLOW STRIPE	GREEN WITH YELLOW STRIPE
LEFT TURN AND BRAKE LIGHTS	YELLOW	LIGHT GREEN ORANGE STRIPE	DARK GREEN	GREY WITH BLACK STRIPE	GREEN WITH BLACK STRIPE	GREEN WITH BLUE STRIPE	BLACK STRIPE
TAIL LIGHTS	BROWN	BROWN	BLACK WITH YELLOW STRIPE OR BLACK	BLUE	RED WITH GREEN	RED WITH BLACK STRIPE	GREEN OR BLACK STRIPE
GROUND	BLACK	BLACK OR GREY	BLACK	BLACK AND BLACK	BLACK OR WHITE	BLACK	BLACK
SINGLE PURPOSE BULB SYSTEM							
BRAKE LIGHTS	PINK OR LIGHT BLUE	RED WITH GREEN STRIPE	WHITE	BLUE WITH BLACK STRIPE	GREEN WITH RED OR WHITE STRIPE	GREEN WITH WHITE STRIPE	GREEN OR GREEN WITH RED STRIPE