

INSTALLATION INSTRUCTIONS

- 1) You will need to access the factory drain hole in the Jeep body below the factory carpet. (Fig. 1)
- 2) Either lift the factory carpet from center or peel back from corner. On some models the carpet is held down by a D-Ring - it may be easier to remove the D-Ring with a 4mm hex wrench before lifting the carpet.
- 3) Remove factory drain plug (Fig. 2)
- 4) Remove the wing nut and the 1" washer from the mounting hardware and set aside.
- 5) Insert hardware assembly into factory drain hole. Sandwich Jeep body between the two oval plates, turn and move all the way forward—this is center and mates with the center hole in the storage box. Place the star washer and tighten hex nut to sandwich the two oval plates together. (Fig. 3)
- 6) Lay carpet down on hardware and using a straight edge razor blade, cut a ½" slit or "X" in carpet for the hardware stud to poke through. Make sure that you have moved the hardware assembly all the way forward in factory drain hole... this will put the bolt in the center of the storage box (Fig. 4)
- 7) Put locking floor vault in storage area above the carpet and place over stud, pushing it through the plastic hole in the bottom of the box.
- 8) Place the 1" flat washer on the threaded stud then the wing nut and tighten in place. (Fig. 5)



(Fig. 1)



(Fig. 2)



(Fig. 3)




(Fig. 4)



(Fig. 5)



HIDDEN STORAGE VAULT INSTALLED

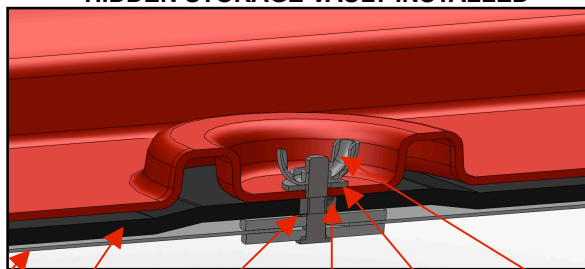

(Floor) (Carpet) (Star Washer) (Hex Nut) (1" Washer) (Wing Nut)

Vertically Driven Products
 1401 Freeman Avenue
 Long Beach, CA 90804
 (562) 438-5112
info@vdpusa.com

Oct. 09 BS