


## INSTALLATION INSTRUCTIONS

### Part No. 30432

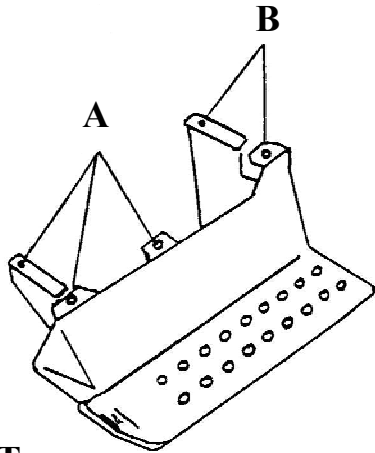


**FRONT  
SIDE**

- A. Use 5/16 – 18NC x 1¼" Long Hex Bolts, Hex Nuts, & Flat washers (3 required).
- B. Use 5/16 – 18NC x 1" Long Hex Bolts, Hex Nuts, & Flat Washers (2 required).
- C. We recommend that you use anti-sieze on all threads of the stainless bolts provided with your parts.



## INSTALLATION INSTRUCTIONS

### Part No. 30432

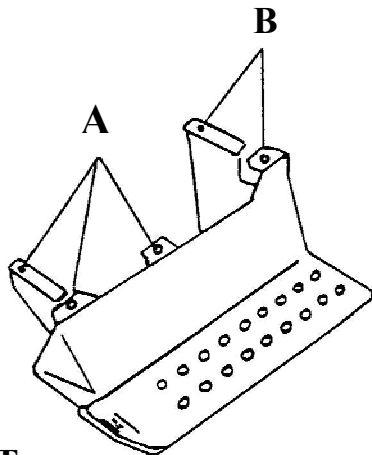

**FRONT  
SIDE**

- A. Use 5/16 – 18NC x 1½" Long Hex Bolts, Hex Nuts, & Flat Washers (3 required).
- B. Use 5/16 – 18NC x 1" Long Hex Bolts, Hex Nuts, & Flat Washers (2 required).
- C. We recommend that you use anti-sieze on all threads of the stainless bolts provided with your parts.

