


# TACHOMETER INSTALLATION INSTRUCTIONS

## 4-6-8 CYLINDER ENGINES

LOCATED ON THE BACK OF TACHOMETER HOUSING IS A SELECTOR SWITCH, SIMPLY MOVE THE SWITCH TO THE 4-6 OR 8 CYLINDER POSITION TO MATCH YOUR ENGINES NUMBER OF CYLINDERS.

## WIRING INSTRUCTIONS


DO NOT USE ORIGINAL VEHICLE WIRE CONNECTION TO TACHOMETER.

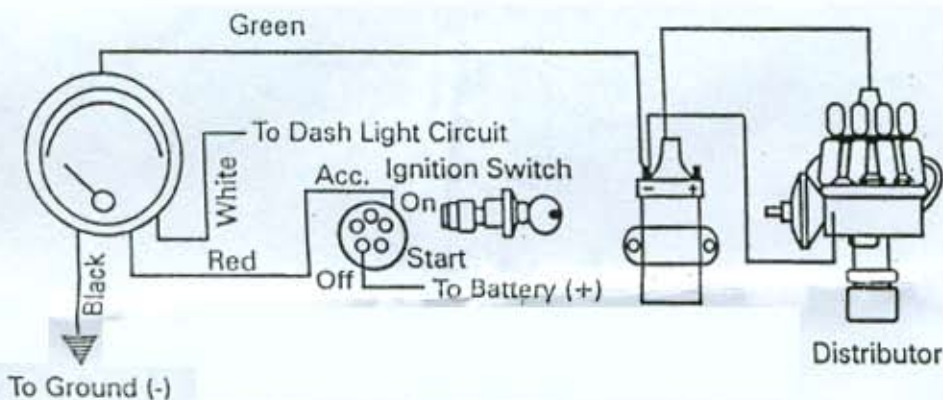

**BLACK WIRE----(NEG-) CONNECTS TO VEHICLE GROUND.**

**RED WIRE----- (POS +) CONNECTS TO POSITIVE CONTROLLED BY IGNITION SWITCH.**

**GREEN WIRE-----CONNECTS TO TACH SIDE OF COIL. SEE DETAIL BELOW.**

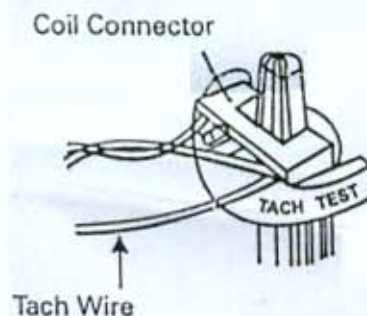

**WHITE WIRE-----CONNECTS TO ORIGINAL TACHOMETERS ILLUMINATION WIRING.**