



www.skyjacker.com

07-09 Jeep Wrangler JK 2 / 4 Door 4"- 5" Suspension Lift Installation Instructions

Required Tools List:

- Standard / Metric Wrenches & Sockets
- Floor Jack
- Jack Stands
- Drill & Assorted Drill Bits
- Torque Wrench



Before beginning the installation, read these instructions & the enclosed driver's WARNING NOTICE thoroughly & completely. Also affix the WARNING decal in the passenger compartment in clear view of all occupants. Please refer to the Parts List to insure that all parts & hardware are received prior to disassembly of the vehicle. If any parts are found to be missing, contact SKYJACKER® Customer Service at 318-388-0816 to obtain the needed items. If you have any questions or reservations about installing this lift kit, call SKYJACKER® Technical Assistance at 318-388-0816.

Make sure you park the vehicle on a level concrete or asphalt surface. Many times a vehicle is not level (side-to-side) from the factory, but usually not noticed until a lift kit has been installed which makes the difference more visible. Using a measuring tape, measure the front & rear (both sides) from the ground up to the center of the fender opening above the axle. Record this information below for future reference.

Driver Side Front: _____

Passenger Side Front: _____

Driver Side Rear: _____

Passenger Side Rear: _____

IMPORTANT NOTES:

- The draglink must be adjusted to center the steering wheel before the vehicle is driven. Failure to do so will cause computer errors, odd handling characteristics, & poor performance.
- Cam bolts are included with this lift system for front & rear axle adjustment. For vehicles with 5" or more inches of lift, a replacement rear driveshaft may be required. Please contact Skyjacker Customer Service for more information at 318-388-0816.
- If larger tires (10% more than the stock diameter) are installed, speedometer recalibration will be necessary. Contact your local Jeep dealer or an authorized dealer for details.
- After the installation of a suspension lift, a qualified alignment facility is required to re-align the vehicle to factory settings.

Kit Box Breakdown:

Part #: JK40BPH

<u>ITEM#</u>	<u>DESCRIPTION</u>	<u>QTY</u>
JK40FS	JK 4-5" FRONT COIL-SINGLE	2
JK40RS	JK 4" REAR COIL-SINGLE	2
CAM700	CAM BOLTS JK UPR RR/LWR FRT	2
JK40RBS-S	JK 4" REAR BUMP STOP BRKT	2
ABSS3040	BUMP STOP SPACER 4" TALL	2
JKFTB-B	JK 4" FRONT TRK BAR BRKT	1
JK24RTB-B	JK 2-4" REAR TRK BAR BRKT	1
SBE504	SWAY BAR LINK JEEP JK REAR	1
HB-JK40	HDWR BAG/ JK 4"	1
HB-JK4BL	HDWR BAG:JK 4" BRK LINE BRK	1
H7065	HYDRO SHOCK W/RED BOOT	2
H7067	HYDRO SHOCK W/RED BOOT	2
JKBRC15	JK RR TRK BAR BRACE DANA 44	1
JKBRC34	JK FRT TRK BAR BRACE D30&44	1
I-JK40B	INST SHEET: 4" JK W/O LINKS	1

Hardware Bag Breakdown:

HB-SBE504 HARDWARE BAG

<u>ITEM#</u>	<u>DESCRIPTION</u>	<u>QTY</u>
HG58125	HOURGLASS 5/8" X 1.25"	4
403712	ES22 SLEEVE/1.25" LONG	4
12X212BHCTB	1/2 2 1/2 BUTTON HEAD COARS	4
12SAEW	1/2 SAE WASHER	4
12USSW	1/2 USS WASHER	4
12CTN	1/2-13 COARSE N/I LOCK NUT	4

Hardware Bag Breakdown:**HB-JK40 HARDWARE BAG**

ITEM#	DESCRIPTION	QTY
14X80MMB	14MM X 80 METRIC BOLT/ 10.9	1
14MMN	14MM NYLON INSERT LOCK NUT	1
12X114FTB	1/2 X 1 1/4 FINE THD BOLT	1
12SAEW	1/2 SAE WASHER	1
12FTN	1/2-20 FINE N/I LOCK NUT	1
38X4BHB	3/8 X 4 BUTTON HEAD BOLT	2
38SAEW	3/8 SAE WASHER	2
38CTN	3/8-16 COARSE N/I LOCK NUT	2
516X1FTB	5/16 X 1 FINE THRD BOLT	4
516SAEW	5/16 SAE WASHER	8
516FTN	5/16" FINE THRD N/I LOCKNUT	4
716X1FTB	7/16 X 1 BOLT,FINE THD GRD8	1
716X212FTB	7/16 X 2 1/2 FINE THRD BOLT	2
716SAEW	7/16 SAE WASHER	5
716FTN	7/16-20 FINE N/I LOCK NUT	3
916X3FTB	9/16 X 3 FINE THREAD BOLT	1
916SAEW	9/16 SAE WASHERS	5
916FTN	9/16-18 NYLON INSERT LOCKNU	2
CS1625	CRUSH SLEEVE JKRTB	1
916X312FTB	9/16 X 3 1/2 FINE THRD BOLT	1

Hardware Bag Breakdown:**HB-JK4BL HARDWARE BAG**

ITEM#	DESCRIPTION	QTY
JKBE4D	BRAKE LINE BRACKET	2
516X1FTB	5/16 X 1 FINE THRD BOLT	2
516SAEW	5/16 SAE WASHER	4
516FTN	5/16" FINE THRD N/I LOCKNUT	2

Hardware Bag Breakdown:**HB-JKBRC15 HARDWARE BAG**

ITEM#	DESCRIPTION	QTY
516X1CTB	5/16 X 1 CRS THREAD BOLT	3
516XTFW	5/16" EXTRA THICK FLAT WASH	3
516LW	5/16" GRADE 8 LOCK WASHER	3

Hardware Bag Breakdown:

HB-JKBRC34 HARDWARE BAG

ITEM#	DESCRIPTION	QTY
516FTN	5/16" FINE THRD N/I LOCKNUT	3
516LW	5/16" GRADE 8 LOCK WASHER	3
516SAEW	5/16 SAE WASHER	9
516XTFW	5/16" EXTRA THICK FLAT WASH	3
516X1CTB	5/16 X 1 CRS THREAD BOLT	3
516X1FTB	5/16 X 1 FINE THRD BOLT	3
716FTN	7/16-20 FINE N/I LOCK NUT	1
716SAEW	7/16 SAE WASHER	2
716X1FTB	7/16 X 1 BOLT,FINE THD GRD8	1

Front Installation:

1. Park the vehicle on flat level ground & set the emergency brake.
2. Raise the front of the vehicle & support the frame rails using jack stands.
3. Remove the front tires/wheels.
4. Disconnect the OEM front sway bar end links using a 18mm socket.
Note: Save the OEM hardware. It will be re-used later for Step # 25 of this installation.
5. Disconnect the OEM front track bar using a 21mm socket. (See Photo # 1)
6. If installing a Skyjacker Steering Stabilizer (Part# 7003), Remove the OEM steering stabilizer using a 18mm socket. (See Photo # 2)
7. Disconnect & remove the OEM front shocks using a 18mm socket.
8. Remove the OEM front coils. (See Photo # 3)
9. Mark the location of the driveshaft & yoke, then remove.
10. Locate the new Skyjacker front bump stop spacers. Place the bump stop spacers on the center of the bump stop pad located on the front axle. Mark & drill using a 25/64" drill bit. (See Photo # 4)



Photo # 1



Photo # 2



Photo # 3



Photo # 4

11. Install the bump stop spacer & coil spring. Attach the bump stop spacer to the axle using the 3/8" x 4" button head bolt, washer, & nut. (See Photo # 5)
12. Locate the OEM front track bar mount. Place the new Skyjacker relocation bracket inside the OEM mount. Drill the outer OEM holes all the way through the rearward plate using a 7/16" drill bit. (See Photo # 6)
13. Attach the bracket at the outer two locations using the 7/16" x 2 1/2" fine thread bolts, washers, & nuts. Raise the differential in order to load the front coil springs & attach the track bar to the lower mount.
14. Re-Attach the front drive shaft.
15. Remove the three upper left differential cover bolts. (See Photo # 7)
16. Attach the new Skyjacker track bar differential bracket (D30 or D44) to the differential using the 5/16" x 1" bolts. **Note:** Do not tighten at this time. Install the new Skyjacker brace between the third member & track bar bracket. **Note:** Be sure to use the thick, gold plated 5/16" washer between the bracket & the differential cover. Use the 5/16" lock washer under the head of the bolt. (See Photo # 8) **Note:** Do not tighten at this time.
17. Attach the brace to the Skyjacker track bar bracket using the OEM 14mm bolt, washers, & nut. Attach the rear brace to the track bar bracket & clamp to the spring perch. **Note:** Be sure to use a washer under the head of the bolt & nut. Tighten at this time. (See Photo # 9)
18. Drill a 7/16" hole through the brace into the spring perch & install the 7/16" x 1" bolt, washer, & nut to the perch. Tighten at this time.
19. If installing a Skyjacker steering stabilizer (Part # 7003), install it at this time. (See Photo # 10)



Photo # 5



Photo # 6

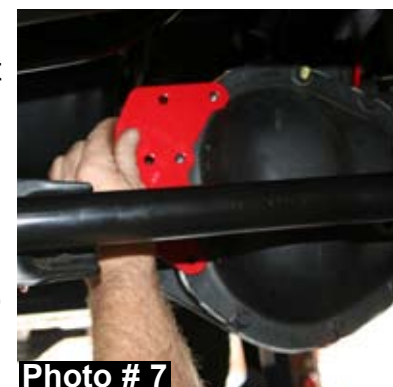


Photo # 7

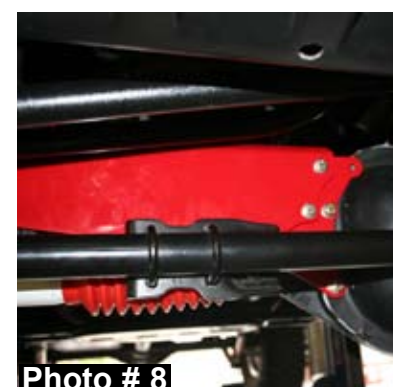


Photo # 8

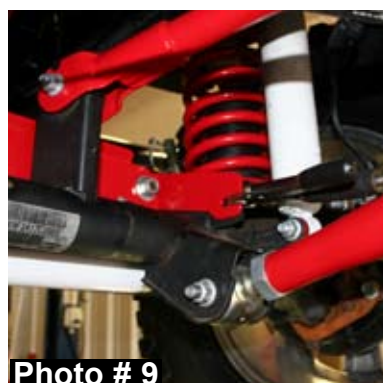


Photo # 9

I-JK40BP



Photo # 10

20. Install the new Skyjacker front shocks using the supplied hardware.
(See Photo # 11)

21. Install the front tires/wheels & lower the vehicle to the ground.

Rear Installation:

22. Raise the rear of the vehicle & properly support the frame rails using jack stands.

23. Remove the OEM rear shocks using a 16mm socket. (See Photo # 12)

24. Disconnect the OEM rear track bar from the axle using a 21mm socket. (See Photo # 13)

25. Disconnect the OEM rear sway bar end links using a 18mm socket. Relocate the OEM rear sway bar end links to the front of the vehicle & install using the OEM hardware saved from Step # 4.

26. Disconnect the ABS line from the frame & disconnect the brake line from the frame. (See Photo # 14)

27. Lower the differential & remove the OEM rear coil springs.

28. Place the new Skyjacker rear track bar relocation bracket over the OEM bracket on the axle. With the bracket seated flush, clamp the bracket in place, mark using a center punch, & drill the new center mounting holes using a 15/32" drill bit. (See Photo # 15)

29. Install the supplied 7/16" x 1" fine thread bolt, washer, & nut. (See Photo # 16)



30. It will be necessary to drill through the driver side bottom of the OEM bracket & through the new Skyjacker bracket. Drill using a 17/32" drill bit. Once drilled, install the supplied 1/2" x 1 1/4" fine thread bolt, washer, & nut. Install the 9/16" x 3 1/2" bolt, washers, & nut at the bottom location being sure to use the supplied crush sleeve. (See Arrow in Photo # 17)

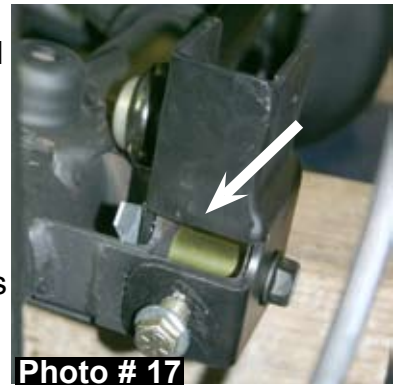


Photo # 17

31. Install the new Skyjacker track bar bracket brace at this time using it;s supplied instructions.

32. Install the new Skyjacker rear coil springs. **Note:** Be sure to re-use the upper OEM rubber isolator pad.

33. Attach the new Skyjacker rear bump stop spacers to the OEM location on the axle using the 5/16" x 1" fine thread bolts, washers, & nuts. (See Photo # 18) **Note:** Be sure to install the bump stop spacer so that the angled end is towards the rear of the vehicle.



Photo # 18

34. Raise the differential in order to load the rear coil springs & install the new Skyjacker sway bar end links using the supplied 5/8" hourglass bushings & steel sleeves. Attach using the 1/2" x 2 1/2" button head bolts & nuts. **Note:** If using an OEM wheel, the upper endlink bolt will need to be installed from the outside in for wheel clearance. Use the large USS washer under the head the bolts & the SAE washer under the nuts. (See Photo # 18)



Photo # 19

35. There are two brakeline extension brackets supplied. The flat bracket is for the passenger side while the offset bracket is for the driver side. Attach the supplied brackets to the frame using the OEM hardware. Attach the brakeline to the new Skyjacker bracket using the 5/16" x 1" fine thread bolt, washers, & nut. (See Photo # 19)

36. Install the new Skyjacker rear shocks. (See Photo # 20)



Photo # 20

37. Install the tires/wheels & lower the vehicle to the ground.

FINAL NOTES:

- After the installation is complete, double check that all nuts & bolts are tight. Refer to the following chart again for the proper torque specifications. (Do not retighten the nuts & bolts where thread lock compound was used.)
- With the vehicle placed on the ground, cycle the steering lock to lock & inspect the steering, suspension, brake lines, front & rear drivelines, fuel lines, & wiring harnesses for proper operation, tightness, & adequate clearance.
- Have the headlights readjusted to the proper settings.
- Have a qualified alignment center realign the front end to the factory specifications.
- Retorque all the bolts after the first 100 miles.

TORQUE SPECIFICATIONS					
<u>INCH SYSTEM</u>			<u>METRIC SYSTEM</u>		
Bolt Size	Grade 5	Grade 8	Bolt Size	Class 8.8	Class 10.9
5/16	15 FT LB	20 FT LB	6MM	5 FT LB	9 FT LB
3/8	30 FT LB	35 FT LB	8MM	18 FT LB	23 FT LB
7/16	45 FT LB	60 FT LB	10MM	32 FT LB	45 FT LB
1/2	65 FT LB	90 FT LB	12MM	55 FT LB	75 FT LB
9/16	95 FT LB	130 FT LB	14MM	85 FT LB	120 FT LB
5/8	135 FT LB	175 FT LB	16MM	130 FT LB	165 FT LB
3/4	185 FT LB	280 FT LB	18MM	170 FT LB	240 FT LB

- The above specifications are not to be used when the bolt is being installed with a bushing.

Seat Belts Save Lives, Please Wear Your Seat Belt.