



1907 Woodland Ave.
Coffeyville, KS 67337
Phone: (620) 251-9100
Fax: (620) 251-2622

INSTALLATION INSTRUCTIONS

MODEL NO. JAYJ150 ARMRESTS

FOR THE YJ MODEL JEEP

1. Remove the door closure strap by removing the two screws holding them in place.
2. Attach the armrest bracket (A) to the door, using (2) of the #10-24 x 3/4" button allen head screws (D) supplied. The armrest attaches to the door using the same holes that previously held the door closure strap.
3. Mount the polyurethane cushion (B) to the armrest bracket, using (2) of the #10-24 x 3/4" button allen head screws (D) supplied, adjusting the fore and aft position to suit your comfort.

*Note: To mount the armrests on some CJ models, you must enlarge the holes in the armrest bracket to 1/4" and mount the armrest bracket to the door using 1/4"-20 x 3/4" button allen head screws (not supplied).

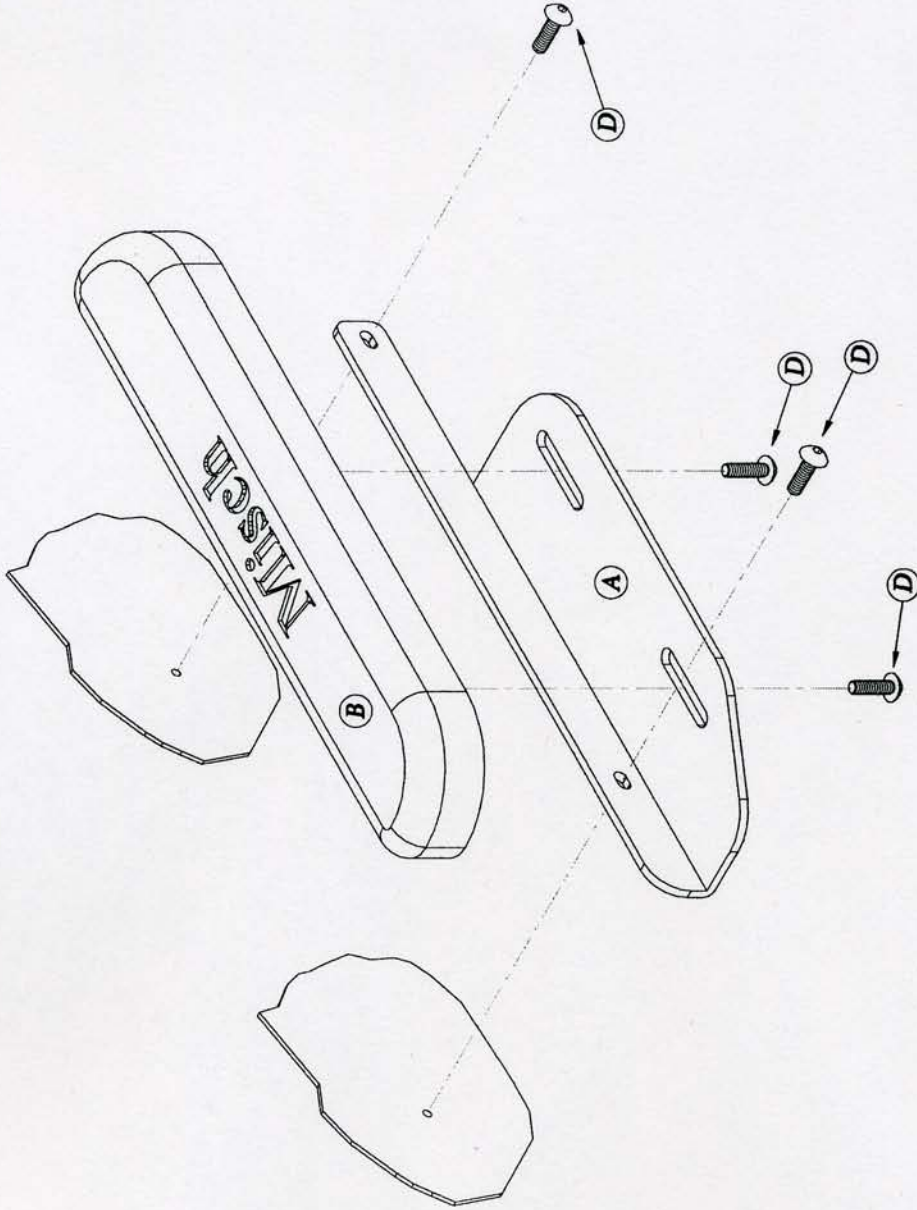


FIG. 1 YJ MODEL ARMREST INSTALLATION